

Operating instructions

Actuator IC 20



Contents

| | |
|---|-----------|
| Actuator IC 20 | 1 |
| Contents | 1 |
| Safety | 1 |
| Checking the usage | 2 |
| Intended use | 2 |
| Part designations | 2 |
| Type label | 2 |
| Combination of actuator with butterfly valve | 2 |
| Combination of actuator with linear flow control | 2 |
| Installation | 3 |
| Wiring | 3 |
| IC 20 | 4 |
| IC 20..E | 4 |
| Input signal | 5 |
| Commissioning | 5 |
| Manual mode facilitates setting | 5 |
| IC 20..E: adapting the adjustment angle to the input signal in the case of continuous control | 6 |
| Accessories | 7 |
| "Potentiometer for IC 20" installation set | 7 |
| Adapter set for butterfly valve DKL, DKG | 7 |
| "Single application" attachment set | 7 |
| Heat deflector | 7 |
| Maintenance | 7 |
| Assistance in the event of malfunction | 8 |
| Technical data | 9 |
| Logistics | 9 |
| Certification | 10 |
| Contact | 10 |

Safety

Please read and keep in a safe place



Please read through these instructions carefully before installing or operating. Following the installation, pass the instructions on to the operator. This unit must be installed and commissioned in accordance with the regulations and standards in force. These instructions can also be found at www.docuthek.com.

Explanation of symbols

■, **1**, **2**, **3**... = Action
 ▷ = Instruction

Liability

We will not be held liable for damage resulting from non-observance of the instructions and non-compliant use.

Safety instructions

Information that is relevant for safety is indicated in the instructions as follows:

DANGER

Indicates potentially fatal situations.

WARNING

Indicates possible danger to life and limb.

! CAUTION

Indicates possible material damage.

All interventions may only be carried out by qualified gas technicians. Electrical interventions may only be carried out by qualified electricians.

Conversion, spare parts

All technical changes are prohibited. Only use OEM spare parts.

Changes to edition 01.17

The following chapters have been changed:

- Installation
- Commissioning
- Technical data

Checking the usage

Intended use

Actuator IC 20

It is designed for all applications that require precise, controlled rotary movement between 0° and 90°. If the voltage is disconnected, the actuator stops at the current position.

The combination of actuator IC 20 and control element is designed to adjust volumes of gas and air on various appliances and flue gas lines.

IC 20 and butterfly valve BV.. (IB..) are designed for control ratios of up to 10:1 for gas, cold and hot air and flue gas.

IC 20 and linear flow control VFC (IFC) are designed for control ratios of up to 25:1 for gas and cold air.


This function is only guaranteed when used within the specified limits – see page 9 (Technical data). Any other use is considered as non-compliant.

Type code

| Code | Description |
|-------------------------|--|
| IC 20 | Actuator |
| | Running time [s]/Adjustment angle [°]: |
| -07 | 7.5/90 |
| -15 | 15/90 |
| -30 | 30/90 |
| -60 | 60/90 |
| | Mains voltage: |
| W | 230 V AC, 50/60 Hz |
| Q | 120 V AC, 50/60 Hz |
| | Torque: |
| 2 | 2.5 Nm |
| 3 | 3 Nm |
| E | Continuous control |
| T | Three-point step control |
| R10¹⁾ | Feedback potentiometer |

¹⁾ Optional for IC 20...T


Part designations

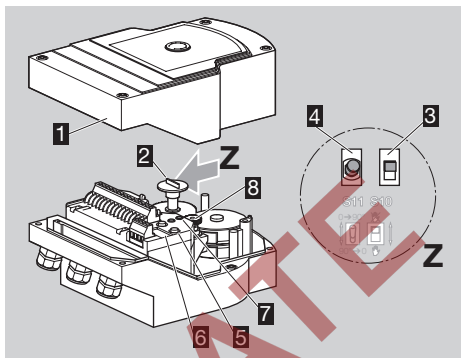

- 1** Housing cover
- 2** Position indicator
- 3** Slide switch (S10)
- 4** Toggle switch (S11)
- IC 20...E:
- 5** min/max buttons
- 6** DIP switch
- 7** Red and blue LEDs
- 8** Feedback potentiometer (optional)

Type label

Mains voltage, electrical power rating, enclosure, ambient temperature, torque and installation position – see type label.

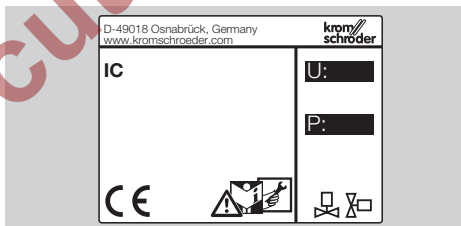

Combination of actuator with butterfly valve

| Type | IC 20 + butterfly valve BV.. |
|-------------|--|
| IBG | IC 20 + BVG (for gas) |
| IBGF | IC 20 + BVGF (for gas, clearance-free valve) |
| IBA | IC 20 + BVA (for air) |
| IBAF | IC 20 + BVAF (for air, clearance-free valve) |
| IBH | IC 20 + BVH (for hot air and flue gas) |

Combination of actuator with linear flow control


| Type | IC 20 + linear flow control |
|--------------|---|
| IFC 1 | IC 20 + linear flow control VFC, size 1 |
| IFC 3 | IC 20 + linear flow control VFC, size 3 |

Installation

! CAUTION

Please observe the following to ensure that the actuator is not damaged:

- Do not store or install the unit in the open air.
 - Do not insulate the actuator with thermal insulation.
 - Dropping the device can cause permanent damage. In this event, replace the entire device and associated modules before use.
- ▷ Installation in the vertical or horizontal position, not upside down.

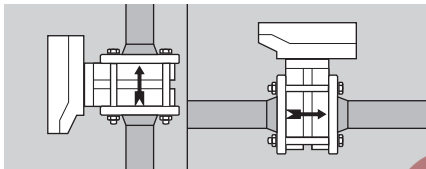


- ▷ For further information on assembly of the IC 20 with butterfly valve BV.. or linear flow control VFC, see enclosed operating instructions. Otherwise go to www.docuthek.com, Elster Thermal Solutions → Products → O3 Valves and butterfly valves → Butterfly valves BV.. or → Linear flow controls IFC, VFC.
- ▷ An adapter set is required for mounting onto butterfly valve DKL, DKG, see page 7 (Accessories).
- ▷ If the actuator is to be mounted onto control elements other than DKL, DKG, BV.. or VFC, the "Single application" attachment set is required, see page 7 (Accessories).

Wiring


⚠ WARNING

Electric shocks can be fatal!

- Before working on possible live components, ensure the unit is disconnected from the power supply.
 - It must be possible to isolate the actuator from the power supply. Provide a double pole switch.
- ▷ Install supply and signal lines separately.
- ▷ Conductors which have not been connected (spare conductors) must be insulated at their ends.
- ▷ Cables should be installed well away from high-voltage lines of other devices.
- ▷ Observe EMC Directive for installation of signal lines.
- ▷ Use cables with wire end ferrules.
- ▷ Cable cross-section: max. 2.5 mm².
- ▷ When operating two or more actuators in parallel, the three-point step controller (terminals 1 and 2) must be electrically isolated to avoid leakage currents. We recommend using relays.
- ▷ Interference suppression capacitors installed in the system must only be used in conjunction with a series resistor so as not to exceed the maximum current – see page 9 (Technical data).
- ▷ Running times are reduced by a factor of 0.83 at 60 Hz compared to 50 Hz.
- ▷ External devices can be activated or intermediate positions can be checked via two additional, floating, infinitely adjustable switches (cams S1 and S2).
- ▷ The input signals for the actuator can be set via DIP switches. DIP switch positions that are not indicated can be freely selected, see connection diagram, page 4 (IC 20..E).
- 1** Disconnect the system from the electrical power supply.
- 2** Shut off the gas supply.
- ▷ Before opening the unit, the fitter should ground himself.

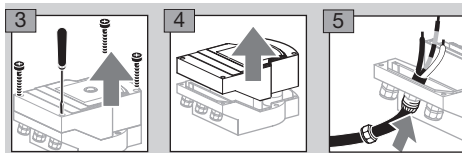

- 6** Wire as shown on the connection diagram, see pages 4 (IC 20) and 4 (IC 20..E).
- 7** Set switch S10 to Automatic mode.
- ▷ Voltage is applied to terminals 3 and 4.

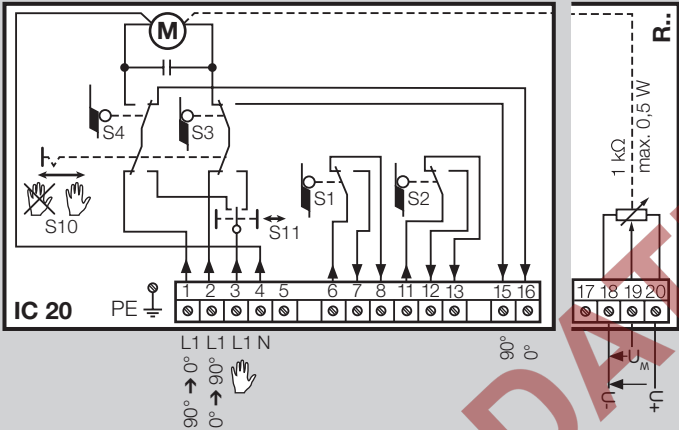


Three-point step control

- ▷ In the case of default setting "Closed":
The control element opens when voltage is applied to terminal 2.
The control element closes when voltage is applied to terminal 1.
- ▷ Terminals 6 to 13 must be operated with the same voltage potential.


Feedback

- ▷ An optional feedback potentiometer offers the option of monitoring the current position of the actuator IC 20, see page 7 (Accessories).
- ▷ The potentiometer must be utilized as a voltage divider. The change in position of the potentiometer wiper (which corresponds to the actuator position) can be measured as a changing voltage between U_- and U_M .

- ▷ Other circuit layouts produce measurement results that are inaccurate and do not remain stable over a long period of time or are non-reproducible. They also reduce the service life of the feedback potentiometer.
- ▷ The available range depends on the adjustment of switching cams S3 and S4.

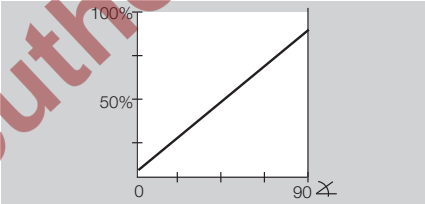

IC 20..E

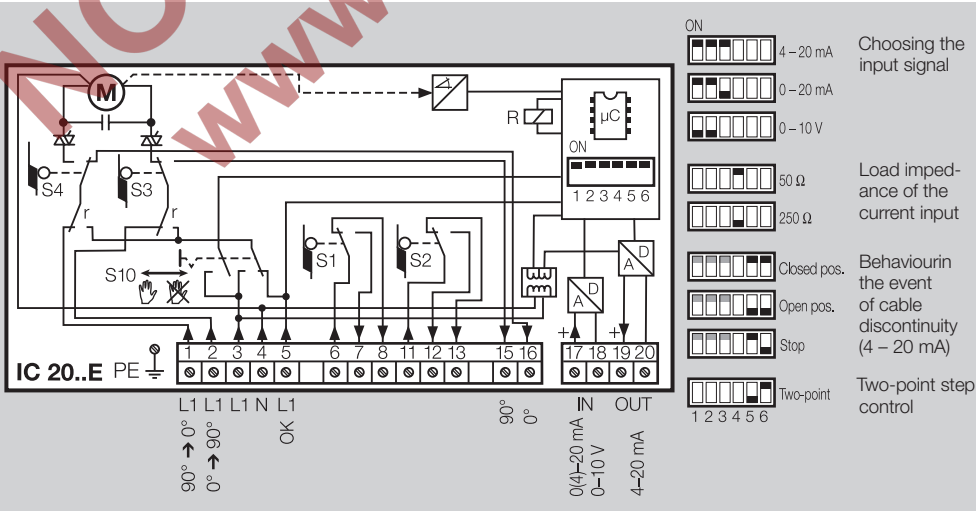


Three-point step control

- ▷ No voltage at terminal 5: three-point step control.
- ▷ Voltage must be applied to terminals 3 and 4 continuously.
- ▷ The low-fire rate (CLOSED) and the high-fire rate (OPEN) are controlled via terminals 1 and 2.

Two-point step control

- Connect bridge between terminals 1 and 3.

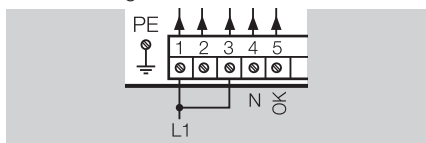

- Set the DIP switches to 2-point step control.
- ▷ When voltage is applied to terminal 5, the actuator opens.
When no voltage is applied to terminal 5, the actuator closes.
- ▷ Terminals 17 and 18 for continuous control are not required in the case of 2-point control.

Continuous control

- ▷ Voltage at terminal 5: continuous control.
- ▷ The actuator reacts to the setpoint specification (0 (4) – 20 mA, 0 – 10 V) via terminals 17 and 18.
- ▷ The continuous signal corresponds to the adjustment angle to be approached (e.g. with a 0 to 20 mA signal, 10 mA correspond to a valve angle of 45°).

Feedback

- ▷ Terminals 19 and 20: the IC 20..E offers the option of monitoring the current position of the actuator via the continuous 4 – 20 mA output signal.

Input signal

- ▷ The positioning control hysteresis can be adjusted on a potentiometer to suppress fluctuations or interference in the input signal.
- ▷ The hysteresis can be increased accordingly by turning the potentiometer clockwise.



Commissioning

! CAUTION

Please observe the following to ensure that the actuator and butterfly valve are not damaged:

- Adjusting cam S4 to an angle of less than 0° or cam S3 to an angle of over 90° can damage the actuator or butterfly valve.
- ▷ The maximum opening angle can be set using switching cam S3 and the minimum opening angle can be set using S4.
- ▷ Switching cams S1/S2 can be optionally adjusted.

! WARNING

Risk of electric shock due to live components and cables.


Manual mode facilitates setting

- ▷ The positions in the low-fire rate range can be precisely adjusted.

- 1 Set slide switch S10 to Manual mode. The blue LED lights up.



- 2 Voltage must be continuously applied to the actuator (terminals 3 and 4) to allow the control element to open.
- 3 Press the toggle switch S11 upwards.

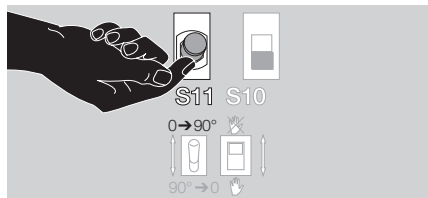


- ▷ The control element opens.
- 4 Press the toggle switch S11 downwards.
- ▷ The control element closes.

Setting the maximum opening angle using switching cam S3

- ▷ Only adjust S3 between 40° and 90°.
- ▷ Feedback signal to terminal 15.
- ▷ S3 can only be accessed when the control element is in an open position.
- 5 Move the actuator to its maximum opening angle.
- 6 Adjust the trip point of cam S3 using a screwdriver.

- ▷ Anti-clockwise = smaller opening angle.
Clockwise = greater opening angle.

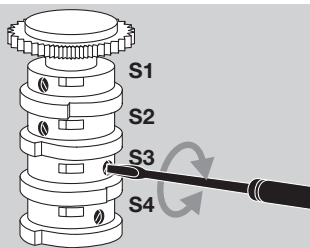

! CAUTION

Remove the screwdriver again before attempting to actuate the switching cams.

Setting the minimum opening angle using switching cam S4

- ▷ Only adjust S4 between 0° and 30°.
- ▷ Feedback signal to terminal 16.
- 7** Move the actuator to its minimum opening angle.
- 8** Adjust the trip point of cam S4 using a screwdriver.

Adjusting switching cams S1/S2


- 9** Adjust the trip point of cams S1/S2 using a screwdriver.
- ▷ The cams can be adjusted over the full angle of rotation (0 – 90°) of the actuator.

IC 20..E: adapting the adjustment angle to the input signal in the case of continuous control

- ▷ Maximum input signal $\hat{=}$ maximum angle, minimum input signal $\hat{=}$ minimum angle.
- ▷ The IC 20..E is in Manual mode and the blue LED is lit.

Automatic calibration

- ▷ The minimum and maximum opening angle corresponds to the setting of switching cams S3 and S4 in the case of automatic calibration.
- Activate Manual mode.
- Press the min and max buttons simultaneously (approx. 3 seconds) until the red (R) and blue (B) LEDs flash.

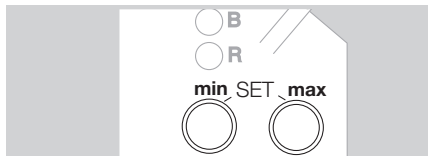

- ▷ Calibration is completed when the blue LED is lit continuously and the red LED goes out.

Manual calibration

- ▷ The minimum and maximum opening angle can be anywhere within the range set using switching cams S3 and S4.
- 1** Move the control element to the required min. position by pressing toggle switch S11.
- ▷ If the control element is already in the min. position, toggle switch S11 must still be pressed briefly.
- 2** Press the min button (approx. 3 seconds) until the blue LED goes out briefly (approx. 0.5 seconds).
- 3** Move the control element to the required max. position by pressing toggle switch S11.
- 4** Press the max button (approx. 3 seconds) until the blue LED goes out briefly (approx. 0.5 seconds).


Characteristic curve inversion

- ▷ The mA value for low fire is greater than the mA value for high fire (Min \geq Max).
- 1** Move the control element to the required min. position by pressing toggle switch S11.
- ▷ If the control element is already in the min. position, toggle switch S11 must still be pressed briefly.
- 2** Press the min button (approx. 3 seconds) until the blue LED goes out briefly (approx. 0.5 seconds).
- ▷ If the min. position is greater than or equal to the current max. position, press the min button until the red LED lights up briefly (approx. 0.5 seconds) and hold it in for approx. 3 seconds more until the blue LED goes out briefly (approx. 0.5 seconds).
- 3** Move the control element to the required max. position by pressing toggle switch S11.
- 4** Press the max button (approx. 3 seconds) until the blue LED goes out briefly (approx. 0.5 seconds).
- ▷ If the max. position is less than the current min. position, press the max button until the red LED lights up briefly (approx. 0.5 seconds) and hold it in for approx. 3 seconds more until the blue LED goes out briefly (approx. 0.5 seconds).

Accessories

"Potentiometer for IC 20" installation set

- ▷ Can only be retrofitted on IC 20..T.
- ▷ The power consumption of the potentiometer is max. 0.5 W.

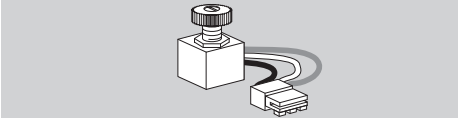

Order No.: 74921144


- ▷ Resistance value of the potentiometer – see type label.
- ▷ If the feedback potentiometer is to be retrofitted – see enclosed potentiometer operating instructions.

! CAUTION

Please observe the following to ensure that the actuator is not damaged:

- Adjusting cam S4 to an angle of less than 0° or cam S3 to an angle of over 90° will damage the potentiometer.
- ▷ The available range depends on the adjustment of switching cams S3 and S4.


Adapter set for butterfly valve DKL, DKG

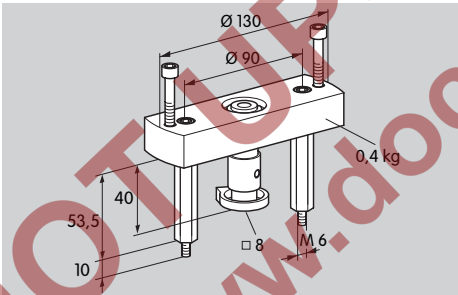

Order No.: 74921672

"Single application" attachment set


This attachment set is required if the actuator is mounted onto control elements other than DKL, DKG, BV.. or VFC.

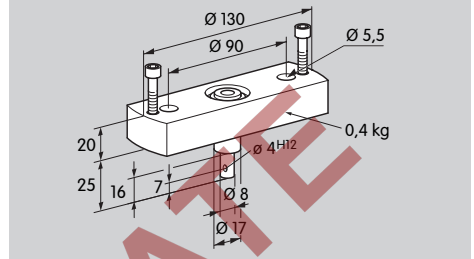

Order No.: 74921671

Heat deflector


Fit heat deflectors to the butterfly valve in order to protect the actuator from overheating if the medium temperature is > 250°C (482°F).

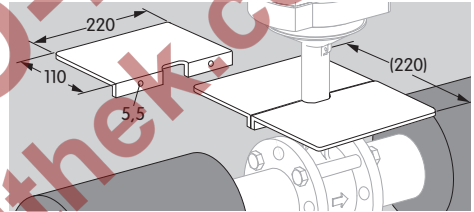

Order No.: 74921670

Fastening set for BVG, BVA, BVH

 For retrofitting the IC 20 to the butterfly valve.



Order No.: 74921082

Cable gland with pressure equalization element

To avoid the formation of condensation, the cable gland with pressure equalization element can be used instead of the standard M20 cable gland. The diaphragm in the gland is designed to ventilate the device, without allowing water to enter.

1 x cable gland, Order No.: 74924686

Maintenance

Actuators IC 20 suffer little wear and require little servicing. We recommend a function check once a year.

Assistance in the event of malfunction

WARNING

To avoid harm to persons and damage to the unit, please observe the following:

- Electric shocks can be fatal! Before working on possible live components, ensure the unit is disconnected from the power supply.
- Never remove the circuit board!
- Unauthorized repairs or incorrect electrical connections may cause the control element to open resulting in defects.

- ? Fault**
- ! Cause**
- Remedy**

? The control element does not move?

- ! The actuator is in Manual mode (IC 20..E: blue LED is lit).**
 - Set slide switch S10 to Automatic mode.
- ! No voltage at terminal 5.**
 - Check voltage at terminal 5.
- ! Motor coil or electronics defective as a result of excessive ambient temperature and/or excessive operating voltage.**
 - Check ambient temperature and/or operating voltage, see type label or page 9 (Technical data).
- ! Cam trip points maladjusted. S4 has been set to a wider angle than S3 (IC 20..E: red LED lights up, blue LED flashes once, if the unit has been automatically calibrated).**
 - Adjust the trip points, see page 5 (Commissioning). Then calibrate the IC 20..E.
- ! Electrical fault!**
 - Remember the minimum distance from ignition cables.

IC 20..E

- ! DIP switch position is incorrect.**
 - Set correct input signal using the DIP switches.
- ! The adjustment range has been set too small during manual calibration. The red LED flashes 3x.**
 - Increase adjustment range using min and max buttons, see page 5 (Commissioning).
- ! The input signal on the 4 – 20 mA setpoint input is < 3 mA. The red LED flashes once.**
 - Check input signal, remedy cable discontinuity.

? The motor and drive shaft of the actuator no longer function as required?

- ! The gear is defective.**
 - Remove the unit and return it to the manufacturer.
- ! Gear load is too great.**
 - Check the torque – see type label.

? Feedback potentiometer indicates incorrect values?

- ! Potentiometer is moving against its mechanical stop.**
 - Install the potentiometer correctly – see potentiometer operating instructions.
- ! Connections on the terminal strip mixed up.**
 - Check the contact assignment on the terminal strip.
- ! Incorrect potentiometer utilization.**
 - Utilize the potentiometer as a voltage divider.
- ! The windings in the potentiometer are defective.**
 - Replace the potentiometer – see potentiometer operating instructions.

? Control element moves constantly?

- ! IC 20..E: current signal fluctuates. The red LED flashes twice.**
 - Check control loop, if possible attenuate it.
 - Increase the hysteresis using the potentiometer, see page 5 (Input signal).
- ! IC 20: 3-point step signal fluctuates.**
 - Check/adjust the 3-point step controller.

? Is it not possible for the fault to be eliminated with the measures described above?

- ! IC 20..E: internal fault. The red LED lights up, the blue LED flashes twice.**
 - Remove the unit and return it to the manufacturer for inspection.

Technical data

Mains voltage:

120 V AC, -15/+10%, 50/60 Hz,

230 V AC, -15/+10%, 50/60 Hz.

Screw terminals using the elevator principles for cables up to 4 mm² (single core cables) and for cables up to 2.5 mm² with wire end ferrules.

Angle of rotation: 0 – 90°, adjustable.

Holding torque = torque.

| Type | Running time [s/90°] | | Torque [Nm] | |
|----------|-------------------------|-------|-------------|-------|
| | 50 Hz | 60 Hz | 50 Hz | 60 Hz |
| IC 20-07 | 7.5 | 6.25 | 2.5 | 2 |
| IC 20-15 | 15 | 12.5 | 3 | 3 |
| IC 20-30 | 30 | 25 | 3 | 3 |
| IC 20-60 | 60 | 50 | 3 | 3 |

Contact rating of the cam switches:

| Voltage | Min. current (resistive load) | Max. current (resistive load) |
|-------------------------|----------------------------------|----------------------------------|
| 24 – 230 V, 50/60 Hz | 1 mA | 2 A |
| 24 V DC | 1 mA | 100 mA |

Enclosure: IC 20 in conjunction with BVH or BVHS: IP 65,

IC 20 in conjunction with butterfly valves mounted to the IC 20 housing without a seal: IP 64.

Safety class: I.

Duty cycle: 100%.

Electrical connection:

Line entrance: 3 x M20 plastic cable glands.

Typical designed lifetime of the cam switches:

| Switching current | Switching cycles | |
|----------------------|--------------------|----------------------|
| | $\cos \varphi = 1$ | $\cos \varphi = 0.3$ |
| 1 mA | 1,000,000 | – |
| 22 mA ¹⁾ | – | 1,000,000 |
| 100 mA | 1,000,000 | – |
| 2 A | 100,000 | – |

¹⁾ Typical contactor application (230 V, 50/60 Hz, 22 mA, $\cos \varphi = 0.3$)

Ambient temperature:

-20 to +60°C, no condensation permitted.

Storage temperature: -20 to +40°C.

IC 20

Power consumption:

4.9 VA at 50 Hz, 5.8 VA at 60 Hz.

Resistance of the feedback potentiometer:

1 k Ω , max. 0.5 W.

IC 20..E

Power consumption:

terminals 1, 2 and 5:

4.9 VA at 50 Hz, 5.8 VA at 60 Hz,

terminal 3:

8.4 VA at 50 Hz, 9.5 VA at 60 Hz,

in total not exceeding:

8.4 VA at 50 Hz, 9.5 VA at 60 Hz.

Feedback output: galvanically isolated, max.

500 Ω load impedance.

The output is always active when mains voltage is applied to terminal 3.

Input: electrically isolated,

4 (0) – 20 mA; load impedance switchable between 50 Ω and 250 Ω .

0 – 10 V; 100 k Ω input resistance.

Logistics

Transport

Protect the unit from external forces (blows, shocks, vibration). On receipt of the product, check that the delivery is complete, see page 2 (Part designations). Report any transport damage immediately.

Storage

Store the product in a dry and clean place.

Storage temperature: see page 9 (Technical data).

Packaging

The packaging material is to be disposed of in accordance with local regulations.

Disposal

Components are to be disposed of separately in accordance with local regulations.

Certification

Declaration of conformity



We, the manufacturer, hereby declare that the product IC 20 complies with the requirements of the following Directives and Standards:

Directives:

- 2014/35/EU
- 2014/30/EU

Standards:

- DIN EN 60730-1
- Elster GmbH

Scan of the Declaration of conformity (D, GB) – see www.docuthek.com

Eurasian Customs Union



The product IC 20 (120 V AC, 230 V AC) meets the technical specifications of the Eurasian Customs Union.

Directive on the restriction of the use of hazardous substances (RoHS) in China

Scan of the Disclosure Table China RoHS2 – see certificates at www.docuthek.com

Contact

If you have any technical questions, please contact your local branch office/agent. The addresses are available on the Internet or from Elster GmbH.

We reserve the right to make technical modifications in the interests of progress.

Honeywell

**krom/
schroder**

Elster GmbH
Strotheweg 1, D-49504 Lotte (Büren)
Tel. +49 541 1214-0
Fax +49 541 1214-370

hts.lotte@honeywell.com, www.kromschroeder.com