

# Volume Conversion Device EK205

---

Operating Instructions

---

## Exclusion of liability

The information contained in this document is the property of Honeywell. The following information may only be used for its intended purpose. This document or its contents must not be copied, published or made accessible to a third party in full or in part without the express consent of Elster GmbH.

All specifications and descriptions in these operating instructions have been compiled following careful testing. In spite of this, errors cannot be completely ruled out. Honeywell can therefore not provide any guarantee that the content is complete or correct. The instructions must also not be seen as a warranty of product features. Furthermore, features are also described here which are only available as an option.

Honeywell cannot accept liability in any case for direct, special or consequential damage suffered by third parties. The information and specifications in this document may be amended without notice.

**In view of extended product liability, the listed data and material properties should only be regarded as reference values and must always be checked for each individual case and corrected if necessary. This is especially the case when safety aspects are affected.**

Further support is available from your local branch office or agent. The address is available on the Internet or from Honeywell.

This manual or parts of it may only be disclosed or copied with written consent from Honeywell.

If the product described here is improperly handled, repaired or changed by unauthorized persons or if spare parts other than those supplied by Honeywell are used, our warranty will be rendered void.

**All rights reserved.**

**Copyright © 2019 Elster GmbH, D-55252 Mainz-Kastel. All rights reserved.**

Mainz-Kastel, January 2019

## Contents

<b>1</b>	<b>General .....</b>	<b>7</b>
1.1	Information in these instructions .....	7
1.2	Warranty provisions .....	7
1.3	Customer service .....	7
1.3.1	Customer services and repairs.....	7
1.3.2	Electronics hotline .....	7
1.4	Explanation of symbols .....	8
1.4.1	Safety instructions.....	8
1.4.2	Tips and recommendations .....	8
1.5	Limitation of liability .....	9
1.6	Copyright .....	9
1.7	Scope of delivery .....	9
1.8	Replacement and accessory parts.....	10
1.9	Storage .....	11
<b>2</b>	<b>Safety.....</b>	<b>12</b>
2.1	General .....	12
2.2	Intended use .....	13
2.3	Staff .....	14
2.4	Personal protective equipment .....	15
2.5	Special hazards .....	15
2.6	Environmental protection .....	16
2.7	Operator liability .....	16
<b>3</b>	<b>Technical data.....</b>	<b>17</b>
3.1	General data .....	17
3.1.1	Dimensions .....	17
3.2	Power supply for EK205 without integrated mains adapter.....	18
3.2.1	Battery supply .....	18
3.2.2	External power supply for the basic device .....	18
3.3	Pressure sensor.....	18
3.3.1	CT30 Type Pressure Sensor.....	18
3.4	Temperature sensor.....	19
3.5	Digital inputs .....	19
3.5.1	Pulse and reporting inputs NF.....	19
3.6	Digital outputs .....	20
3.7	Optical serial interface .....	20
3.8	Electrical serial interface .....	21
3.8.1	RS485 type .....	21
3.9	Operating conditions .....	21
3.9.1	Environment .....	21
3.10	Identification.....	22
3.10.1	Type plate and EX identification.....	22
3.10.2	Device software identification.....	22
<b>4</b>	<b>Construction and function .....</b>	<b>23</b>
4.1	External view .....	23
4.2	Internal view.....	23

4.3	Brief description .....	24
4.4	Connections.....	24
<b>5</b>	<b>Installation, connection and commissioning .....</b>	<b>25</b>
5.1	Installation .....	25
5.1.1	Installation on a gas meter .....	25
5.1.2	Installation on a pipeline .....	25
5.1.3	Installation on a wall.....	26
5.1.4	Three-way cock.....	26
5.2	Connection .....	27
5.2.1	Connecting gas meters .....	28
5.2.2	Lead-sealing of the input terminals .....	28
5.2.3	Connect temperature sensor.....	29
5.2.4	Connect pressure line .....	30
5.2.5	Connecting the power supply.....	30
5.2.6	Connect outputs of the EK205 .....	31
5.3	Commissioning .....	32
5.3.1	Setting the operating parameters.....	32
5.3.2	Sealing.....	39
5.3.3	Close housing .....	40
5.3.4	Check installation and connection.....	40
5.3.5	Data transfer .....	40
<b>6</b>	<b>Operation .....</b>	<b>41</b>
6.1	Safety .....	41
6.1.1	Personal protective equipment.....	41
6.2	Operating staff .....	41
6.2.1	Trained individual.....	41
6.2.2	Specialist .....	41
6.2.3	Calibration officer .....	41
6.3	Basics.....	42
6.3.1	Display .....	42
6.3.2	Functions of the keys .....	43
6.3.3	Calling up the data, navigation in the display .....	44
6.3.4	Meaning of the status symbols.....	45
6.3.5	Error messages when entering values .....	46
6.3.6	Access rights.....	47
6.4	Content of the data register .....	49
6.4.1	Access rights.....	49
6.4.2	Main tab (main display).....	49
6.4.3	Customer tab .....	50
6.4.4	Admin tab (administrator).....	52
6.4.5	Serv. tab (service).....	53
6.4.6	Strg. tab (control) .....	53
<b>7</b>	<b>Maintenance.....</b>	<b>55</b>
7.1	Safety .....	55
7.1.1	Staff .....	56
7.1.2	Personal protective equipment.....	56
7.1.3	Environmental protection .....	56
7.2	Check and replace device batteries.....	57
7.2.1	Replace and connect device batteries .....	57
7.2.2	Enter battery capacity .....	59

7.2.3	Display remaining operating duration of the battery .....	60
<b>8</b>	<b>Faults.....</b>	<b>61</b>
8.1	Safety.....	61
8.1.1	Staff.....	61
8.1.2	Personal protective equipment.....	61
8.1.3	Improper fault rectification .....	62
8.1.4	Conduct in the event of faults.....	62
8.2	Fault and other status messages .....	62
<b>9</b>	<b>Appendix .....</b>	<b>67</b>
9.1	Replacement and accessory parts list .....	67
9.1.1	Fastening parts .....	67
9.1.2	Pressure connection .....	67
9.1.3	Temperature sensor bags .....	68
9.1.4	Small parts and other .....	68
9.1.5	Documentation .....	68
9.2	Conformity declarations .....	69
9.3	Design test certifications .....	70
9.3.1	ATEX - EC Type Examination Certificat.....	70
9.3.2	IECEx Certificate of Conformity.....	73

NOT UP-TO-DATE  
[www.docuthek.com](http://www.docuthek.com)

# 1 General

## 1.1 Information in these instructions

These instructions make it possible to work with the device in a safe and efficient manner.

Compliance with all of the safety and handling instructions specified in this operating manual is a prerequisite to working with the device in a safe manner and to use it properly. In addition, compliance is also necessary with the guidelines, standards, local accident prevention regulations and general safety regulations that apply for the device's area of application.

The instructions are a component of the product and must be kept in the immediate vicinity of the device, so that installation, operational, maintenance, and cleaning personnel may access them at any time. The graphical illustrations in these instructions serve to depict the facts that are being explained and are therefore not necessarily true to scale and may differ from the actual design of the device.



*The data and material properties that are presented below are guidelines. They must be reviewed for each individual case and corrected if necessary.*



*For the commissioning of the various communication and device applications, you can use the application manual of the EK205 at [www.elster-instromet.com/en](http://www.elster-instromet.com/en).*

## 1.2 Warranty provisions

You will find our current warranty conditions in the General Terms and Conditions, e.g. on the website <http://www.elster-instromet.com/en>

## 1.3 Customer service

Our customer service department is available for technical advice as well as repairs. Furthermore, our employees are always interested in new information and experiences that arise through use of the device and that may be valuable for improving our products.

### 1.3.1 Customer services and repairs

- Tel. +49 (0) 61 34/605-0
- Fax +49 (0) 61 34 605-390
- E-Mail: PMT-Reparatur\_Mainz-GE4N@honeywell.com

### 1.3.2 Electronics hotline



*You can also contact the electronics hotline in the event of faults.*

- Tel. +49 (0) 6134/605-123
- <http://www.elster-instromet.com/en>
- E-Mail: ElsterSupport@honeywell.com

## 1.4 Explanation of symbols

### 1.4.1 Safety instructions

Safety instructions are indicated in these instructions by symbols. The safety instructions are introduced by keywords that express the extent of the risk.

Safety instructions must be observed and treated diligently to avoid accidents, personal injury and material damage.



#### **DANGER!**

...indicates an immediately hazardous situation that leads to death or severe injury if it is not avoided.



#### **WARNING!**

...indicates an immediately hazardous situation that may lead to death or severe injury if it is not avoided.



#### **CAUTION!**

...indicates an immediately hazardous situation that may lead to minor or slight injury if it is not avoided.



... indicates hazards from electric current. In the event of non-observance of the safety instructions, there is a risk of severe or fatal injuries.



#### **CAUTION!**

...indicates an immediately hazardous situation that may lead to material damage if it is not avoided.

### 1.4.2 Tips and recommendations



... highlights useful tips and recommendations as well as information for ensuring efficient and smooth operations.

## 1.5 Limitation of liability

All specifications and instructions in these operating instructions were compiled under consideration of applicable standards and regulations, the current state of the art and the knowledge and experience we gained over the years. The manufacturer assumes no liability for loss due to:

- Non-compliance with these operating instructions
- Use of the device not in accordance with its intended use
- Use of the device by non-instructed personnel
- Unauthorized device modifications
- Technical changes
- Use of non-authorized replacement parts

The actual scope of delivery may differ from the explanations and descriptions included here in case of special device designs, the use of additional order options or because of the latest technical changes.

The obligations arranged in the delivery contract apply, as do the General Terms and Conditions, manufacturer delivery conditions and current legal regulations that apply at the time the contract was concluded.



*Read through these operating instructions carefully before beginning any work to and with the device, especially before commissioning the device! The manufacturer assumes no liability for loss and malfunctions that result from non-compliance with these instructions.*

We reserve the right to make technical changes within the scope of improving performance characteristics and continuous development of the device.

## 1.6 Copyright

These instructions are copyright-protected and intended for internal purposes only. Handover to third parties, copies of any form, including extracts, as well as utilization and/or notification of the content without written approval of the manufacturer is not permitted, except for internal purposes. Violations give rise to compensation. Further claims remain reserved.

## 1.7 Scope of delivery

The scope of delivery of the EK205 includes:

- Electronic Volume Conversion Device EK205
- Dispatch breakdown
- Interpretation data sheet
- Instructions
- Accessories bag

## 1.8 Replacement and accessory parts



### **WARNING!**

#### **Incorrect replacement parts and accessories are a safety risk!**

Incorrect or defective replacement parts and accessories may detract from safety and lead to damage, malfunction, or total device failure.

Therefore:

- Use only original replacement parts and accessories from the manufacturer.
- Always contact the manufacturer if you are in doubt.

The replacement parts and accessories list can be found in the appendix. Replacement parts and accessories can be ordered from a contract dealership or directly from our customer service.

The accessories of the EK205 also include the free enSuite program, available at [www.elster-instromet.com](http://www.elster-instromet.com). With them, you can program the Volume Conversion Device EK205 via its data interfaces in order to carry out further applications.

The EK205 is available in numerous equipment variants.

Details can be found at [www.elster-instromet.com](http://www.elster-instromet.com) as well as in the chapter Installation, connection and commissioning.

## 1.9 Storage



### CAUTION!

**Reduced performance after exceeding or falling below the valid temperature range of the batteries.**

Exceeding or falling below the valid temperature range can reduce the performance of the batteries when storing the device.

Therefore:

- For longer-term storage, ensure that the valid temperature range of the built-in batteries between -25 °C and +55 °C is not exceeded or fallen below.



### CAUTION!

**Material damage from formation of condensation!**

Storing the device can lead to the formation of condensation resulting from variations in temperature. This may result in the device malfunctioning at a later time.

Therefore:

- After the device has been stored or transported in cold weather or if it has been subject to extreme variations in temperature, bring it slowly to room temperature before it is commissioned.
- The device must undergo a waiting period of at least 12 hours before it is put into operation if condensation formed during storage.



If the power supply of the device is interrupted during storage from clamping the batteries, the time and date need to be reset.

The following regulations apply for storage:

- Relative humidity may not exceed 93%.
- Do not store the packaging units outdoors.
- The storage temperature may not fall below -25°C and exceed +55°C.
- Avoid mechanical vibrations during storage.

## 2 Safety

This section provides an overview of all key safety aspects for optimal protection of the staff as well as for safe and fault-free operation.

Non-observance of these operating and safety instructions may result in considerable hazards.

### 2.1 General

The EK205 is an intrinsically safe device and is suitable for operation within the zones at risk of gas explosion 0, 1 or 2 for gases of temperature class T4.

Check for use in zones 0, 1 or 2 in accordance with the currently applicable rules of the art: see chapter 9.3: EC type examination certificate no. LCIE 16 ATEX 3007 X and no. IECEx LCIE 16.0003X<sup>1</sup>



#### **DANGER!**

##### **Risk of explosion by connection to non-intrinsically-safe and associated equipment.**

When operating the EK205 in an area at risk of explosion (zones 0, 1 or 2) and connecting devices without certification as an "associated piece of equipment", there is a risk of explosion.

Therefore:

- When used in an area at risk of explosion, connect the EK205 to certified, associated pieces of equipment only in accordance with the valid rules of the art stated in the design test certificates.
- Connect the EK205 only to intrinsically safe pieces of equipment whose electric data correspond to the requirements stated in the design test certificates of the EK205 (see chapter 9.3).



#### **DANGER!**

##### **Risk of explosion from use of wrong batteries.**

Use only batteries stated in the design test certificates of the EK205 (see chapter 9.3). Order number, see section 9.1.4.



*During connection and operation of the EK205 in areas at risk of gas explosion, observe the associated norms:*

*DIN EN 60079-0*

*The device may only be used in an area at risk of gas explosion if the installation is carried out in accordance with the general requirements of DIN EN 60079-0 and the operating conditions (see chapter Technical data) and connection conditions (see chapter Installation, connection and commissioning) are observed.*

<sup>1</sup> Not available for all device types.

The device can be hazardous if it is used by staff not trained correctly in an improper or unintended manner.

- Anyone appointed to perform work to or with the device must read and understand these operating instructions before beginning work on the device. This also applies if the individuals concerned have already worked with such a device or a similar one, or were instructed by the manufacturer.
- Knowledge of the content is one of the requirements of protecting staff from hazards and avoiding faults and therefore operating the device in a safe and fault-free manner.
- In order to avoid risks and to ensure that the device performs in an optimal manner, no changes or modifications that were not expressly authorized by the manufacturer may be performed to the device.
- Always keep all operating instructions on the device in easily legible condition. Renew damaged or illegible instructions.
- Observe settings values or value ranges stated in the instructions.

## 2.2 Intended use

The device is designed and constructed exclusively for its intended use as described here.

The Volume Conversion Device EK205 serves to convert a gas volume of a gas line in basic condition measured by a meter in measurement conditions as well as to assign the volumes measured to tariffs. In addition, using the device, further parameters can be measured, recorded and monitored depending on the configuration set by the user.

Compliance with all the specifications in these operating instructions also falls under the device's intended use. Any use of the device that goes beyond or deviates from its intended use is considered a misuse of the device, and may lead to hazardous situations. Claims of any kind due to loss resulting from non-intended use of the device are excluded.



### **WARNING!**

#### **Hazard from incorrect use!**

Incorrect use of the device may result in hazardous situations.

Therefore:

- Use the device only as intended.
- Do not use the device to control the gas flow or other parameters influencing the gas volume within the framework of the overall system.

## 2.3 Staff



### **WARNING!**

#### **Risk of injury in the event of insufficient qualification!**

Improper use may result in considerable personal injury and material damage.

Therefore:

- Have all activities carried out by qualified staff only.

The following qualifications for different areas of activity are listed below in the instructions:

#### ■ **Instructed staff**

was instructed by the plant operator in an informational session on the tasks assigned to him or her, and on possible hazards in case of improper behaviour.

#### ■ **Specialist staff**

has the ability, because of his or her technical training, knowledge and experience, as well as his or her knowledge of the relevant regulations, to carry out the work to the device assigned to him or her, and to recognize and avoid possible hazards on his or her own.

#### ■ **Gas specialist**

has the ability, because of his or her technical training, knowledge and experience, as well as his or her knowledge of the relevant standards and regulations, to carry out work to gas systems, and to recognize possible hazards on his or her own. A gas specialist receives training for the specific location in which he or she works, and is acquainted with the relevant standards and regulations.

#### ■ **Calibration officer**

has the ability, because of his or her technical training, knowledge and experience, as well as his or her knowledge of the relevant standards and regulations, to carry out calibration-protected work to gas systems. The calibration officer is trained to work with calibration-protected devices and systems, and is acquainted with the relevant standards and regulations that apply.

#### ■ **Electrical expert**

has the ability, because of his or her technical training, knowledge and experience, as well as his or her knowledge of the relevant standards and regulations, to carry out work to electrical systems, and to recognize and avoid possible hazards on his or her own. A qualified electrician receives training for the specific location in which he/she works, and is acquainted with the relevant standards and regulations.



### **WARNING!**

#### **Risk for unauthorized persons!**

Unauthorized persons who do not fulfil the requirements described do not know the hazards in the work area.

Therefore:

- Keep unauthorized persons away.
- In the event of doubt, speak to people and direct them out of the working area.
- Interrupt the work as long as unauthorized persons are in the working area.

Only persons are permitted as staff from whom it can be expected that they will perform their work reliably. Persons whose reactivity is influenced, e.g. from drugs, alcohol or medication, are not permitted.

- When selecting personnel to operate the device, make sure you comply with the specific regulations of the overall gas system that concern age and occupation.

## 2.4 Personal protective equipment

When working on the device within a gas system, wearing personal protective equipment is required to minimize health hazards.

- During the activity on the device, always wear the protective equipment required within the relevant system.
- Always observe the notes on the personal protective equipment provided in the working area.

## 2.5 Special hazards

The risks arising on the basis of the risk assessment are specified below. Observe the safety and warning instructions stated here in the further chapters to reduce health hazards and avoid dangerous situations.



### **WARNING!**

#### **Risk of injury when handling batteries incorrectly!**

Batteries need to be treated with special care.

Therefore:

- Do not throw batteries in the fire or expose them to high temperatures. There is a risk of explosion.
- Do not charge batteries. There is a risk of explosion.
- Liquid being released in the event of incorrect use may result in skin inflammations. Avoid contact with the liquid. Rinse the liquid with lots of water in the event of contact. If the liquid enters the eyes, rinse the eyes for 10 mins with water and see a doctor immediately.



### **WARNING!**

#### **Fire hazard from easily flammable substances!**

Easily flammable substances, liquids or gases can ignite and cause severe to fatal injuries.

Therefore:

- Do not smoke inside the hazardous area and in the near proximity. Do not handle open flames or sources of ignition.
- Keep a fire extinguisher ready.
- Report suspicious substances, liquids or gases to the person in charge immediately.
- Suspend work immediately in the event of fire. Leave the hazardous area until the all-clear has been given.

## 2.6 Environmental protection



### CAUTION!

#### Substances harmful to the environment!

When handling substances harmful to the environment, in particular in the event of incorrect disposal, severe damage may arise for the environment.

Therefore:

- Observe the below notes at all times.
- Take suitable measures immediately if substances harmful to the environment enter the environment by mistake. In the event of doubt, inform the municipal authorities in charge of the damage.

The following substances harmful to the environment are used:

#### ■ Batteries

Batteries contain poisonous heavy metals. They are subject to special waste treatment and need to be disposed of at the municipal collection points or by a specialist company.

## 2.7 Operator liability

The device is used in industrial applications. The device operator is therefore subject to legal obligations of occupational health and safety.

In addition to the safety instructions in these operating instructions, current regulations of safety, accident prevention and environmental protection must be observed for the device area of application. The following items especially apply:

- The operator must ensure compliance with the current regulations of safety, accident prevention and environmental protection that apply for the overall system in which the device is integrated.
- The operator must keep himself/herself informed of the applicable occupational health and safety regulations, and determine, over the course of a risk assessment, the additional risks that arise from the specific working conditions when the device is being used. The operator must include these items in the form of operating instructions for the device.
- The operator must review, over the entire operational life of the device, whether the operating instructions prepared by him or her correspond to the current status of the bodies of regulations and revise the instructions if necessary.
- The operator must definitively regulate and establish the responsibilities for device assembly, connection, commissioning, operation and maintenance.
- The operator must ensure that all employees who work with the device have read and understood these operating instructions. In addition, the operator must train these personnel at regular intervals and inform them of the risks involved with the device.
- The operator of the overall system in which the device is integrated must provide personnel with the required protective equipment.

In addition, the operator is responsible for ensuring the device is always in technically perfect condition. The following items therefore apply:


- The operator must ensure that the installation and maintenance work described in these operating instructions are performed properly.
- The operator must have all safety installations checked regularly to ensure they function correctly and are complete.

### 3 Technical data

#### 3.1 General data

Information	Value	Unit
Width (incl. hinges)	170	mm
Height (incl. cable screw connections)	180	mm
Depth	90	mm
Permissible ambient temperature range	-25 – +55	°C
Permissible gas temperature range	-30 – +60	°C

##### 3.1.1 Dimensions

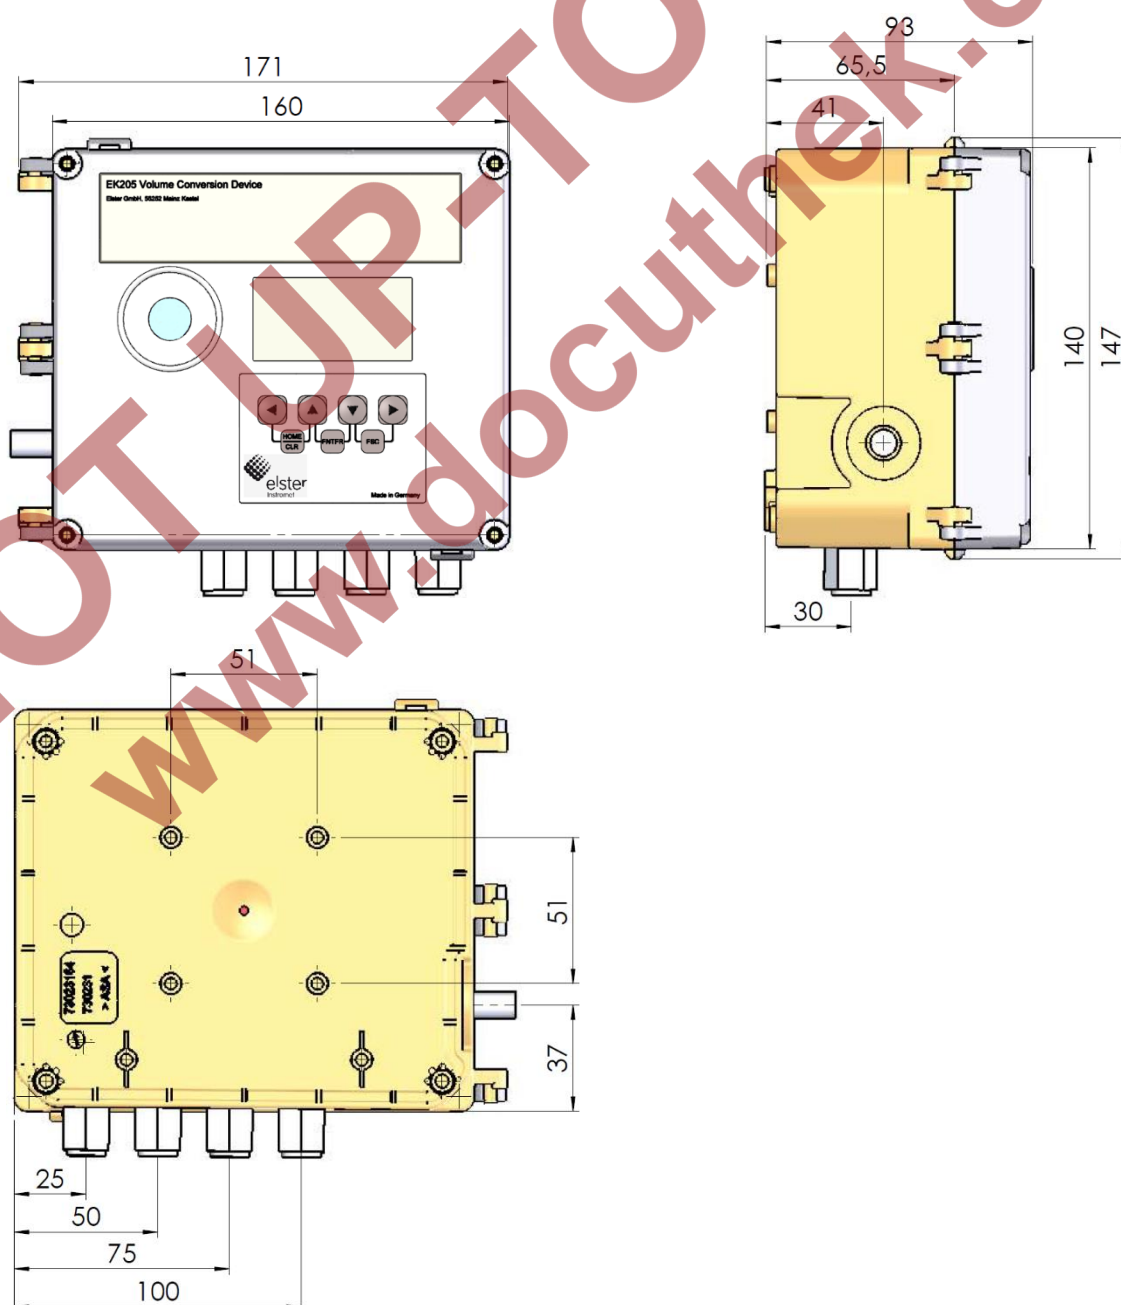

## 3.2 Power supply for EK205 without integrated mains adapter

### 3.2.1 Battery supply

Information	Value	Unit
Voltage	3.6	V
General nominal capacity	16.5	Ah
Usable capacity	13.0	Ah
Minimally required number of batteries	1	Unit
Minimal operating duration (in standard operation mode)	5	Years

The **standard operation mode** is defined as follows:

Information	Value
Measurement cycle	30 seconds
Mode input 1	Pulse input
Display active	60 minutes per month
Interface active	30 minutes per month
Ambient temperature	-10 – +50°C

### 3.2.2 External power supply for the basic device

Data	Value	Unit
Supply voltage	6.0 ...9.0	VDC
Supply current, maximum	60	mA

## 3.3 Pressure sensor

### 3.3.1 CT30 Type Pressure Sensor

Information	Value	Unit
External thread	M12 x 1.5	
Usable thread length	About 10	mm

#### 3.3.1.1 Absolute pressure ranges

Measuring range	Overload capacity
0.8 – 5 bar abs.	25 bar abs.
2.0 – 10 bar abs.	40 bar abs.
1.0 – 16 bar abs.	40 bar abs.



The pressure sensor is available as an internally completed variant. You can find details at [www.elster-instromet.com](http://www.elster-instromet.com) or see chapter Installation, connection and commissioning.



Not applicable when used as a Temperature Conversion Device.

### 3.4 Temperature sensor

Information	Value	Unit
Measuring range	-30 – +60	°C
Measurement uncertainty	max. $\pm 0.1$	%
Installation length	50	mm

### 3.5 Digital inputs

#### 3.5.1 Pulse and reporting inputs NF

The maximum meter frequency of the digital inputs can be set with the enSuite software. The thresholds stated here for frequency and duration apply only if the so-called software debouncing is deactivated.

Ex works, the software debouncing is activated to suppress fault pulses and so that safe counting is limited to 2 Hz.



If the software debouncing is set to a higher frequency than 2 Hz, miscounting from electromagnetic faults may arise under certain circumstances.

Information		Value		Unit
No-load voltage $U_0$			2.0	V
Internal resistance $R_i$		About	500	k $\Omega$
Short-circuit current $I_k$		About	4	$\mu$ A
Switchpoint "on":	▪ Resistance $R_e$	max.	300	k $\Omega$
	▪ Voltage $U_e$	max.	0.8	V
Switchpoint "off":	▪ Resistance $R_a$	min.	5	M $\Omega$
	▪ Voltage $U_a$	min.	1.8	V
Pulse duration $t_e$		min.	62.5	ms
Break duration $t_a$		min.	62.5	ms
Meter frequency $f$		max.	10	Hz
Cable length		max.	10	m

### 3.6 Digital outputs

The digital outputs DA1 and DA2 can be set exclusively as low-frequency pulse or report outputs.

Information	Value		Unit
Switching voltage	max.	30	V DC
Switching current	max.	100	mA DC
Voltage drop	max.	1	V
Remaining current	max.	0.001	mA
Pulse duration	min.	125	ms
Break duration	min.	125	ms
Output frequency	max.	4	Hz
Cable length	max.	10	m

### 3.7 Optical serial interface

Information	Value	Unit
Baud rate	9600	Bd
Format	1 start, 1 parity, 1 stop bit	



*The baud rate of the serial optical interface is adjustable to 19200 Bd. However, the function with this baud rate depends i.a. also from the connected cable and therefore can not be guaranteed.*

### 3.8 Electrical serial interface

Information	Value
Adjustable types	RS232 or RS485
Cable length	max. 10 m

#### 3.8.1 RS485 type

Parameter	Value
Operating types	RS485 2-wire (semi-duplex) RS485 4-wire (full-duplex)
Scheduling	No load resistor usable in the connected bus participants
Maximum data transmission rate	19,200 baud
Number of bus participants	Drive performance at the outlet: max. 16 unit loads <sup>2</sup>  Received power at the input <sup>3</sup> : - 6 unit loads (RS485, not electr. insulated) - 3 unit loads (RS485, electr. separated)
Cable length	max. 10 m

### 3.9 Operating conditions

#### 3.9.1 Environment

Information	Value	Unit
Temperature range	-25 – +55	°C
Relative humidity, maximum	93	%
Humidity conditions acc. EN12405-1	condensation	
Point of use acc. EN12405-1	open	
Mechanical ambient conditions acc. EN12405-1	M2	
Electromagnetic ambient conditions acc. EN12405-1	E2	

<sup>2</sup> Unit load: Standard RS485 receiver with an input resistance = 12 kOhm


<sup>3</sup> Details on the connection of the RS485 interface, see application manual

### 3.10 Identification

The EK205 is approved as a volume corrector as per the Measuring Instruments Directive (MID). The identification of the EK205 is carried out on the front side (see chapter Structure and function).

#### 3.10.1 Type plate<sup>4</sup> and EX identification

The type identification of the EK205, which relates to its function as Volume Conversion Device, contains the following information:

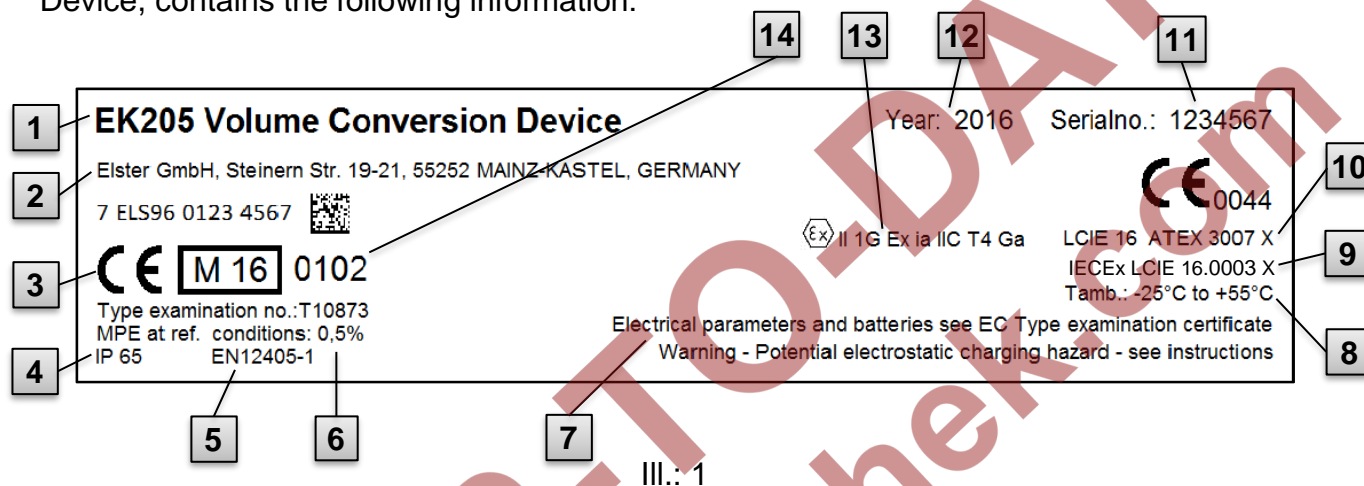

- |                             |  |
|-----------------------------|--|
| 1 Type designation          | 8 Ambient temperature range                                |
| 2 Manufacturer and address  | 9 IECEx - EC type examination certificate no. <sup>5</sup> |
| 3 CE marking                | 10 ATEX - EC type examination certificate no.              |
| 4 IP protection class data  | 11 Serial number   |
| 5 Reference to EN 12405-1   | 12 Year of construction                                    |
| 6 Measurement accuracy data | 13 Ex marking  |
| 7 Notices                   | 14 Metrology marking                                       |

#### 3.10.2 Device software identification

- Move the cursor with the arrow keys to the Serv. tab and via the following path to the values Vers (device software version) or Chk (checksum):

*Serv. → Identification → volume converter → Vers or Chk*


- The checksum Chk can be recalculated for verification purposes by pressing the ENTER button.

<sup>4</sup> Depending on the device design or country of destination, the type plate may contain other information.

<sup>5</sup> Not available for all device types.


## 4 Construction and function

### 4.1 External view

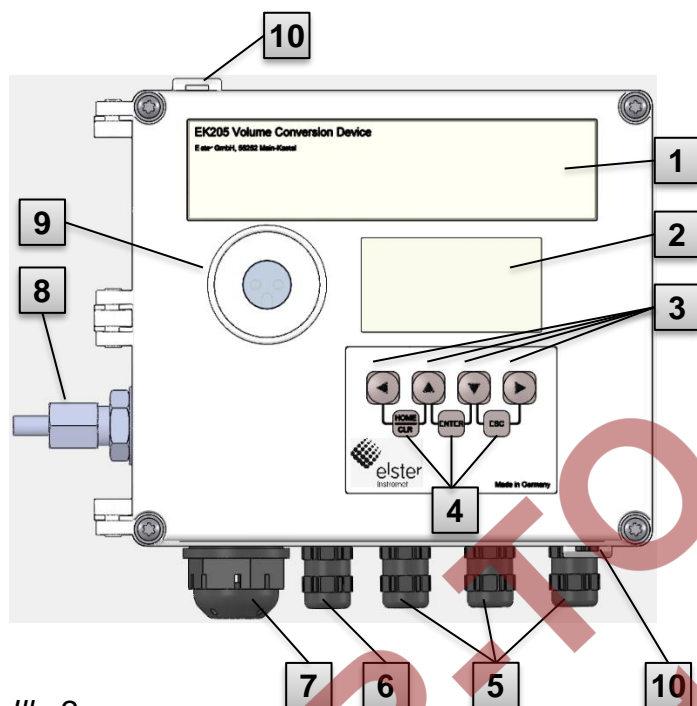

- 1 Type plate
- 2 Display
- 3 Arrow keys ▲, ▼, ►, ◀
- 4 Description of the key combinations
- 5 Cable bushings for the connection of further components
- 6 Cable bushing
- 7 Temperature sensor
- 7 Outdoor plug (option)
- 8 Pressure sensor<sup>6</sup>
- 9 Optical interface
- 10 Security bolts

### 4.2 Internal view

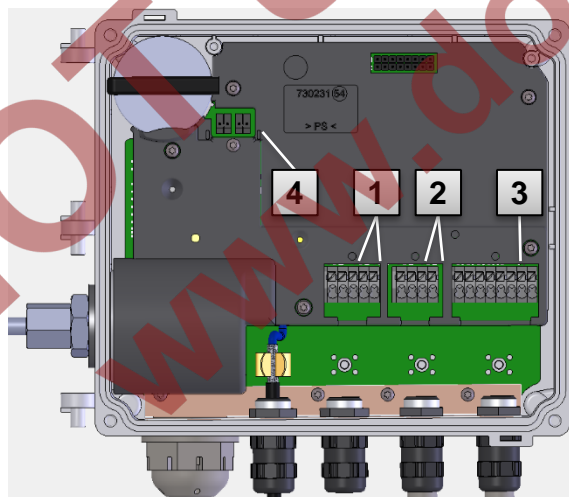

- 1 Connections of the meter and reporting inputs DE1 and DE2
- 2 Connections of the pulse and reporting outputs DA1 and DA2
- 3 Connections of the serial interface
- 4 Connections of the battery

<sup>6</sup> Not applicable when used as a Temperature Conversion Device.

### 4.3 Brief description

The volume converter EK205 is an explosion-protected, electronic device that calculates from a volume of a gas determined by an external meter in operating mode the volume in normal mode and therefore the energy share of the relevant gas volume.

In addition, using the registration function, the reporting inputs / outputs, the serial and optical data interfaces of the device, the gas load of a line can be monitored, registered and passed on.

The recording of the status parameters required for this is carried out via an internally connected pressure sensor and a temperature sensor. When using the EK205 as a Temperature Conversion Device, the momentary values of temperature are measured and the pressure is set as a constant. As an operating element of the EK205, an alphanumeric display and a keyboard on the front side of the device are available.

### 4.4 Connections

The Volume Conversion Device EK205 has connection options for:

- Two batteries

To monitor and register the calculated data and to pass on the data and program its functions, the following are available:

- 2 meter and reporting inputs DE1, DE2
- 2 pulse and reporting outputs DA1, DA2
- Serial data interface
- Optical data interface



*Details on the connection options of the EK205 and the deliverable equipment variants can be found under chapter Technical data and under chapter Installation, connection and commissioning.*

## 5 Installation, connection and commissioning

### 5.1 Installation



*The EK205 can be installed either on the gas meter, on the pipeline or on a wall.*




*In the event of issues during installation, e.g. when selecting the suitable installation accessories, please contact our customer service (see chapter General).*

#### 5.1.1 Installation on a gas meter



*Install the EK205 on a gas meter using a mounting bracket (see appendix) as well as suitable cylinder screws and square nuts.*

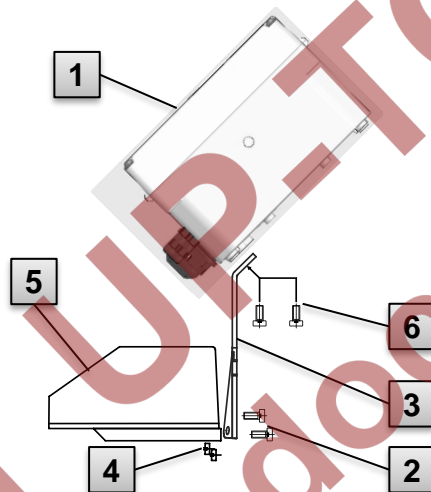


1. Using two self-cutting screws (6), install the mounting bracket (3) on the EK205 (1)
2. Tighten the self-cutting screws such that the angle is tight.
3. Using two M5 square nuts (4) and two M5 x 10 mm cylinder screws (2), install the mounting bracket on the rear of the meter head (5).
4. Tighten the cylinder screws such that the device sits tight and cannot fall down.

Ill.: 4

#### 5.1.2 Installation on a pipeline



*Using pipe installation aids (see appendix) with suitable cable ties, install the EK205 on a pipeline.*

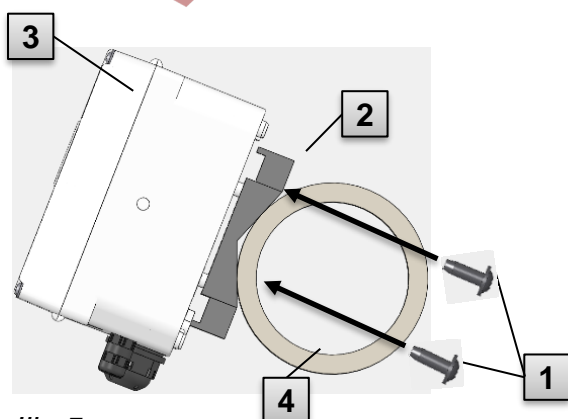


Ill.: 5

1. Using the four self-cutting screws provided (1), install the pipeline installation aid (2) on the rear of the EK205 (3).
2. Tighten the cylinder screws such that the installation aid sits tight.
3. Fasten the EK205 with installed pipeline installation aid (2 and 3) with the help of cable ties on the pipeline (4).
4. Install the device such that it sits tight and cannot fall down.

### 5.1.3 Installation on a wall



Using the wall mounting feet (see appendix), install the EK205 on the wall.

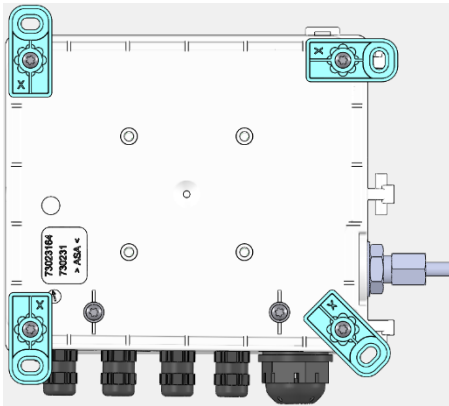


III.: 6

1. Using the four self-cutting screws provided on the rear of the EK205, install the wall mounting feet. The fastening feet can be fastened in different positions.
2. Drill holes in the wall in accordance with the position of the installed installation feet. Select the wall plugs suitable for the size of the screws and insert them in the borings of the wall.
3. Use four screws for fastening the EK205, e.g. 5 x 35 mm.

### 5.1.4 Three-way cock<sup>7</sup>

When installing the pressure sensor, a three-way cock is usually installed in order to carry out an inspection of the pressure sensor in built-in condition or for the replacement of deficient sensors without deactivating the overall gas line. The three-way cock available from Elster has the following structure:

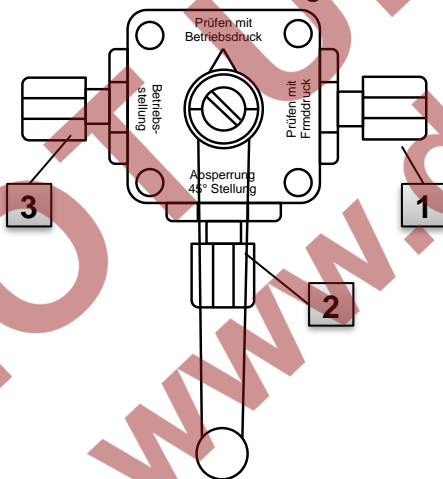

III.: 7

- 1: From the meter: From the pressure connection of the gas meter  
For bellows-type gas flow meters, this is carried out on the input side of the meter
- 2: For the MU: To connect the gas sensor of the Volume Conversion Device
- 3: Test connection: Possibility to take test pressure or to give external pressure on the pressure sensor of the Volume Conversion Device.



When installing the three-way cock, it must be noted that the position of the operating lever is checked with the corresponding throughputs, as the lever can be removed and may be installed in a twisted manner.



The pipeline from the pressure sensor to the meter must be laid in a falling manner so that, where applicable, water cannot damage the pressure sensor or influence the measurement precision.

<sup>7</sup> Not applicable when using EK205 as a Temperature Conversion Device.

## 5.2 Connection



*The EK205 is available in various equipment variants. Information about this can be found at [www.elster-instromet.com](http://www.elster-instromet.com).*



### **DANGER!**

#### **Risk of explosion by connection to non-intrinsically-safe and associated equipment.**

When operating the EK205 in an area at risk of explosion (zones 0, 1 or 2) and connecting devices without certification as an "associated piece of equipment", there is a risk of explosion.

Therefore:

- When used in an area at risk of explosion, connect the EK205 to certified, associated pieces of equipment only in accordance with the valid rules of the art stated in the design test certificates.
- Connect the EK205 only to intrinsically safe pieces of equipment whose electric data correspond to the requirements stated in the design test certificates of the EK205 (see chapter 9.3).



### **WARNING!**

#### **Risk from faulty connection of the device!**

The connection of the device may be carried out by a gas expert only (see chapter Safety). Faults in this process may result in fatal situations or considerable material damage.

Therefore:


- Have the connection of the calibrated device be carried out by a gas expert only.
- Also involve this person for subsequent relocations.
- Do not perform any connection changes or relocations of the device independently.

- During connection and commissioning of the EK205, observe the requirements of the associated norms DIN EN 60079-0 and DIN EN 60079-14.
- Have the wiring of the connections carried out correctly by a gas expert or a calibration officer.
- Do not switch active outputs against one another.
- Close unused cable screw connections in accordance with DIN EN 60079-14 using a plug or a suitable screw lid.
- Insulate any unused wire (e.g., in multicore cables) at the end by appropriate termination means. (see "Technische Regel für Betriebssicherheit (TRBS)")

To program the device and carry out additional applications, you can also connect in addition to the components stated in this chapter the serial and optical interfaces of the EK205 (see chapter Construction and function).

### 5.2.1 Connecting gas meters

To measure the gas volume, a gas meter with a low-frequency pulse transducer can be connected to the digital input DE1 of the EK205.

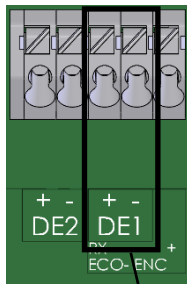

Ill.: 8

The pulse transducer of the gas meter is connected to the DE1 (1) terminal of the EK205.

Details and characteristics on the use of the pulse transducer are described in the following subchapters.



The line diameter for connection of the inputs of the EK205 is 0.8 ... 1.0 mm (AWG 20 – 18).

#### 5.2.1.1 Connection to a low-frequency pulse transducer

1. Connect the pulse output of the gas meter to the DE1 terminal (1 in Ill.: 8) of the EK205.

The priority can be freely selected. (The labels + and - of the terminals are intended for connecting other pulse transducers.)

2. Set the operation parameters such as the cp value (pulse constant) as described in chapter 5.3.1.2.

### 5.2.2 Lead-sealing of the input terminals

After connecting to the gas meter in accordance with chapter 5.2.1, the input terminal DE1 needs to be sealed.

To this end, the accessory bag terminal covers are provided. Where required, screw them via the connected terminals and then glue an adhesive seal to the fastening screw (see chapter 5.3.2).

### 5.2.3 Connect temperature sensor




*When connecting the temperature sensor, national requirements must be observed.*



*Lubricate the temperature sensor before connecting with heat transfer paste to increase its functionality.*


#### 5.2.3.1 Connection to standard temperature sensor pocket

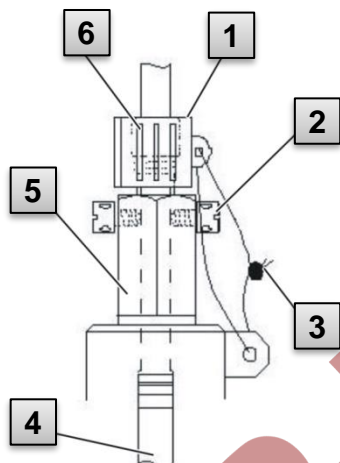

III.: 9

1. Insert the temperature sensor Pt 500 **4** in the temperature sensor pocket **5** (see appendix).
2. Fasten the temperature sensor through the capstan screw **2** and the planned screw connection **6**.
3. Have the temperature sensor sealed using a lead-sealing socket **1** and the wire seal **3** in accordance with III. 9 by a calibration officer.

#### 5.2.3.2 Connection to an older temperature sensor pocket

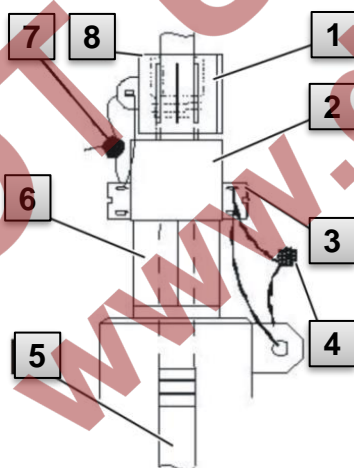

III.: 10

1. Insert the temperature sensor Pt 500 **5** in the temperature sensor pocket **6** (see appendix).
2. Use the adapter for lead-sealing the connection **2** (see appendix).
3. Fasten the temperature sensor through the capstan screw **3** and the planned screw connection **8**.
4. Have the temperature sensor sealed using a lead-sealing socket **1** and the wire seal **4, 7** by a calibration officer.

### 5.2.4 Connect pressure line<sup>8</sup>




*When connecting the pressure lines, national requirements must be observed.*

*For Germany, the requirements of the PTB inspection rules, volume 20 Electronic Volume Conversion Devices for gas, chapter 5 apply.*



*When laying pipelines, a falling laying must be observed.*

#### 5.2.4.1 Connection to an internal pressure sensor

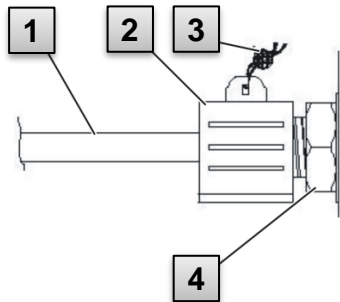

1. Connect the pressure connection **1** using the union nut and the seal insert to the connection of the internal pressure sensor **4**.
2. Seal the connection with the sealing socket **2** and a wire seal **3**.

III.: 11

### 5.2.5 Connecting the power supply



#### **DANGER!**

**The connection of non-associated equipment presents a risk of explosion!**

Operating the EK280 in zone 0, 1 and connecting devices which are not certified as "associated equipment" present a risk of explosion.


Therefore:

- When using the EK280 in zone 0, 1, it should only be connected to certified associated equipment as per the ATEX Product Directive 94/9/EC.
- The EK280 should only be connected to the intrinsically-safe circuits of associated equipment whose electrical data corresponds to those requirements stipulated in the declaration of conformity for the EK280 (see Appendix).

For the external power supply of the EK205 (model without in-built power supply unit), the electrical data should be adhered to as per chapters 9.3 and 3.2.2.

The extended function unit "FE260" from Elster can be used as a power supply unit, for example.

<sup>8</sup> Not applicable when using EK205 as a Temperature Conversion Device.

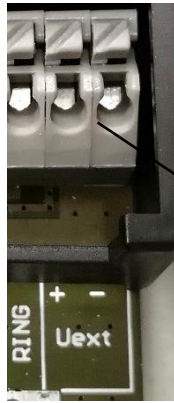

Ill.: 12

Connect the power supply to the "Uext" terminal **1** of the EK205.

The polarity should be taken into consideration, i.e. connect the "+" of the power supply unit to the "Uext +" terminal and "-" to "Uext".


### 5.2.6 Connect outputs of the EK205



*The line diameter for connection of the inputs of the EK205 is 0.8 ... 1.0 mm (AWG 20 – 18).*



*Various instruments can be connected to the digital output of the EK205. To this end, the outputs are preset (see chapter 5.3.1.10)*

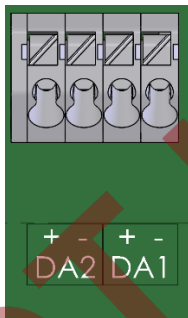

Ill.: 13

1. Connect the downstream device to the corresponding digital outputs (terminals DA1 and DA2) of the EK205 (see Ill.: 13).
2. For lead-sealing the output terminal, a corresponding terminal cover is provided in the accessories bag. Where required, screw them via the terminals and then glue a lead seal to the fastening screw (see chapter 5.3.2).
3. Where required, for the pulse outputs set the cp value (pulse constant) as described in chapter 5.3.1.10.

## 5.3 Commissioning

### 5.3.1 Setting the operating parameters

The setting of the operating parameters required can be carried out using the free enSuite software, available at [www.elster-instromet.com](http://www.elster-instromet.com).


If the program is not available, the settings can be alternatively made using the device keyboard.



*Before setting the operating parameters using the keyboard, read chapter 6 to familiarize yourself with the operation of the device.*

#### 5.3.1.1 Opening the calibration lock

On circuit board in the housing floor, the calibration lock can be found in the form of a key that can be secured with an adhesive label. This needs to be operated to change relevant values and parameters.

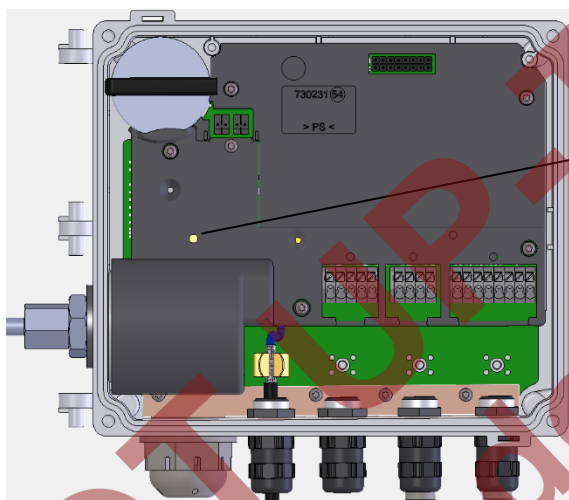

**Position of the key for opening the calibration lock.**

III.: 14

#### 5.3.1.2 Setting parameters for the NF pulse transducer of the gas meter

If a low-frequency pulse transducer is connected in accordance with 5.2.1.1, you can set the input mode and cp value as follows:

##### 1. Setting the input mode:

- Move the cursor to the "Serv" tab and via the following path to the value "Md.I1" input mode:

*Serv. → Inputs → Input 1 → Md.I1*

- Press the key combination ENTER ▲ + ▼ ⇒ The value set flashes.
- Repeatedly press one of the ▲ or ▼ arrow buttons until the text "Pulse input" flashes.
- Press the ENTER ▲ + ▼ button to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.

##### 2. Setting the cp value (pulse constant):

- Move the cursor to cp value "cp.I1" in the same path
- Press the key combination ENTER ▲ + ▼ ⇒ One digit of the value flashes.

- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.
- Press the ENTER ▲ + ▼ button to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.

### 5.3.1.3 Setting the volume at measurement conditions

In order to control the recording of volumes within measurement conditions, the EK205's counter can be set to the same value as the gas counter once when the administrator lock is open. Setting the volume is always possible when the calibration lock is open.

- Open the administrator lock or the calibration lock
- Move the cursor to the "Serv" tab and via the following path to the value "VmA" (adjustable volume at measurement conditions) input mode:  
*Serv. → Volume → Actual volume → Synchronization Vm → VmA*
- Press the key combination ENTER ▲ + ▼ ⇒ one digit of the value flashes.
- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.
- After all digits have been changed, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.
- To adopt the value set, move the cursor to the Store value.
- Press the ENTER key combination ▲ + ▼ ⇒ "0" flashes.
- Change the value using the arrow buttons ▲ or ▼ to "1".
- After the value has been changed, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►. ⇒ For Vm, VmA is adopted.



*If the administrator lock is open and the transfer of VmA for Vm is rejected with the –13– message, this process has already been carried out.*

*Further changes are possible when either the calibration lock or the administration lock is open, after deleting the change information regarding setting Vm at the same value as the gas counter (see chapter 5.3.1.4).*

### 5.3.1.4 Deleting change information for alignment of Vm with the gas meter

To allow for resetting of the volume within measurement conditions when the administrator lock is open, the change information regarding setting Vm at the same value as the gas counter must be deleted:

- Open the calibration lock
- Move the cursor to the "Serv." tab and via the following path to the value "Clear" (adjustable volume at measurement conditions) input mode:  
*Serv. → Volume → Actual volume → Synchronization Vm → Clear*
- Press the key combination ENTER ▲ + ▼ ⇒ "0" flashes.
- Change the value using the arrow buttons ▲ or ▼ to "1".
- After the value has been changed, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►. ⇒ "TimeX" (time stamp of the alignment), "Vm\_o" (Vm old value), "Vm\_n" (Vm new value) are set to the default values.

### 5.3.1.5 Setting volume at base conditions

It is possible to set up the meter when first operating the EK205 provided that the administrator lock is open. Setting the volume is always possible when the calibration lock is open.

- Open the administrator lock or the calibration lock.
- Move the cursor to the "Serv" tab and via the following path to the value "VbA" (adjustable standard volume meter) input mode:  
*Serv. → Volume → Standard volume → Synchronization Vb → VbA*
- Press the key combination ENTER ▲ + ▼ ⇒ One digit of the value flashes.
- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.
- After all digits have been changed, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.
- To adopt the value set, move the cursor to the Store value.
- Press the key combination ENTER ▲ + ▼ ⇒ "0" flashes.
- Change the value using the arrow buttons ▲ or ▼ to "1".
- After the value has been changed, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►. ⇒ For Vb, VbA is adopted.



*If the administrator lock is open and the transfer of VbA for Vb is rejected with the –13– message then this process has already been carried out.*

*Further changes are possible when either the calibration lock or the administration lock is open, after deleting the change information regarding setting Vb (see chapter 5.3.1.6).*

### 5.3.1.6 Deleting change information for alignment of Vb

To allow for resetting of the standard volume when the administrator lock is open, the change information regarding setting at the same value as "Vb" must be deleted:

- Open the calibration lock
- Move the cursor to the "Serv." tab and via the following path to the value "Clear" (adjustable volume at base conditions) input mode:  
*Serv. → Volume → Standard volume → Synchronization Vb → Clear*
- Press the key combination ENTER ▲ + ▼ ⇒ "0" flashes.
- Change the value using the arrow buttons ▲ or ▼ to "1".
- After the value has been changed, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►. ⇒ "TimeX" (time stamp of the alignment), "Vb\_o" (Vb old value), "Vb\_n" (Vb new value) are set to the default values.

### 5.3.1.7 Setting compressibility equation and gas analysis

- Move the cursor to the "Serv" tab and via the following path to the value "Md.K" (compressibility equation) input mode:  
*Serv. → Volume conversion → Parameter settings → Md.K*
- Press the key combination ENTER ▲ + ▼ ⇒ The value set flashes.
- Change the value using the arrow buttons ▲ or ▼. In doing so, observe the legal provisions applicable at the place of use.

Md.K	Meaning
Fixed value	No calculation of the compressibility. The adjustable K.F value is used.
S-Gerg-88	Calculation of the compressibility in accordance with S-Gerg-88
AGA-NX19	Calculation of the compressibility in accordance with AGA-NX19
AGA-8 GC1	AGA8 gross characterization method 1
AGA-8 GC2	AGA8 gross characterization method 2
AGA-NX19-HW	AGA-NX19 according to Herning and Wolowsky
AGA-8 DC92	AGA8 detailed characterization

- Press the ENTER ▲ + ▼ button to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.
- Move the cursor with the arrow keys ▲ or ▼ further to the gas analysis values (Ho.b, CO<sub>2</sub>, etc.).
- Change the values in accordance with the gas used by enabling with the ENTER ▲ + ▼ key combination the entry, going with the arrow keys ► or ◀ to the figures and changing them with the keys ▲ or ▼.
- Press the ENTER ▲ + ▼ button to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.



*The calorific value Ho,b applies to the basic conditions pbX, TbX and reference combustion temperature +25°C. pbX and TbX are adjustable under calibration lock.*

### 5.3.1.8 Setting the alarm limits for gas pressure and temperature measurement

Ex works, the alarm thresholds are set to sensible values. If a change is necessary, proceed as follows:

- Move the cursor to the "Serv" tab and via the following paths to the alarm thresholds:  
*Serv. → Measured values → Pressure → pMin and pMax<sup>9</sup>*  
*Serv. → Measured values → Temperature → TMin and TMax*
- Press the key combination ENTER ▲ + ▼ to enable the entry.

<sup>9</sup> These values are not required in the performance as Temperature Conversion device.

- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.
- Press the ENTER ▲ + ▼ button to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.

### 5.3.1.9 Setting replacement values for gas pressure and temperature

If the gas pressure or the gas temperature cannot be measured due to a fault or if pressure and temperature are outside the alarm limits defined in chapter 5.3.1.8, an adjustable replacement value (fixed value) is used to calculate the standard volume. The volume thereby calculated is counted in the separate fault volume meter VbD (Base Volume Disturbed).

The total base volume counter VbT is keep on counting although there is a disturbance. The total base volume calculated under these faulty conditions has no measuring relevance. It must not be used for billing purposes.

The replacement values can be found at the following paths:

*Serv. → Measured values → Pressure →  $p.F^{10}$*

*Serv. → Measured values → Temperature →  $T.F$*

The values are changed as a rule in the same way as described in chapter 5.3.1.8.

### 5.3.1.10 Parameterization of the outputs



*The setting of the cp values (pulse constants) for the outputs can be carried out via the enSuite software as an alternative.*

The following functions are preset for the outputs as factory settings:

Output	Function
DA1	Pulse output for the total standard volume "VbT" <sup>11</sup> (CP.O1= 0.1 Imp/m <sup>3</sup> )
DA2	Pulse output for the total standard volume "VmT" (CP.O2= 0.1 Imp/m <sup>3</sup> )

The cp value of an output states how many pulses were emitted per cubic meter. A cp value of 0.1/m<sup>3</sup> (0.1 pulses per m<sup>3</sup>) means that e.g. a pulse is emitted per 10m<sup>3</sup>.

To change the cp values for output 1 or output 2, move the cursor to the "Serv." tab and via the following path to "CP.O1" (output 1) or "CP.O2" (output 2):

*Serv. → Outputs → Output 1 → CP.O1*

or *Serv. → Outputs → Output 2 → CP.O2*

- Press the key combination ENTER ▲ + ▼ ⇒ One digit of the cp value flashes.
- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.

<sup>10</sup> These values are not required in the performance as Temperature Conversion device.

<sup>11</sup> VbT must not be used for billing purposes.

- Press the key combination ENTER ▲ + ▼ to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.



*Except for the settings described here, many additional functions, such as time synchronous pulses, can be set for the outputs.*

*The complete description can be found in the application manual EK205, which you can download from [www.elster-instromet.com](http://www.elster-instromet.com).*

### 5.3.1.11 Setting summer time switching

- Move the cursor to the "Serv." tab and via the following path to the value "MdTim" (summer time mode):

*Serv. → Date and time → MdTim*

- Press the key combination ENTER ▲ + ▼ ⇒ The value set flashes.
- Change the value using the arrow buttons ▲ or ▼:

Mod.Z	Meaning
off	No switching to CEST*
auto	Automatic switching to CEST*
manual	Every year, the start and end of CEST* is set by the control room.

\*CEST = Central European Summer Time

- Press the ENTER ▲ + ▼ button to confirm the set value. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.

### 5.3.1.12 Delete measurement archives



*It is not mandatory to delete the archives on commissioning.*

- Move the cursor to the "Serv." tab and via the following path to the value "Clr.A" (delete measurement archives):

*Serv. → Edit and delete → Clr.A*



*All measurement archives (no logbooks) are deleted.*

*To avoid deleting the archives by mistake, when the calibration lock is open the serial number (on the type plate of the device) of the EK205 must be stated.*

- Press the key combination ENTER ▲ + ▼ ⇒ One digit of the value flashes.
- Move the cursor with the arrow buttons ► or ◀ to the digits and enter with the arrow buttons ▲ or ▼ the serial number of the device.
- After stating the serial number of the device, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.

#### 5.3.1.13 Deleting the certification data log



*Deleting the log is only possible when the calibration lock is open.*

- Move the cursor to the "Serv." tab and via the following path to the value "CICDL" (delete certification data log):  
*Serv. → Edit and delete → CICDL*
- Press the key combination ENTER ▲ + ▼ ⇒ "0" flashes.
- Change the value using the arrow buttons ▲ or ▼ to "1".
- After the value has been entered, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.


#### 5.3.1.14 Close and secure calibration key

After making all settings subject to calibration requirements, close the calibration lock. Press the key described in chapter 5.3.1.1 again.

The calibration lock is calibrated with an adhesive label as described in chapter 5.3.2.2.

### 5.3.2 Sealing


#### 5.3.2.1 External view

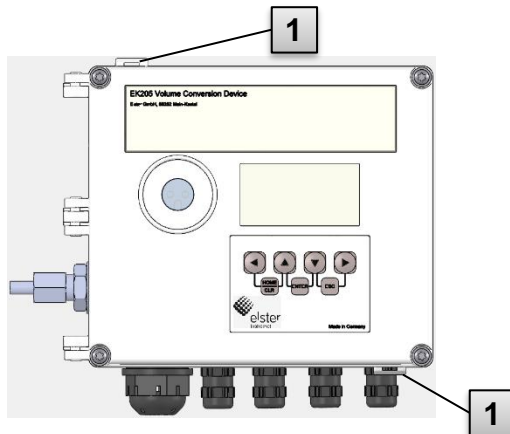

Ill.: 15


- 1 Optional user protection: Lid sealing using wiring seals through sealing plugs.

#### 5.3.2.2 Internal view

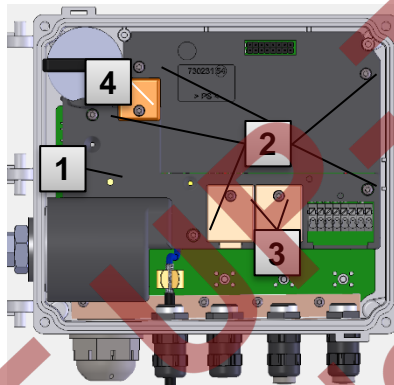

Ill.: 16

- 1 Sealing point for securing the calibration switch.
- 2 Sealing points for securing the plate covers.
- 3 Sealing points for securing the terminal covers of the inputs and outputs.
- 4 Sealing points for securing the battery cover (if available).
- 5 Sealing points for securing the LCD plate cover.

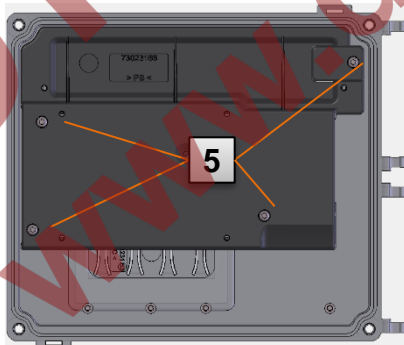

Ill.: 17



*The sealing of the sealing points Ill.: 16/3 for securing the pulse inputs and pulse outputs is subject to national law (see WELMEC 11.1, chapter 2.7.1).*

*Depending on the legal situation in the country of use, seals from a group of people set out in law or from meter operators must be used.*

*If devices are delivered with connected input and/or output cables then seals with the manufacturer's symbol are applied at the plant. If necessary, these can be substituted on site as described above.*

### 5.3.2.3 Sensors



*The sealing of the connected temperature and pressure sensors is illustrated in chapters 5.2.3 and 5.2.4 as an example.*

### 5.3.3 Close housing




#### CAUTION!

#### Damage to property caused by improper device closure!

If the device is not properly closed cables can get pinched and cause damage.

Therefore:

- Ensure correct positioning of the cable guide when closing.

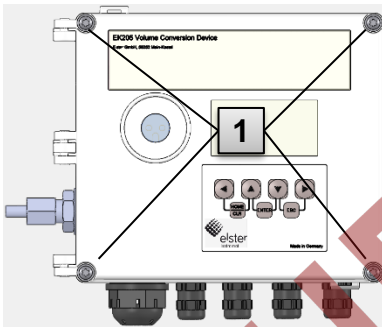

Ill.: 18

1. Close the housing using the four pre-installed screws (Ill.: 18: 1).
2. Do not close the cable screw connections used with matching sealing plugs.

### 5.3.4 Check installation and connection



#### WARNING!

#### Risk from improper installation and connection!

Improper installation and connection of the EK205 may result in fatal situations.

Therefore:

- Carry out the installation and connection of the EK205 correctly.
- Observe the requirements of the standards and guidelines stated in the design test certificates.

### 5.3.5 Data transfer

For the various options of remote data transmission to a control room via a device connected to the terminal interface, please observe the corresponding instructions in the application manual EK205, which you can download from [www.elster-instromet.com/en](http://www.elster-instromet.com/en) (-> documents).

The settings of the data transfer are possible without opening the calibration lock.

## 6 Operation



*Using the enSuite software and the data interfaces of the EK205, further applications than those described below are possible. Instructions are available at [www.elster-instromet.com](http://www.elster-instromet.com).*

### 6.1 Safety

#### 6.1.1 Personal protective equipment

When working on the device within a gas system, wearing personal protective equipment is required to minimize health hazards.

- During the activity on the device, always wear the protective equipment required within the relevant system.
- Always observe the notes on the personal protective equipment provided in the working area.

### 6.2 Operating staff

Below various persons are stated who are authorized to perform various activities when operating the EK205.

#### 6.2.1 Trained individual

The person instructed to operate the EK205

- was instructed by the plant operator in an informational session on the tasks assigned to him or her, and on possible hazards in case of improper behavior.
- is authorized to read and note values and parameters using operating elements of the EK205.

#### 6.2.2 Specialist

The specialist on operating the EK205

- has the ability, because of their technical training, knowledge and experience, as well as their knowledge of the relevant regulations, to carry out the work to the device assigned to them, and to recognize and avoid possible hazards on their own.
- is authorized to read and note values and parameters of the operating elements of the EK205 and to make changes not subject to calibration requirements.


#### 6.2.3 Calibration officer

The calibration officer

- has the ability, because of their technical training, knowledge and experience, as well as their knowledge of the relevant standards and regulations, to carry out calibration-protected work to gas systems. The calibration officer is trained to work with calibration-protected devices and systems, and is acquainted with the relevant standards and regulations that apply.
- is authorized to read and note values and parameters of the operating elements of the EK205 and to make changes subject to calibration requirements.

## 6.3 Basics

As already explained in the chapter Construction and function, you can operate and program the EK205 using the operating elements on the front plate of the device:

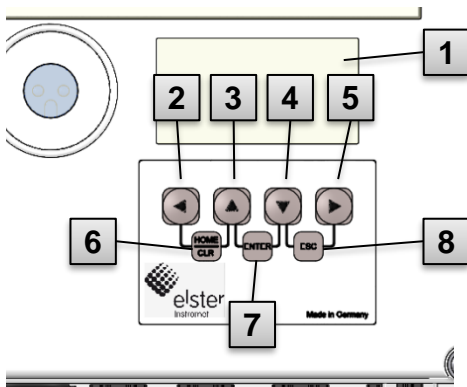

III. 19: Front plate of the EK205


- 1 Alphanumeric display
- 2 Arrow key ◀
- 3 Arrow key ▲
- 4 Arrow key ▼
- 5 Arrow key ▶
- 6 HOME/CLR key combination
- 7 ENTER key combination
- 8 ESC key combination



On plate in the housing floor, the calibration lock can be found in the form of a key that can be sealed with an adhesive label. This needs to be operated to change calibration-protected values and parameters. In the event of a calibration-protected device, this may be carried out by a calibration officer only.

### 6.3.1 Display

The display is divided into the five tabs of Main, Cust., Admin, Serv. and Ctrl., in which the measurement values, settings and other data are displayed.

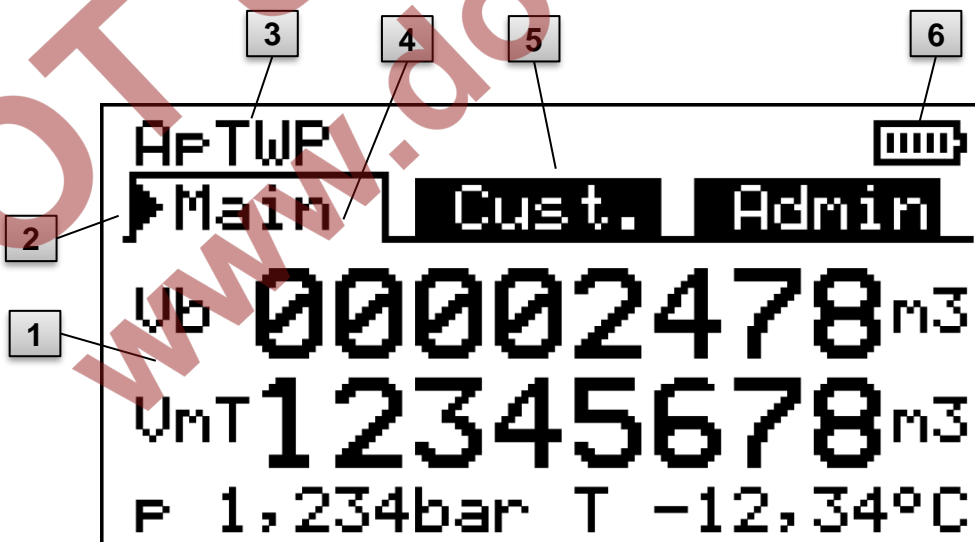

III. 20 Structure of the display

- 1 Data field
- 2 Cursor
- 3 Device status
- 4 Active tab
- 5 Inactive tab
- 6 Battery charging status

The display in the data field III. 20 (starting here with Vb) is different in the tabs. All other display parts (in the top part) are the same regardless of the tab displayed.

### 6.3.2 Functions of the keys

The keys have the following functions:

Key	Function
►	<ul style="list-style-type: none"> <li>■ jump to the right to another data list.</li> <li>■ jump to the second part of a value displayed in two parts.</li> <li>■ open the relevant submenu.</li> </ul>
▼	<ul style="list-style-type: none"> <li>■ jump down within a data list.</li> </ul>
◄	<ul style="list-style-type: none"> <li>■ jump to the left to another data list.</li> <li>■ leave a submenu and jump to its start value (one menu level higher).</li> </ul>
▲	<ul style="list-style-type: none"> <li>■ jump up within a data list.</li> </ul>
▲ + ▼	<ul style="list-style-type: none"> <li>■ By pressing the two keys at the same time, you can execute the ENTER function regardless of the relevant data class and thereby               <ul style="list-style-type: none"> <li>● activate the input mode.</li> <li>● open the relevant submenu.</li> <li>● update the relevant measurement value.</li> </ul> </li> </ul>
▼ + ►	<ul style="list-style-type: none"> <li>■ By pressing the two keys at the same time, you can execute the ESC function regardless of the relevant data class and thereby               <ul style="list-style-type: none"> <li>● leave a submenu and jump to its start value (one menu level higher).</li> <li>● cancel an input (the input mode).</li> </ul> </li> </ul>
◄ + ▲	<ul style="list-style-type: none"> <li>■ By pressing the two keys at the same time, you can execute the HOME/CLR function and thereby               <ul style="list-style-type: none"> <li>● display the Main tab.</li> <li>● initiate a value in the input mode (reset to its start value).</li> </ul> </li> </ul>
▲ + ►	<ul style="list-style-type: none"> <li>■ By pressing the two keys at the same time, via the context menu displayed, you can               <ul style="list-style-type: none"> <li>● display the Main tab.</li> <li>● freeze the current display.</li> <li>● delete the status tab.</li> </ul> </li> </ul>
◄ + ►	<ul style="list-style-type: none"> <li>■ Address display of the current value.</li> </ul>


### 6.3.3 Calling up the data, navigation in the display

With the ►, ◀, ▲, ▼ arrow keys, you can move the cursor in the display and switch to other values.

By pressing the key combination ESC ▼ + ► several times, you reach one of the Main, Cust., Admin, Serv. or Ctrl. tabs (→ 0, Ill. 20). The active tab that the cursor is on is displayed with a bright background (Ill. 21/1). At the tab level, you can use the arrow keys ► or ◀ to move the cursor to the other tabs to display their content.

The Customer tab contains more data than can be displayed simultaneously. With the ▼ arrow key, you move the cursor from the tab to the data field (the bottom part of the display). If the cursor is at the lowest visible value, the display is moved by pressing the ▼ key again, which makes the data visible. Accordingly, the cursor can be moved up with the ▲ key and the display will be moved up at the top visible value.

If the cursor hits a value that was saved with an associated time stamp, it is displayed automatically. (Ill. 21/2)

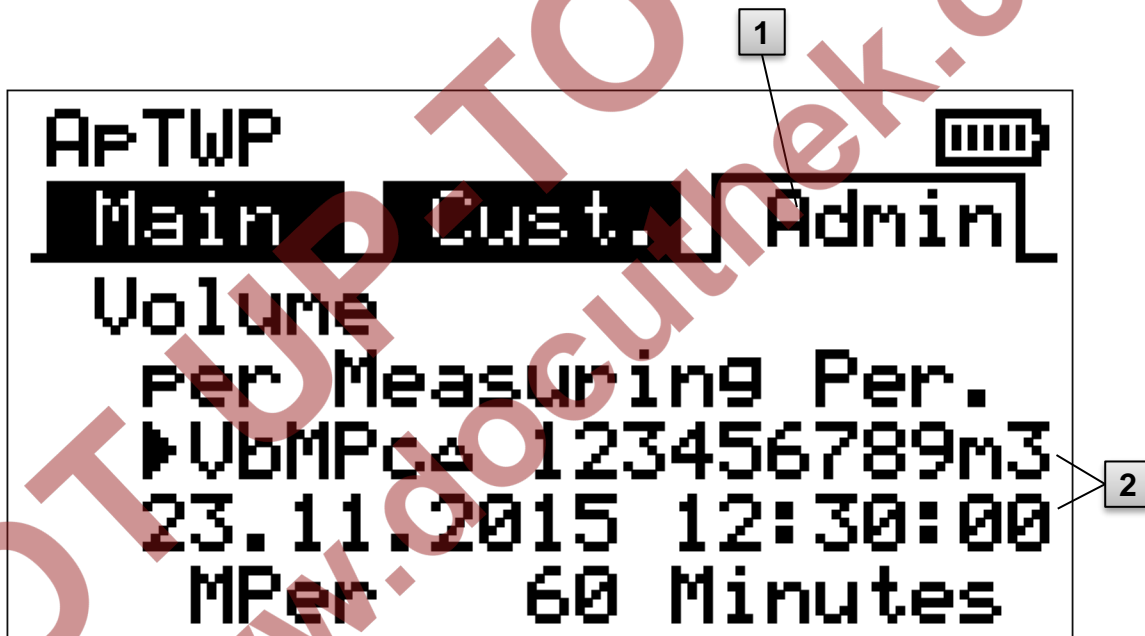


Ill. 21: Admin tab

1 Active tab


2 Value with associated time stamp

### 6.3.4 Meaning of the status symbols

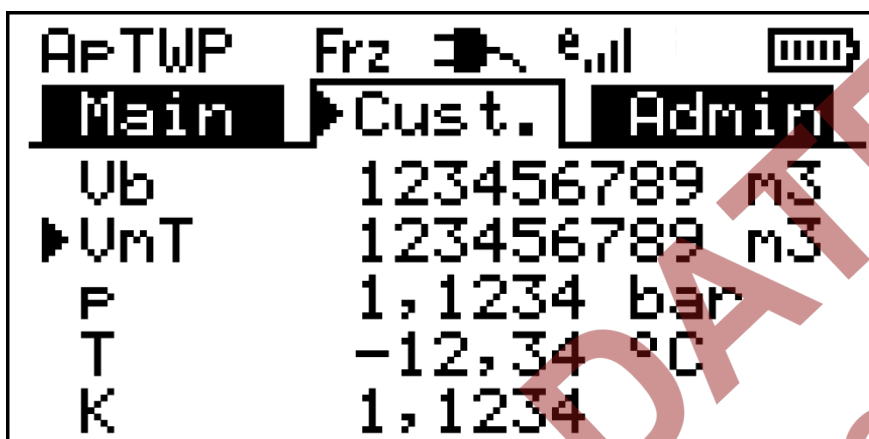

The status symbols displayed in the first row have the following meaning:



Ill. 22: Status symbols in the display

Symbol	Meaning
<b>ApTWP</b>	At the top left edge of the display, individual letters are displayed as symbols for the following messages:
<b>ok.</b>	No special messages
<b>A</b>	Alarm – collective message "any alarm"
<b>p</b>	Pressure alarm – the gas pressure cannot be measured
<b>T</b>	Temperature alarm – the gas temperature cannot be measured
<b>W</b>	Warning – collective message "any warning"
<b>B</b>	Battery warning – the battery is nearly empty
<b>L<sup>12</sup></b>	Certification data log - the certification data log is full.
<b>P</b>	Calibration lock (programming mode) – the calibration lock is open.
<b>o</b>	online – data transmission is ongoing
If one of these letters flashes, the condition thereby indicated is still in place (active). If a letter is displayed consistently, the indicated status is no longer in place, but needs to be confirmed.	
Detailed explanations on the meaning and on any necessary procedure: see chapter 8.1.4 "Conduct in the event of faults"	
<b>Frz.</b>	Display frozen The values displayed are "frozen" (not up to date). After pressing any key, the current values are displayed. Freezing the display can be triggered after pressing the ▲ + ► key combination.
	External power supply If this symbol appears, the EK205 is being supplied power from an external unit connected to the terminals.

<sup>12</sup> If a calibration logbook is available in the device.

Symbol	Meaning
	Signal strength of the radio network for the external modem (connected to the terminals). This display is only shown if an external modem is connected and active.
	Charging status of the device battery

### 6.3.5 Error messages when entering values

If a value has been entered incorrectly via the keyboard, then input error messages will be displayed.

Figure: --x-- with x = error code according to the following table

Code	Description
1	The archive is empty, no values have been entered.
2	The archive value cannot be read. The archive may currently be opened by the interface for exporting.
4	Parameter cannot be changed (constant)
5	You are not authorized to change this value. A corresponding lock must be opened to change this value.
6	Invalid value The value entered is outside the permissible limits.
7	Wrong key The key entered (number code) is incorrect, lock is not opened.
11	Input not possible due to special settings or configuration, e.g.: - Change heat value only possible in the gas analysis list; not in the energy list
12	The input of this source (address) is not permitted.
13	Input not possible due to special settings or configuration, e.g.: The <i>Clr.X</i> function can only be performed once the time has been set to its start value (initialized) with the button combination ◀ + ▲. - The <i>Store</i> function can only be executed once the change information for the alignment of "Vm" (see chapter 5.3.1.4) or "Vb" (see chapter 5.3.1.6) was deleted.
14	Gas analysis parameters do not match.
20	Value not defined for the user-specific display The value to be displayed can be defined by entering the address of the user. As this address has not yet been entered, no value will be displayed.
21	The value can only be changed when the calibration lock is open as the PTB logbook is full.

### 6.3.6 Access rights

The EK205 has the following access parties.

Access	Meaning
C	Calibration officer
CDL <sup>13</sup>	Calibration Manual
A	Administrator
Cu	Customer
-	No access

Every access party has a lock and a matching key.

The access rights apply for both inputs by keyboard and for access via the optical, electrical (fixed-wired) or integrated modem interface. If the lock is closed, all attempts to set values prompt a corresponding error message (see chapter 6.3.5, Error messages when entering values).

Reading values via the interfaces is also only possible within the meaning of data protection if a lock is open.

#### 6.3.6.1 Calibration lock

The calibration lock serves to secure calibration law parameters. These include all values that influence volume counting and volume conversion.

The calibration lock is designed as a key that is placed within the EK205 housing below the circuit board cover. It can be secured with an adhesive label (see chapter 5.3.1.1, Opening the calibration lock).

The calibration lock is opened by actuating the key (the P symbol flashes in the display) and closed again by actuating it a second time (P symbol extinguishes). Closing is also possible by deleting the St.ES value (see chapter 6.4.6, Strg. tab (control)) via the keyboard or interface. Using the enSuite software, it is also possible to set a time in minutes after which the calibration lock closes automatically.

In particular for applications outside the German calibration obligation or the MID, the protection degree of all parameters can be changed on request.

As such, parameters that are below the calibration key by default can also be protected with the administrator key or calibration logbook.

---

<sup>13</sup> If a calibration logbook is available in the device.

### 6.3.6.2 Certification data log

The certification data log is activated by default, but can be deactivated as an option. The parameters affected are then below the calibration lock.

Using the certification data log in accordance with PTB-A 50.7, some calibration law-relevant parameters can also be changed when the calibration lock is closed. The requirements for this are:

- The administrator lock must be opened (see below).
- At least three free entries must be available in the certification data log.

The parameters affected according to the factory settings are:

- *CP.I1* cp value for input 1,
- *MPer* measurement period
- *Md.K* K number mode
- *Clr.A* delete measurement archive
- *Md.I1* mode for input 1
- *QMax* maximum load (plausibility check in encoder mode)

For every change of a parameter under *CDL* with a closed calibration lock, a data row for the value is entered before and after the change.

If the certification data log is full, it can be deleted when the calibration lock is open using the *CICDL* command. (see chapter 5.3.1.13)



*If the calibration lock is opened while the calibration logbook is open, it can only be closed again after deleting the certification data log.*

### 6.3.6.3 Administrator lock and customer lock

Administrator and customer lock are used to secure all calibration law data that are not relevant, but that should not be changed without authorization.

The locks can be opened by entering a code (the "key") under *Cod.A* or *Cod.C* and closed by entering "0" for *St.AL* or *St.CL*.

These values can be found under the path:

*Admin* → *Device settings* → *Access*

or *Serv.* → *Device settings* → *Access*

There, a time can also be set in minutes for each lock after which it closes automatically.

## 6.4 Content of the data register

### 6.4.1 Access rights

The "Access" column in the tables of the following chapters describes what lock needs to be opened to change a parameter. All changes of parameters are saved in a logbook.

Access	Meaning
C	Calibration officer
CDL <sup>14</sup>	Calibration Manual
A	Administrator
Cu	Customer
-	No access

### 6.4.2 Main tab (main display)

In the Main tab, the key measurement values are displayed at a glance. The content can differ depending on the settings (see chapter 6.4.6.5). With this tab, there is no possibility to move the cursor for a value.<sup>15</sup> Via the ENTER key, an update of the values displayed can be initiated.

Display	Meaning	Unit	Access	Address
Vb	Volume at base conditions	m <sup>3</sup>	C	2:300
VmT	Total Volume at measurement conditions	m <sup>3</sup>	C	4:302
p	Pressure	bar	-	7:310_1
T	Temperature	°C	-	6:310_1

#### 6.4.2.1 Vb – volume in base mode

The measured volume of the gas meter connected is converted in base mode and added up in this counter.

If a fault is given (see chapter 8 Faults), the counter is stopped and the volume is added up in a special fault volume counter.

#### 6.4.2.2 VmT – Total volume in operation mode

The total measured volume of the gas meter connected is added up in this counter.

Even if a fault is given (see chapter 8 Faults), the counter is still counting. Additionally the disturbed volume is counted in a special fault volume counter VmD.

<sup>14</sup> If a calibration logbook is available in the device.

<sup>15</sup> An exception is if the Main tab was set to List (see chapter 6.4.6.5).

### 6.4.2.3 p – gas pressure<sup>16</sup>

The gas pressure measured is used to calculate the volume in base conditions. The pressure is displayed as absolute pressure.

If the pressure cannot be measured due to a fault, an adjustable value is displayed and used to calculate the fault volumes. The definition of the replacement value is carried out on commissioning (→ chapter 5.3.1 Setting the operating parameters).

### 6.4.2.4 T – gas temperature

The gas temperature measured is used to calculate the volume in base conditions.

If the temperature cannot be measured due to a fault, an adjustable value is displayed and used to calculate the fault volumes. The definition of the replacement value is carried out on commissioning (→ chapter 5.3.1 Setting the operating parameters).

### 6.4.3 Customer tab

This tab is used to display and check special device settings or statuses. The application is intended for the gas customer.

This tab can be freely programmed by the user via the enSuite parameterization software.

The following parameters are programmed ex works:

Display	Meaning	Unit	Access	Address
Time	Date and time	-	-	1:400
Vb	Volume at base conditions	m <sup>3</sup>	E	2:300
VmT	Total Volume at measurement conditions	m <sup>3</sup>	E	4:302
p	Pressure	bar	-	7:310_1
T	Temperature	°C	-	6:310_1
K	Compressibility ratio factor	-	-	8:310
C	Conversion factor	-	-	5:310
SReg	Status register (total)	-	-	1:101
VbMP↑	Maximum measurement period counter Vb in the current month	-	-	3:161
VbDy↑	Maximum daily counter Vb in the current month	-	-	4:161
Qb	Flow at base conditions	m <sup>3</sup> /h	-	2:310
Qm	Actual flow rate	m <sup>3</sup> /h	-	4:310

#### 6.4.3.1 Time – date and time

The time displayed is updated in battery mode every 30 and in mains mode every 2 seconds.

<sup>16</sup> These values are not required in the performance as Temperature Conversion Device.

### 6.4.3.2 Values from Main tab

Vb – volume in base mode, see chapter 6.4.2.1

VmT – Total volume in operating mode, see chapter 6.4.2.2

p – gas pressure, see chapter 6.4.2.3

T – gas temperature, see chapter 6.4.2.4

### 6.4.3.3 K – Compressibility ratio factor

The compressibility ratio factor calculated is used to calculate the volume in base conditions.

The EK205 supports several equations to calculate the compressibility ratio factor. The equation to be used is determined by the directives and standards applicable for the usage area of the device. It can also be set when ordering or commissioning (→ chapter 5.3.1 Setting the operating parameters).

### 6.4.3.4 C – conversion factor

The currently determined factor for converting the volume in operating mode to basic mode.

### 6.4.3.5 SReg – status register (total)

All messages since the last manual clear are collected in the status register. Here, it can be seen what occurred since the last station inspection, for instance. The reports can be deleted on the device (Serv. → Status → Clr).

In the status tabs, only alarms and warnings (see chapter 8.2) are displayed.

### 6.4.3.6 VbMP ↑ – maximum measurement period counter Vb in the current month

The time stamp of the maximum is displayed in the following row when moving the cursor to the VbMP ↑ value.

The maximum of the past 24 months can be queried in the monthly archive 1 (see chapter 6.4.4 Admin tab (administrator)).

### 6.4.3.7 VbDy ↑ – maximum day counter Vb in the current month

The time stamp of the maximum is displayed in the following row when moving the cursor to the VbDy ↑ value.

The maximum of the past 24 months can be queried in the monthly archive 1 (see chapter 6.4.4 Admin tab (administrator)).

### 6.4.3.8 Qb – flow at base conditions

Current flow at base conditions (standard flow rate).

$Q_b = Q_m \cdot C$  with  $Q_m$  = actual flow rate

$C$  = conversion factor

The maximum imprecision of the value displayed corresponds roughly to the maximum imprecision of  $Q_m$ .

For alarm,  $Q_b$  is calculated with the replacement values of the disrupted measurement values.

#### 6.4.3.9 Qm – actual flow rate

Current actual flow rate (measurement flow rate).

The measurement insecurity of the operating load displayed depends on whether a pulse transducer is connected:

For connected pulse transducer:

With a pulse distance of a maximum of 15 minutes (at least four pulses per hour) and  $cp.l1 \leq 1$ , the measurement uncertainty of Qm is a maximum of 1%. For a pulse period of more than 15 minutes, Qm = 0 is displayed. After changing the gas flow, the precise value can only be displayed when the gas meter has sent at least two pulses.

#### 6.4.4 Admin tab (administrator)

This tab is used to display and check special device settings or statuses. The application is intended for the measurement location operator.

Display	Meaning
User values <sup>17</sup>	Submenu for user-specific parameters
Volume	Submenu for volumes and associated parameters
Volume conversion	Submenu for conversion and associated parameters
Measured values	Submenu for measurement values and associated parameters
Archives	Submenu for archives located in the device
Status	Submenu for current status, status tab and logbooks
Date and time	Submenu for date and time and associated parameters
Batteries	Submenu for device batteries and associated parameters
Inputs	Submenu for the inputs and associated parameters
Outputs	Submenu for all outputs and associated parameters
Interfaces	Submenu for the interfaces in the device
Device settings	Submenu for general device settings
Identification	Submenu for the identification of the gas system

<sup>17</sup> In the User values submenu, the user can set via the enSuite parameterization software up to 10 and within this list in another submenu up to 12 freely programmable parameters.

#### 6.4.5 Serv. tab (service)

This tab is used to display, check and parameterize special device settings or statuses. The application is only intended for service technician (specialist staff) or a calibration officer when commissioning or maintaining.

Display	Meaning
Volume	Submenu for volumes and associated parameters
Volume conversion	Submenu for conversion and associated parameters
Measured values	Submenu for analogue measurement values and associated parameters
Archives	Submenu for archives located in the device
Status	Submenu for current status, status tab and logbooks
Date and time	Submenu for date and time and associated parameters
Batteries	Submenu for device batteries and associated parameters
Inputs	Submenu for the inputs and associated parameters
Outputs	Submenu for all outputs and associated parameters
Interfaces	Submenu for the interfaces in the device
Device settings	Submenu for general device settings
Identification	Submenu for the identification of the gas system
Edit and delete	Submenu for triggering various deletion functions
Examination	Submenu for freezing function and test archive
Data book	Submenu with information from the data book of the device

#### 6.4.6 Strg. tab (control)

This tab is used to check special device settings. The application is only intended for service technician (specialist staff) or a calibration officer when commissioning or maintaining.

Display	Value	Unit	Access	Address
St.AL <sup>18</sup>	Administrator lock: Status / close	-	-	3:170
Cod.A <sup>18</sup>	Enter / change administrator key	-	-	3:171
St.PL	Calibration lock: Status / close	-	-	1:170
Menu	Selection of the display menu	-	C	1:1A1
Main	Content of the Main tab	-	A	2:1A1

<sup>18</sup> Operate the device with high communication reliability (high level security, see application manual) so that this menu item is not displayed.

#### 6.4.6.1 St.AL – administrator lock: Status / close

The administrator lock needs to be opened to change certain operating parameters. In normal mode, the administrator lock should be closed.

Display	Meaning
locked	The administrator lock is closed.
open	The administrator lock is open.

#### 6.4.6.2 Cod.A – enter / change administrator lock

Here, by entering the correct key (hexadecimal characters) the administrator lock can be opened. After the administrator lock was opened, the existing key can be changed.

The individual characters of the key can assume the values 0 to 9 and A to F.

#### 6.4.6.3 St.PL – calibration lock: Status / close

The calibration lock needs to be opened to change certain operating parameters. In normal mode, the calibration lock should be closed.

Display	Meaning
locked	The calibration lock is closed.
open	The calibration lock is open. In this case, the "P" at the top left also flashes in the display (see chapter 6.3.4 Meaning of the status symbols)

#### 6.4.6.4 Menu – selection of the display menu

In delivery status, the display of the EK205 has the five tabs: Main, Cust., Admin, Serv. and Ctrl. With the Menu value, for certain purposes tabs can be displayed or hidden.

#### 6.4.6.5 Main – content of the Main tab

Here, the content of the Main display tab can be set.

The setting ex works is Volume+Measurement value. This corresponds to the content displayed in chapter 0.

Display	Meaning
Volume+meas.	<ul style="list-style-type: none"> <li>- The following is displayed: Volume at base conditions, volume at measurement conditions, pressure, temperature</li> <li>- Format: 8 integers and 3 decimals for the meter</li> <li>- with brief descriptions for all values</li> </ul>
List	<ul style="list-style-type: none"> <li>- The following is displayed: Volume at base conditions, volume at measurement conditions, pressure, temperature, status register, compressibility ratio factor, actual flow rate, flow at base conditions, date and time</li> </ul>

## 7 Maintenance

### 7.1 Safety



#### **DANGER!**

##### **Risk of life from electric current!**

When coming into contact with live parts, there is a immediate risk of life. Damage to the insulation or individual components can be fatal.

Therefore:

- Cover the electric connections and live parts against possible contact.
- Immediately cut the power supply in the event of damage to the insulation and initiate the repairs.
- Have work on the electric components of the device, such as the connection of the external power supply, carried out by electrical experts only.
- For all work on the electrical plant, de-energize it and check the freedom from voltage.
- Before maintenance work, cut the voltage supply and secure it from reactivation.
- Do not bridge any fuses or deactivate them. When replacing fuses, observe the correct ampere figure.
- Keep life parts away from humidity. This may result in a short-circuit.



#### **DANGER!**

##### **Risk of explosion due to electrostatic charging.**

Avoid electrostatic charges.

Therefor:

- Clean the device only with a damp cloth.
- Avoid rubbing with non-conductive materials.



#### **WARNING!**

##### **Risk of injury when handling batteries incorrectly!**

Batteries need to be treated with special care.

Therefore:

- Do not throw the batteries in the fire or expose them to high temperatures. There is a risk of explosion.
- Do not charge the batteries. There is a risk of explosion.
- Liquid being released in the event of incorrect use may result in skin inflammations. Avoid contact with the liquid. Rinse the liquid with lots of water in the event of contact. If the liquid enters the eyes, rinse the eyes for 10 mins with water and see a doctor immediately.

**CAUTION!****Substances harmful to the environment!**

When handling substances harmful to the environment, in particular in the event of incorrect disposal, severe damage may arise for the environment.

Therefore:

- Observe the below notes at all times.
- Take suitable measures immediately if substances harmful to the environment enter the environment by mistake. In the event of doubt, inform the municipal authorities in charge of the damage.

**7.1.1 Staff**

Maintenance work must be carried out correctly.

- Have the maintenance work described here carried out by electrical experts only (see chapter Operation).

**WARNING!****Risk of injury from improperly performed maintenance work.**

Improper maintenance may result in severe personal injury or material damage.

Therefore:

- Before starting work, ensure sufficient installation freedom.
- Ensure order and cleanliness at the place of installation. Components and tools lying around and placed on top of one another loosely are sources of accidents.
- If components were removed, ensure correct installation, reinstall all fastening elements and observe screw torques.

**7.1.2 Personal protective equipment**

- During the maintenance work on the device, wear the protective equipment required within the relevant system.
- Always observe the notes on the personal protective equipment provided in the working area.

**7.1.3 Environmental protection**

Observe the following instruction during maintenance work:



*The batteries used contain poisonous heavy metals. They are subject to special waste treatment and need to be disposed of at the municipal collection points or by a specialist company.*

## 7.2 Check and replace device batteries

### 7.2.1 Replace and connect device batteries



#### **DANGER!**

##### **Risk of explosion when using of wrong batteries.**

Use only batteries stated in the design test certificates of the EK205 (see chapter 9.3). Order number see chapter 9.1.4.



#### **WARNING!**

##### **Risk of injury when handling batteries incorrectly!**

Batteries need to be treated with special care.


Therefore:

- Do not throw batteries in the fire or expose them to high temperatures. There is a risk of explosion.
- Do not charge batteries. There is a risk of explosion.
- Liquid being released in the event of incorrect use may result in skin inflammations. Avoid contact with the liquid. Rinse the liquid with lots of water in the event of contact. If the liquid enters the eyes, rinse the eyes for 10 mins with water and see a doctor immediately.


The replacement of the batteries can be carried out without damaging lead seals for devices with a standard structure.



*Before removing the plug of the old battery from the plate, ensure that the new battery has already been connected. As such, the EK205 continues to work during the battery replacement.*

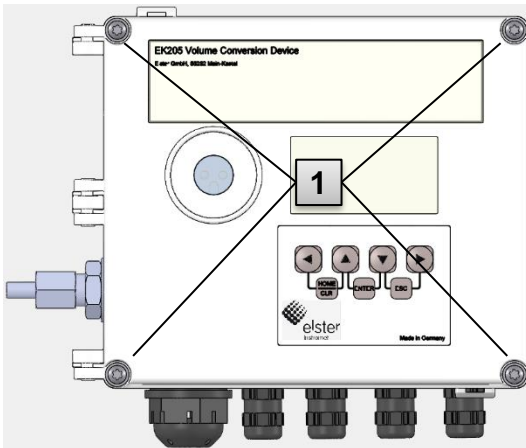

Ill. 23

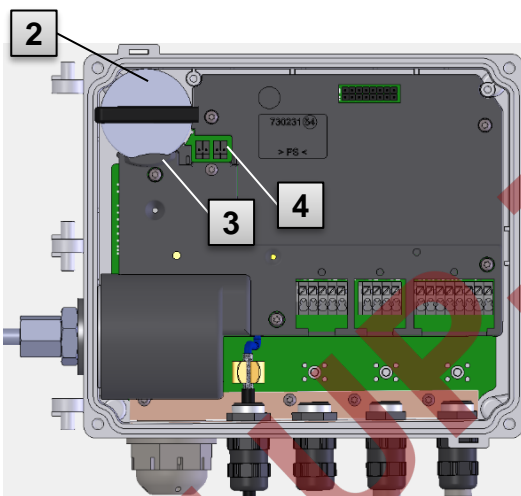

Ill.: 24

1. Loosen the four housing screws (Ill. 23: 1).
2. Open the lid of the EK205.
3. Mark the old battery with a felt pen or label, for instance.
4. Remove the battery (Ill.: 24: 2) from the battery holder (Ill.: 24: 3).
5. Select the free connection on the plate for connecting the new battery (K9 or K10; Ill.: 24: 4).
6. Place the new battery inside (Ill.: 24: 2) and ensure that the battery is correctly anchored in the battery holder.
7. Remove the old battery and dispose of it correctly.
8. Close the housing using the intended screws (Ill. 23: 1).
9. Reenter the start capacity of the battery as described in chapter 7.2.2.
10. Check of the operating period calculated as described in chapter 7.2.3. In standard operation mode (see chapter 3.2.1), the operation duration must display at least 62 months. Otherwise, compared the settings with the standard operation case and execute step 9 if applicable.



Ensure that the new battery is fastened correctly and sits tight inside the EK205.



### CAUTION!

#### Damage to property caused by improper device closure!

If the device is not properly closed cables can get pinched and cause damage.

Therefore:

- During closing, ensure the correct position of the cable ducts.

### 7.2.2 Enter battery capacity



*The battery capacity needs to be re-entered after a battery replacement.*

- To open the administrator lock, move the cursor to the Admin tab and via the following path to the Cod.A value (administrator key entry):

*Admin. → Device settings → Access → Cod.A*



*After delivery, the administrator key for keyboard entry is 00000000.*

- Press the key combination ENTER ▲ + ▼ ⇒ One digit of the value flashes.
- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.
- After the value has been entered, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.
- To enter the battery capacity, move the cursor to the Serv. tab and via the following path to the Bat.C value (battery capacity):

*Serv. → Batteries → Bat.C*

- Press the key combination ENTER ▲ + ▼ ⇒ One digit of the value flashes.
- Move the cursor with the arrow buttons ► or ◀ to the digits and change these with the arrow buttons ▲ or ▼.



*When using a battery of the D value, set the Bat.C value to 13.0 Ah.*

- After the value has been entered, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.
- To close the administrator lock, move the cursor to the Admin tab and via the following path to the St.AL value (administrator lock status):

*Admin. → Device settings → Access → St.AL*

- Press the key combination ENTER ▲ + ▼ ⇒ "open" flashes.
- Move the cursor with the arrow keys ▲ or ▼ to change the value to "closed".
- After the value has been entered, press the key combination ENTER ▲ + ▼ in order to confirm the input. It is possible to abort the entry by pressing the key combination ESC ▼ + ►.

### 7.2.3 Display remaining operating duration of the battery



*The calculation of the remaining operating duration is carried out depending on the consumed capacity (which is measured) and the consumption expected for the future (which results in the theoretical remaining operation duration). For that reason, for applications with strong power consumption may result in the remaining operating duration falling faster than the indication of the remaining operating duration promises.*

*A fresh calculation of the remaining operating duration is automatically carried out after entering a new battery capacity Bat.C (see above). It is not possible to edit the value.*

- Move the cursor to the "Serv." tab and via the following path to the value "Bat.R" (remaining battery operating duration):

*Serv. → Batteries → Bat.R*



*After entering a new battery capacity, in the standard operating case (see chapter 3.2.1) a value of at least 62 months must be displayed for "Bat.R".*

## 8 Faults

The following chapter describes causes of faults of the device and possibilities of rectification.



*In the event of faults that cannot be rectified with the following instructions, please contact our customer service (see chapter General) or our electronics hotline:*

*Tel. +49 (0) 6134/605-123*

*<http://www.elster-instromet.com/de>*

*E-mail: [support@elster-instromet.com](mailto:support@elster-instromet.com)*

### 8.1 Safety



#### **DANGER!**

##### **Risk of life from electric current!**

When coming into contact with live parts, there is a immediate risk of life. Damage to the insulation or individual components can be fatal.

Therefore:

- Immediately cut the power supply in the event of damage to the insulation and initiate the repairs.
- Have work on the electric components of the device, such as the connection of the external power supply, carried out by electrical experts only.
- For all work on the electrical plant, de-energize it and check the freedom from voltage.
- Before maintenance work, cut the voltage supply and secure it from reactivation.
- Keep live parts away from humidity. This may result in a short-circuit.

#### **8.1.1 Staff**

- The work described here for fault rectification, unless indicated otherwise, can be carried out by the operator.
- Some work may only be carried out by specially trained specialist staff or exclusively by the manufacturer. Special reference to this is made in the description of the individual faults.
- Work on the electrical system may be carried out by electrical specialist staff only as a rule.

#### **8.1.2 Personal protective equipment**

- During the rectification of a fault on the device, wear the protective equipment required within the relevant system.
- Always observe the notes on the personal protective equipment provided in the working area.

### 8.1.3 Improper fault rectification



#### **WARNING!**

#### **Risk of injury from improper fault rectification!**

Improper fault rectification may result in severe personal injury or material damage.

Therefore:

- Before starting work, ensure sufficient installation freedom.
- Ensure order and cleanliness at the place of installation. Components and tools lying around and placed on top of one another loosely are sources of accidents.
- If components were removed, ensure correct installation, reinstall all fastening elements and observe screw torques.



*The following explanations on the faults occurring provide information on who is authorized to rectify the fault.*

### 8.1.4 Conduct in the event of faults

The following applies as a rule:

1. If work is required in the hazardous area, deactivate the overall system and secure it from restarting.
2. Determine the cause of the fault.
3. Inform the persons in charge at the place of use of the fault immediately.
4. Depending on the type of the fault, contact the manufacturer and have it rectified by authorized specialist staff or do so yourself.

## 8.2 Fault and other status messages

Faults (here equivalent to "alarms") during the operation of the EK205 can be identified on the basis of the status symbols in the first row of the display (see chapter 6.3.4).

Further information and reports can be obtained in the Stat current status and in the SReg. status tab. They can be found:

- in the *Cust.* tab (SReg only)
- at the paths *Admin* → *Status* and *Serv.* → *Status*

Effects and recommended procedures in the event of fault and other status messages:

Message	Description, process
<b>a) Faults, alarms:</b>	
Restart	If this message appears whilst in operation, the device is faulty. Please contact the Elster customer service (see chapter 1.3 Customer service).
C-fact. err.	The conversion factor could not be calculated, as the measured gas temperature is outside -100°C to +100°C or no usable compressibility figure is available.

Message	Description, process
Data error	An error was detected during the cyclic check of the data subject to calibration regulations. Please contact the Elster customer service (see chapter 1.3 Customer service).
T Alarm Lim.	The gas temperature measured is outside the permissible limits. The limits can be changed when commissioning in the presence of the calibration officer. (see Chapter "5.3.1.8", page 35)
p Alarm Lim.	The gas pressure measured is outside the permissible limits. The limits can be changed when commissioning in the presence of the calibration officer. (see Chapter "5.3.1.8", page 35)
K-val. error	The compressibility ratio factor could not be calculated, as no valid real gas factor could be determined yet.
z-fact. err.	The real gas factor could not be calculated. At least one of the gas analysis values of Ho.n, CO <sub>2</sub> , H <sub>2</sub> , Rhon is outside the permissible range.
Vm-Alarm	No volume could be entered for the input used for the volume conversion.
Vm-Inp.Alarm	For the encoder connected on input 1, for 40 seconds (with external, current supply) or for the duration of two measurement cycles + 1 second (in the event of battery supply), no operating volume could be entered.
T Inp. error	The gas temperature cannot be measured due to a fault. Please contact the Elster customer service (see chapter 1.3 Customer service).
p Inp. error	The gas pressure cannot be measured due to a fault. Please contact the Elster customer service (see chapter 1.3 Customer service).
<b>b) Warnings:</b>	
Data restore.	<p>The batteries of the EK205 have failed temporarily. As a result of this, the time has not changed and no measurements have been logged. However, all data remain preserved.</p> <p>This message appears when old batteries are removed before connecting the new ones (see chapter 7.2, page 57).</p> <p>Procedure using the enSuite software:</p> <ul style="list-style-type: none"> <li>■ Set the time of the EK205.</li> <li>■ Delete the status register</li> </ul>
Outp.1 Error Outp.2 Error	<p>There should be more pulses being emitted from the specified output than are permitted under its configured settings.</p> <p>In order to eliminate the cause of the problem, you can use the enSuite software to either:</p> <ul style="list-style-type: none"> <li>■ reduce the cp value of the output</li> <li>■ or increase the output frequency</li> </ul> <p>In both cases, the change must be aligned with the device connected.</p>

Message	Description, process
I1-Warning	The encoder could not be read at the end of the measurement period. The flow recording at this point is invalid.
I2 Pulse cmp	During the pulse comparison between, for instance, input 1 and input 2, too large a deviation occurred.
W Warn Lim.	The performance displayed is outside the warning limit set. The warning limit can be changed with the enSuite software.
Vb Warn Lim.	The standard volume consumption value monitored (by default: hourly consumption) is outside the warning limit set. What value is monitored and the warning limits can, among other things, be changed with the enSuite software.
Qm Warn Lim.	The operating load (gas flow) is outside the warning limit set. The warning limit can be changed with the enSuite software.
T Warn Lim.	The gas temperature measured is outside the warning limit set. The warning limit can be changed with the enSuite software.
p Warn Lim.	The gas pressure measured is outside the warning limit set. The warning limit can be changed with the enSuite software.
z Warning	The sum of the gas analysis values with AGA-8 DC92 is larger or smaller than 100%. As such, no correct calculation of the real gas factor and the compressibility figure could be carried out.
Update error	Before the software update, an error was detected in the cached software image.
Softw. error	This message is used for factory diagnosis. Please contact the Elster customer service (see chapter 1.3 Customer service).
Sett. error	The programming of the device has generated an unusable combination of settings. Please contact the Elster customer service (see chapter 1.3 Customer service).
I2 Warn.sig.	If an input has been configured as a warning input, this message will be displayed if an active signal appears at the corresponding terminal (e.g. terminal DE2). The input configuration can be adjusted using the enSuite software.
Batt. low	The remaining battery power is less than six months. The batteries need to be changed soon.
<b>c) Remarks:</b>	
TA Warn Lim.	The ambient temperature measured is outside the warning limit set. The warning limit can be changed with the enSuite software.
Repair mode	The device is in revision mode

Message	Description, process
Clock n. set	The internal clock of the Volume Conversion Device has not been adjusted at the factory.
CDL full	The certification data logbook is full. Changing the parameters marked with "CDL" without a calibration lock is only possible if the content of the certification data logbook has been deleted.
U.Logb. full	The software update logbook is full. An update is only possible if the content of the software update logbook has been deleted.
online	Data is currently being transmitted via an interface (modem, optical interface or terminal interface). If this message is displayed, the "o" will flash in the "Status" field of the display (see chapter 6.3.4, page 45).
E2-HinwSig.	If an input has been configured as a signal input, this message will be displayed if an active signal appears at the corresponding terminal (e.g. terminal DE2). The input configuration can be adjusted using the enSuite parameter program.
Remote clock	The Volume Conversion Device has started to set its clock via RDT. It is deleted again as soon as this could be carried out successfully. If this report remains entered for more than a couple of minutes, the Automatic setting of the clock via RDT function is activated, but could not be executed. In this case, please contact the Elster customer service (see chapter 1.3 Customer service).
Cal.lock o.	The calibration lock is open. In normal operating conditions, the calibration lock should be closed so that unauthorized changes cannot be made. To close the calibration lock, please go to <i>Ctrl. → St.ES</i> and enter the value "0".
Admin.lock	The administrator lock is open.
Cust.lock o.	The customer lock is open.
Bat. operat.	The EK205 is in battery mode. This signal is primarily used to inform a remote data transmission system that the batteries run down more quickly during long periods of data transmission.
Dayl.Sav.Tim	The time displayed in volume convertor is daylight saving time. The switchover mode can be changed using the enSuite software.

Message	Description, process
Call Win.1 Call Win.2 Call Win.3 Call Win.4 Call Win.5 Call Win.6	The specified call pickup time window is active, i.e. the Volume Conversion Device will accept data transmission calls.
call time1 call time2	The specified call time is active, i.e. the EK205 shall make a data transmission call to the remote terminal.

## 9 Appendix

### 9.1 Replacement and accessory parts list



*Figures of the following replacement and accessory parts can be found in the catalogue of the manufacturer, which can be ordered at [www.elster-instromet.com](http://www.elster-instromet.com).*

#### 9.1.1 Fastening parts

Replacement / spare parts	Order no.
Mounting bracket for installation on meter with meter head type MI-2	73 021 952
Mounting kit EK205 to RABO flow direction horizontal	73 023 803
Mounting kit EK205 to RABO flow direction vertical	73 023 804
Mounting kit EK205 to S1, S1V, S1D, Enc. S1	73 023 805
Universal holding angle for pipe installation for various nominal widths	73 021 955
Universal holding angle for fastening with clamp to a pipe	73 018 057
EK205 wall installation help	73 023 360
Pipe installation help, incl. screws	04 300 365



*When ordering the universal holding angle with the clamps for pipe installation, state the pipe diameter.*

#### 9.1.2 Pressure connection

Replacement / spare parts	Order no.
Two-way ball cock Ermeto T-piece	03 152 266
Three-way ball cock complete	73 022 404
Flexible pressure hose Ø6 x 700 mm	73 017 659
Flexible pressure hose Ø6 x 400 mm	73 017 656
Test supports for Ermeto Minimes	03 008 298

### 9.1.3 Temperature sensor bags

Replacement / spare parts	Order no.
Temperature sensor bag EBL50 complete incl. welding nozzles M10 x 1	73 012 634
Temperature sensor bag EBL67 complete incl. welding nozzles M10 x 1	73 014 456
Temperature sensor bag EBL160 complete incl. welding nozzles G 3/4" and seal ring	73 012 100
Temperature sensor bag EBL250 complete incl. welding nozzles G 3/4" and seal ring	73 015 695
Adapter for older sensor bags (EBL45, 50 and 67) for fastening and sealing the 6 mm universal sensor.	73 019 951
Adapter for older sensor bags (EBL160 and 250) for fastening and sealing the 6 mm universal sensor.	73 019 950

### 9.1.4 Small parts and other

Replacement / spare parts	Order no.
Seal sleeve for pressure connection and temperature sensor	73 017 997
Connection cable for 2 NF pulse transducer, approx. 700 mm in length	73 017 093
Device: Battery module (rated voltage = 3.6 V, rated capacity = 16.5 Ah)	73 015 774
Outdoor plug / breather drain plug	73 020 775

### 9.1.5 Documentation

Replacement / spare parts	Order no.
German manual	73 023 158
English manual	73 023 159
Russian manual	73 023 160

## 9.2 Conformity declarations<sup>19</sup>



EU Declaration of Conformity No. **DEMZE1726**  
EU-Konformitätserklärung Nr.

**Honeywell**

Type, Model  
Typ, Ausführung

**EK205**

Manufacturer  
Hersteller

Elster GmbH, Postfach 1880, D - 55252 Mainz-Kastel; Steinern Straße 19-21

Product  
Produkt

Volume conversion device  
Zustands-Mengennumwerter

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:  
Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union:

<b>2014/32/EU</b> (MID)	<b>2014/30/EU</b> (EMC)	<b>2014/34/EU</b> (ATEX)	<b>2014/34/EU</b> (ATEX)	<b>2011/65/EU</b> (RoHS)
----------------------------	----------------------------	-----------------------------	-----------------------------	-----------------------------

Relevant harmonised standards used:

Einschlägige harmonisierte Normen, die zugrunde gelegt wurden:

EN 12405-1:2005+A2:2010, OIML D11 Edition 2004 (E)	EN 61326-1:2013	EN 60079-0:2012 + A11:2013 EN 60079-11:2012	IEC 60079-0:2011 Ed. 6 IEC 60079-11:2011 Ed. 6	EN 50581:2012
---	-----------------	---	---	---------------

Certificates and interventions by notified bodies:

Bescheinigungen und Maßnahmen durch notifizierte Stellen:

T10873	Not applicable <i>Entfällt</i>	LCIE 16 ATEX 3007 X	IECEx LCIE 16.0003X	Not applicable <i>Entfällt</i>
EC-type Examination <i>EG-Baumusterprüfung</i>		EU-type examination <i>EU-Baumusterprüfung</i>	Type examination <i>Baumusterprüfung</i>	
Notified Body 0122 NMI Certin B.V. Hugo de Grootplein 1 NL-3314 EG Dordrecht		Notified Body 0081 Bureau Veritas LCIE 33, avenue du Général Leclerc F-92260 Fontenay-aux-Roses		

This declaration of conformity is valid for products labelled accordingly:

Diese Konformitätserklärung gilt für entsprechend gekennzeichnete Produkte:

102 T10873		0044 II 1 G Ex ia IIC T4 Ga	0044 Ex ia IIC T4 Ga	
---------------	--	-----------------------------------	-------------------------	--

The production is subject to the following surveillance procedures:

Die Herstellung unterliegt folgenden Überwachungsverfahren:

Directive Module D Richtlinie Modul D	Directive Module C Richtlinie Modul C	Directive Annex IV+VII Richtlinie Anhang IV+VII	Directive Article 7 Richtlinie Artikel 7
Notified Body 0102 Physikalisch Technische Bundesanstalt (PTB) D-38116 Braunschweig		Notified Body 0044 TÜV NORD CERT GmbH D-30519 Hannover	

This declaration of conformity is issued under the sole responsibility of the manufacturer. If alterations are made to the product or it is modified, this declaration becomes void with immediate effect.

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller. Bei Umbau des Produkts oder Änderungen am Produkt verliert diese Erklärung mit sofortiger Wirkung ihre Gültigkeit.

Elster GmbH

Mainz-Kastel, 31.08.2017

Signed for and on behalf of  
Unterschrift für und im  
Namen von

Place and date of issue  
Ort und Datum der  
Ausstellung




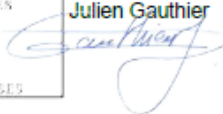
Piet Platschorre,  
Managing Director, General  
Manager PMC Europe

Jörg Kern,  
Sr R&D Manager  
Gas Metering

<sup>19</sup> IECEx is not available for all device types.

## 9.3 Design test certifications

### 9.3.1 ATEX - EC Type Examination Certificate

 <b>LCIE</b>	
<b>1 ATTESTATION D'EXAMEN CE DE TYPE</b> Appareil, système de protection ou composant destiné à être utilisé en atmosphères explosibles (Directive 94/9/CE)	 <b>EC TYPE EXAMINATION CERTIFICATE</b> Equipment, protective system or component intended for use in potentially explosive atmospheres (Directive 94/9/EC)
<b>3 Version : 00</b>	<b>LCIE 16 ATEX 3007 X</b>
<b>4 Appareil :</b> Convertisseur de volume	<b>Equipment:</b> Volume conversion device  <b>Type:</b> EK205
<b>5 Demandeur - Fabricant</b>	<b>Applicant - Manufacturer</b> <b>ELSTER GmbH</b>
<b>6 Adresse :</b>	<b>Address :</b> Steinern Straße 19-21 55252 Mainz-Kastel Allemagne
<b>7</b> Cet appareil, système de protection ou composant et ses variantes éventuelles acceptées sont décrits dans l'annexe de la présente attestation et dans les documents descriptifs cités en référence.	This equipment, protective system or component and any acceptable variation thereto are specified in the schedule to this certificate and the documents therein referred to.
<b>8</b> Le LCIE, organisme notifié sous la référence 0081 conformément à l'article 9 de la directive 94/9/CE du Parlement européen et du Conseil du 23 mars 1994, certifie que l'appareil, système de protection ou composant est conforme aux Exigences Essentielles de Sécurité et de Santé pour la conception et la construction d'appareil, système de protection ou composant destinés à être utilisés en atmosphères explosibles, données dans l'annexe II de la directive. Les résultats des vérifications et essais figurent dans le(s) rapport(s) confidentiel(s) :	LCIE, notified body number 0081 in accordance with article 9 of the Directive 94/9/EC of the European Parliament and the Council of 23 March 1994 certifies that this equipment, protective system or component has been found to comply with the essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Annex II to the Directive. The examination and test results are recorded in confidential report(s): N° 138685-679422
<b>9</b> Le respect des Exigences Essentielles de Sécurité et de Santé est assuré par la conformité à :	Compliance with the Essential Health and Safety Requirements has been assured by compliance with : EN 60079-0:2012 + A11:2013 EN 60079-11:2012
<b>10</b> Le signe X lorsqu'il est placé à la suite du numéro de l'attestation, indique que cet appareil est soumis aux conditions spéciales pour une utilisation sûre, mentionnées dans l'annexe de cette attestation.	If the sign X is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.
<b>11</b> Cette attestation d'examen CE de type concerne uniquement la conception et la construction de l'appareil, système de protection ou composant spécifié. Des exigences supplémentaires de la directive sont applicables pour la fabrication et la fourniture de l'appareil, système de protection ou composant. Ces dernières ne sont pas couvertes par la présente attestation.	This EC type examination certificate relates only to the design and construction of the specified equipment, protective system or component. Further requirements of the directive apply to the manufacturing process and supply of this equipment, protective system or component. These are not covered by this certificate.
<b>12</b> Le marquage de l'appareil, système de protection ou composant est mentionné dans l'annexe de cette attestation.	The marking of the equipment, protective system or component is specified in the schedule to this certificate.
Fontenay-aux-Roses, le 8 mars 2016	
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: left;">   <b>LABORATOIRE CENTRAL DES INDUSTRIES ELECTRIQUES</b>          S.A.S. au capital de 15 745 984 €          RCS Nanterre B 408 363 174          13 avenue du Général Leclerc          F - 92266 FONTENAY AUX ROSES       </div> <div style="text-align: right;"> <b>Responsable de Certification</b>  <b>Certification Officer</b>  <b>Julien Gauthier</b>   </div> </div>	
Seul le texte en français peut engager la responsabilité du LCIE. Ce document ne peut être reproduit que dans son intégralité, sans aucune modification. The LCIE's liability applies only on the French text. This document may only be reproduced in its entirety and without any change. CERT-ATEX-FORM 04 Rev. 01	
LCIE Laboratoire Central des Industries Electriques Une société de Bureau Veritas	33, av du Général Leclerc BP 8 92266 Fontenay-aux-Roses cedex France
Tél : +33 1 40 95 60 60 Fax : +33 1 40 95 86 56 contact@lcie.fr www.lcie.fr	Société par Actions Simplifiée au capital de 15 745 984 € RCS Nanterre B 408 363 174



LCIE

## 1 ATTESTATION D'EXAMEN CE DE TYPE

Appareil, système de protection ou composant  
destiné à être utilisé en atmosphères explosibles  
(Directive 94/9/CE)



## EC TYPE EXAMINATION CERTIFICATE

Equipment, protective system or component intended  
for use in potentially explosive atmospheres  
(Directive 94/9/EC)

3 Version : 00

LCIE 16 ATEX 3007 X

Issue : 00

13

## ANNEXE

## SCHEDULE

## 15 DESCRIPTION DE L'APPAREIL, DU SYSTEME DE PROTECTION OU DU COMPOSANT

Le convertisseur de volume EK215 est un appareil électronique qui convertit et affiche le volume mesuré d'un compteur de gaz.

L'appareil est principalement constitué

- d'une enveloppe plastique,
- d'un afficheur LCD avec un clavier,
- d'une carte mère équipée de deux entrées de sécurité intrinsèque (DE1 DE2), de deux sorties de sécurité intrinsèque (DA1, DA2) et d'une interface série de sécurité intrinsèque (Uext, T+/DTR, T-/TxD, R+/DCD, R-/RxD, GND, RING) pour la transmission des données,
- d'un capteur interne de pression et d'un capteur externe de température.

Paramètres spécifiques du ou des modes de protection concernés :

Les piles utilisées dans l'appareil :

- Elster N°73015774, tension nominale = 3,6 V, capacité nominale = 16,5 Ah,
- Elster N°73020663, tension nominale = 3,6 V, capacité nominale = 19 Ah,
- Elster N°73023226, tension nominale = 3,6 V, capacité nominale = 19 Ah.

## DESCRIPTION OF EQUIPMENT, PROTECTIVE SYSTEM OR COMPONENT

The EK205 volume conversion device is an electronic device that converts and displays the volume measured by a gas meter.

The equipment consists mainly of

- plastic housing,
- LCD display with keypads,
- CPU board equipped with two intrinsically safety inputs (DE1, DE2), two intrinsically safety outputs (DA1, DA2) and an intrinsically safety serial interface (Uext, T+/DTR, T-/TxD, R+/DCD, R-/RxD, GND, RING) for data communication,
- an internal pressure sensor and an external temperature sensor.

Specific parameters of the concerned protection mode:

Batteries used within the equipment:

- Elster N°73015774, rated voltage = 3.6 V, rated capacity = 16.5 Ah,
- Elster N°73020663, rated voltage = 3.6 V, rated capacity = 19 Ah,
- Elster N°73023226, rated voltage = 3.6 V, rated capacity = 19 Ah.

Borne / Terminal	Paramètres électriques / Electrical parameters				
Uext, DA1, DA2, DTR/T+, TXD/T-, RXD/R-, DCD/R+, RING	U <sub>i</sub> : 25 V	I <sub>i</sub> : 144 mA	P <sub>i</sub> : 500 mW	C <sub>i</sub> : 0	L <sub>i</sub> : 0
DE1	U <sub>o</sub> : 6.6 V	I <sub>o</sub> : 0.66 mA	P <sub>o</sub> : 1.1 mW	C <sub>o</sub> : 22 µF	L <sub>o</sub> : 81624 mH
DE2	U <sub>o</sub> : 6.6 V	I <sub>o</sub> : 7.34 mA	P <sub>o</sub> : 12.2 mW	C <sub>o</sub> : 22 µF	L <sub>o</sub> : 660 mH

## MARQUAGE

Le marquage de l'appareil du système de protection ou du composant doit comprendre :

Elster GmbH  
Adresse : ...  
Type : EK205  
N° de fabrication : ...  
Année de fabrication : ...

Ex II 1 G

Ex ia IIC T4 Ga

Tamb : -40°C à +60°C

LCIE 16 ATEX 3007 X

AVERTISSEMENT – DANGER POTENTIEL DE CHARGES

ELECTROSTATIQUES – VOIR INSTRUCTIONS

AVERTISSEMENT – UTILISER UNIQUEMENT LA PILE

ELSTER N°73015774, N°73020663 ou N°73023226

U<sub>i</sub>: ..., I<sub>i</sub>: ..., P<sub>i</sub>: ..., C<sub>i</sub>: ..., L<sub>i</sub>: ... (\*)

U<sub>o</sub>: ..., I<sub>o</sub>: ..., P<sub>o</sub>: ..., C<sub>o</sub>: ..., L<sub>o</sub>: ... (\*)

(\*) : complété par les paramètres de sécurité intrinsèque du paragraphe 15.

## MARKING

The marking of the equipment, protective system or component shall include the following :

Elster GmbH  
Address : ...  
Type : EK205  
Serial number : ...  
Year of construction : ...

Ex II 1 G

Ex ia IIC T4 Ga

Tamb: -40°C to +60°C

LCIE 16 ATEX 3007 X

WARNING – POTENTIAL ELECTROSTATIC CHARGING

HAZARD – SEE INSTRUCTIONS

WARNING – USE ONLY ELSTER N°73015774, N°73020663

or N°73023226 BATTERY

U<sub>i</sub>: ..., I<sub>i</sub>: ..., P<sub>i</sub>: ..., C<sub>i</sub>: ..., L<sub>i</sub>: ... (\*)

U<sub>o</sub>: ..., I<sub>o</sub>: ..., P<sub>o</sub>: ..., C<sub>o</sub>: ..., L<sub>o</sub>: ... (\*)

(\*) : completed by intrinsic safety parameters of the clause 15.

Seul le texte en français peut engager la responsabilité du LCIE. Ce document ne peut être reproduit que dans son intégralité, sans aucune modification.  
The LCIE's liability applies only on the French text. This document may only be reproduced in its entirety and without any change  
CERT-ATEX-FORM 04 Rev. 01



LCIE

**1 ATTESTATION D'EXAMEN CE DE TYPE**

Appareil, système de protection ou composant destiné à être utilisé en atmosphères explosibles (Directive 94/9/CE)

**EC TYPE EXAMINATION CERTIFICATE**

Equipment, protective system or component intended for use in potentially explosive atmospheres (Directive 94/9/EC)

3 Version : 00

LCIE 16 ATEX 3007 X

Issue : 00

13

**ANNEXE****SCHEDULE**

L'appareil doit également comporter le marquage normalement prévu par les normes de construction qui le concernent sous la responsabilité du fabricant.

The equipment shall also bear the usual marking required by the product standards applying to such equipment under the manufacturer responsibility.

**16 DOCUMENTS DESCRIPTIFS****DESCRIPTIVE DOCUMENTS**

N°	Rev.	Date	Pages	Rubriques / Items
EE0284	1	2016/01/29	149	25

**17 CONDITIONS SPECIALES POUR UNE UTILISATION SURE****SPECIAL CONDITIONS FOR SAFE USE**

- L'appareil ne doit être raccordé qu'à des matériels associés de sécurité intrinsèque certifiés. Cette association doit être compatible vis-à-vis de la sécurité intrinsèque.
- Le connecteur K3 ne doit pas être utilisé en zone explosible.
- Utiliser uniquement le capteur de température ou de pression défini dans le dossier technique du fabricant.

- The equipment shall only be connected to certified associated intrinsically safe equipment. This association must be compatible with regard to the intrinsic safety.
- The connector K3 shall not be used in hazardous area.
- Use only temperature or pressure sensor defined in the manufacturer's technical file.

**18 EXIGENCES ESSENTIELLES DE SECURITE ET DE SANTE****ESSENTIAL HEALTH AND SAFETY REQUIREMENTS**

Couvertes par les normes listées au point 9.

Covered by standards listed at 9.

**19 INFORMATIONS COMPLEMENTAIRES****ADDITIONAL INFORMATION**

Essais individuels

Routine tests

Néant

None

Conditions de certification

Conditions of certification

Les détenteurs d'attestations d'examen CE de type doivent également satisfaire les exigences de contrôle de production telles que définies à l'article 8 de la directive 94/9/CE.



Holders of EC type examination certificates are also required to comply with the production control requirements defined in article 8 of directive 94/9/EC.


**20 DETAILS DES MODIFICATIONS****DETAILS OF CHANGES**

Version 00 : Version initiale

Issue 00 : Initial issue

9.3.2 IECEx Certificate of Conformity<sup>20</sup>

 <h1>IECEx Certificate of Conformity</h1>	
<h2>INTERNATIONAL ELECTROTECHNICAL COMMISSION</h2> <h3>IEC Certification Scheme for Explosive Atmospheres</h3> <p>for rules and details of the IECEx Scheme visit <a href="http://www.iecex.com">www.iecex.com</a></p>	
Certificate No.:	IECEx LCIE 16.0003X <span style="float: right;">issue No.:0</span> <span style="float: right;">Certificate history:</span>
Status:	<b>Current</b>
Date of Issue:	<b>2016-03-08</b> <span style="float: right;">Page 1 of 3</span>
Applicant:	<b>Elster GmbH</b> Steinern Straße 19-21 55252 Mainz-Kastel Germany
Electrical Apparatus: Optional accessory:	<b>Volume conversion device - Type: EK205</b>
Type of Protection:	<b>Ex ia</b>
Marking:	<b>Ex ia IIC T4 Ga</b> (Refer to full marking in attachment)
Approved for issue on behalf of the IECEx Certification Body:	Julien GAUTHIER
Position:	Certification Officer
Signature: (for printed version)	
Date:	2016-03-08
<p>1. This certificate and schedule may only be reproduced in full.            2. This certificate is not transferable and remains the property of the issuing body.            3. The Status and authenticity of this certificate may be verified by visiting the <a href="http://www.iecex.com">Official IECEx Website</a>.</p>	
<p>Certificate issued by:  <b>Laboratoire Central des Industries Electriques (LCIE)</b>  <b>33 Avenue du General Leclerc</b>  <b>FR-92260 Fontenay-aux-Roses</b>  <b>France</b></p> <p>Documents relative to LCIE certification activities (Certificates, QARs, ExTRs) can be registered under the references "LCI" or "LCIE".</p>	
 <b>LCIE</b>	

 <h1>IECEx Certificate of Conformity</h1>	
Certificate No.:	IECEx LCIE 16.0003X
Date of Issue:	2016-03-08
	Issue No.: 0
	Page 2 of 3
Manufacturer:	<b>Elster GmbH</b> Steinern Straße 19-21 55252 Mainz-Kastel Germany
Additional Manufacturing location (s):	
<p>This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard list below and that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEx Quality system requirements. This certificate is granted subject to the conditions as set out in IECEx Scheme Rules, IECEx 02 and Operational Documents as amended.</p>	
<b>STANDARDS:</b> The electrical apparatus and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards:	
<b>IEC 60079-0 : 2011</b> Edition: 6.0	Explosive atmospheres - Part 0: General requirements
<b>IEC 60079-11 : 2011</b> Edition: 6.0	Explosive atmospheres - Part 11: Equipment protection by intrinsic safety "I"
<p><i>This Certificate <b>does not</b> indicate compliance with electrical safety and performance requirements other than those expressly included in the Standards listed above.</i></p>	
<b>TEST &amp; ASSESSMENT REPORTS:</b> A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in	
<u>Test Report:</u> <a href="#">FR/LCIE/ExTR16.0006/00</a>	
<u>Quality Assessment Report:</u> <a href="#">DE/TUN/QAR11.0003/02</a>	



# IECEx Certificate of Conformity

Certificate No.: IECEx LCIE 16.0003X

Date of Issue: 2016-03-08

Issue No.: 0

Page 3 of 3

## Schedule

### EQUIPMENT:

Equipment and systems covered by this certificate are as follows:

The EK205 volume conversion device is an electronic device that converts and displays the volume measured by a gas meter.

The equipment consists mainly of

- plastic housing,
- LCD display with keypads,
- CPU board equipped with two Intrinsically safety inputs (DE1, DE2), two intrinsically safety outputs (DA1, DA2) and an intrinsically safety serial interface (Uext, T+/DTR, T-/TxD, R+/DCD, R-/RxD, GND, RING) for data communication,
- an internal pressure sensor and an external temperature sensor.

### CONDITIONS OF CERTIFICATION: YES as shown below:

- The equipment shall only be connected to certified associated intrinsically safe equipment. This association must be compatible with regard to the intrinsic safety.
- The connector K3 shall not be used in hazardous area.
- Only temperature or pressure sensor defined in the manufacturer's technical file can be used.



## Annex 00 to Certificate IECEx LCIE 16.0003X issue 00



### 1. Marking:

Elster GmbH  
Address: ...  
Type: EK205  
Serial number: ...  
Year of construction: ...  
Ex ia IIC T4 Ga  
Tamb: -40°C to +60°C  
IECEx LCIE 16.0003X  
WARNING – POTENTIAL ELECTROSTATIC CHARGING HAZARD – SEE INSTRUCTIONS  
WARNING – USE ONLY ELSTER N°73015774, N°73020663 or N°73023226 BATTERY  
Ui: ..., Ii: ..., Pi: ..., Ci: ..., Li: ... (\*)  
Uo: ..., Io: ..., Po: ..., Co: ..., Lo: ... (\*)  
(\*): completed by intrinsic safety parameters in ratings.

### 2. Ratings:

Batteries used within the equipment:  
- Elster N°73015774, rated voltage = 3.6 V, rated capacity = 16.5 Ah.  
- Elster N°73020663, rated voltage = 3.6 V, rated capacity = 19 Ah.  
- Elster N°73023226, rated voltage = 3.6 V, rated capacity = 19 Ah.

Intrinsic safety parameters:

Terminal	Intrinsic safety parameters				
Uext, DA1, DA2, DTR/T+, TXD/T-, RXD/R-, DCD/R+, RING	Ui: 25 V	IiΣ: 144 mA	PiΣ: 500 mW	Ci: 0	Li: 0
DE1	Uo: 6.6 V	Io: 0.66 mA	Po: 1.1 mW	Co: 22 µF	Lo: 81624 mH
DE2	Uo: 6.6 V	Io: 7.34 mA	Po: 12.2 mW	Co: 22 µF	Lo: 660 mH