



## PARTS LIST

### LHE OIL LINE HEATER ELECTRIC TYPE

<u>Description</u>	<u>LHE 10C</u>	<u>LHE 15C</u>	<u>LHE 20C</u>	<u>LHE 25C</u>	<u>LHE 30C</u>
Heater Element	300906	300907	300908	300909	300910
Controller	300710	300710	300710	300710	300710
Flow Switch	301464	301464	301464	301464	301575
Load Fuse	300870	300872	300873	300881	300872
Primary Fuse	300878	300878	300878	300878	300875
Secondary Fuse	300885	300885	300885	300885	300867
Gasket, Grooved Coupling	302108	302108	302108	302108	302108

<u>Description</u>	<u>LHE 40C</u>	<u>LHE 50C</u>	<u>LHE 60C</u>	<u>LHE 70C</u>	<u>LHE 75C</u>
Heater Element	300911	300912	300913	300914	300915
Controller	300710	300710	300710	300710	300710
Flow Switch	301576	301576	300888	300888	300888
Load Fuse	300873	300881	300873	300887	300881
Primary Fuse	300875	300875	300875	300875	300875
Secondary Fuse	300867	300867	300867	300867	300867
Gasket, Grooved Coupling	302108	302108	302108	302108	302108

<u>Description</u>	<u>LHE 80C</u>	<u>LHE 90C</u>	<u>LHE 100C</u>	<u>LHE 110C</u>	<u>LHE 125C</u>
Heater Element	300916	300917	300918	300919	300920
Controller	300710	300710	300710	300710	300710
Flow Switch	300888	300888	300888	300888	300888
Load Fuse	300881	300887	300881	300887	300881
Primary Fuse	300875	300879	300879	300876	300876
Secondary Fuse	300867	300886	300886	300884	300884
Gasket, Grooved Coupling	302108	302108	302108	302108	302108

<u>Description</u>	<u>LHE 150C</u>	<u>LHE 175C</u>	<u>LHE 200C</u>	<u>LHE 225C</u>	<u>LHE 250C</u>
Heater Element	300922	300923	300925	300926	300927
Controller	300710	300710	300710	300710	300710
Flow Switch	300880	300880	300880	300880	300880
Load Fuse	300881	300881	300881	300881	300881
Primary Fuse	300876	300876	300877	300877	300877
Secondary Fuse	300884	300884	300869	300869	300869
Gasket, Grooved Coupling	302108	302108	302108	302108	302108

This page left intentionally blank.