


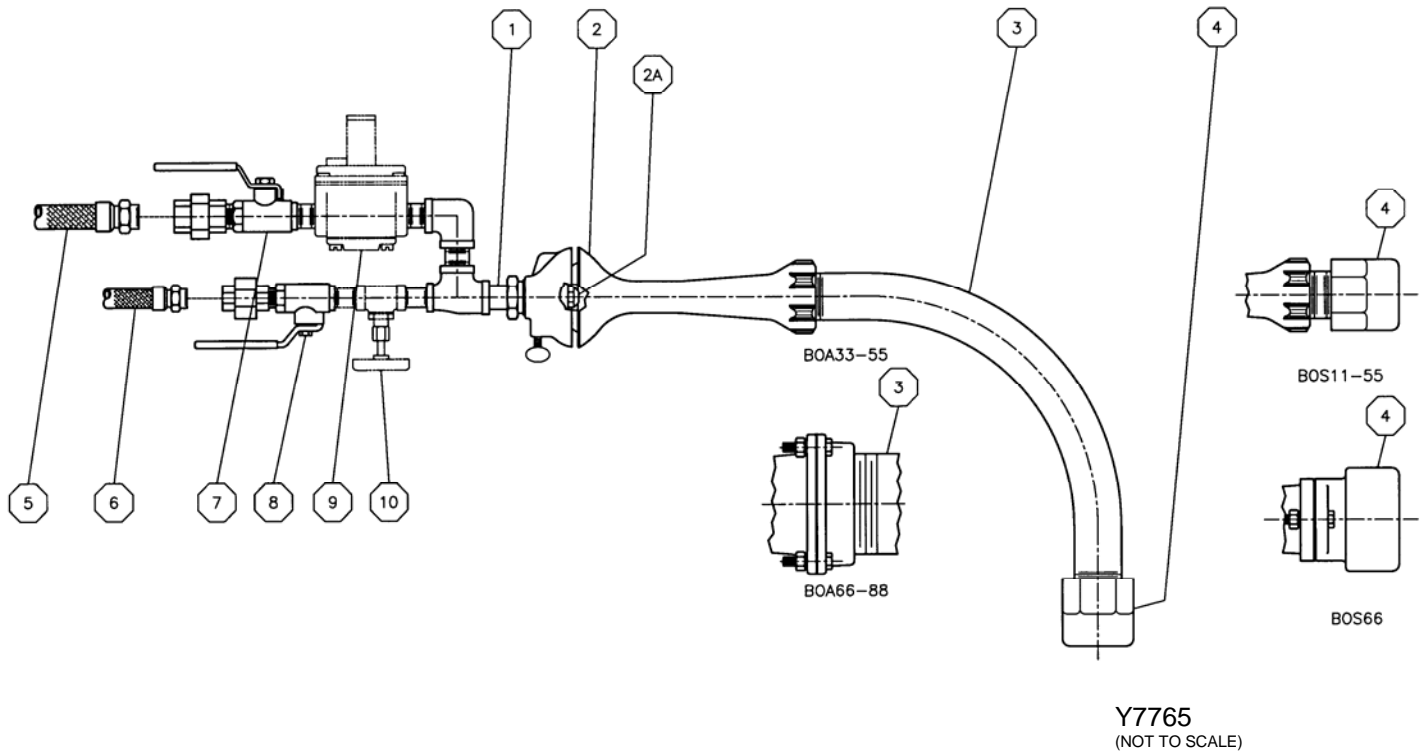

**BOOSTER GAS TORCH
BOA33-88 & BOS11-66**



Key

<u>No.</u>	<u>Description</u>	<u>BOA33</u>	<u>BOA44</u>	<u>BOA55</u>	<u>BOA66</u>	<u>BOA77</u>	<u>BOA88</u>
1	Jet Tube Assembly	15022	15023	15024	15025	15026	402249
2	Inspirator	Consult Hauck					
2A	Spud	2635x004	2635x004	2635x004	2636x003	2636x003	2637x006
3	Elbow, Long Sweep	2138	2370	2371	2372	6145	301120
4	Nozzle, Retain-A-Flame	1000A	9378	1002A	1003A	1004A	1005A
5	Hose Assembly, Gas	15218X012	15218X012	15216X012	15668X012	15669X012	Consult Hauck
6	Hose Assembly, Air	15217x012	15217x012	15218X012	15218X012	15216x012	Consult Hauck
7	Ball Valve, Gas	41694	41694	41607	41609	41610	41611
8	Ball Valve, Air	41693	41693	41694	41694	41607	41608
OPTIONAL							
9	Regulator, Gas	54971	54971	61598	61599	56612	57998
10	Needle Valve, Air	10970	10970	10971	10971	10972	10973

Key

<u>No.</u>	<u>Description</u>	<u>BOS11</u>	<u>BOS22</u>	<u>BOS33</u>	<u>BOS44</u>	<u>BOS55</u>	<u>BOS66</u>
1	Jet Tube Assembly	15020	15021	15022	15023	15024	15025
2	Inspirator	Consult Hauck					
2A	Spud	2209x003	2209x003	2635x004	2635x004	2635x004	2636x003
3	Elbow, Long Sweep	436	443	448	452	455	---
4	Nozzle, Retain-A-Flame	999A	999B	1000A	9378	1002A	4540A
5	Hose Assembly, Gas	15218X012	15218X012	15218X012	15218X012	15216X012	15668X012
6	Hose Assembly, Air	15217x012	15217x012	15217x012	15217x012	15218X012	15218X012
7	Ball Valve, Gas	41694	41694	41694	41694	41607	41609
8	Ball Valve, Air	41693	41693	41693	41693	41694	41694
OPTIONAL							
9	Regulator, Gas	54971	54971	54971	54971	61598	56612
10	Needle Valve, Air	10970	10970	10970	10970	10971	10971