

Vortometric Spares List

Contact Eclipse for Ordering Information

Product Model	Part Number	Description	
06V	10029536	Volute to Inner Housing Mounting Rope Gasket (1.52 m)	
	10035276	Oil Nozzle Base	
	10056482	Pilot Nozzle	
	10056500	Sparkrod	
	10056506	Pilot Assembly - NPT	
	10056512	Pilot Assembly - BSP	
	120051	Peepsight Assembly	
	13067	Peepsight Gasket	
	90039	Oil Lance or Rear Blanking Plate to Gas Lance Gasket	
	900497	Oil Nozzle Inlet Ring	
	90174	Oil Nozzle Spacer Kit	
	90242	Pilot to Burner Housing Gasket	
	90792	Oil Nozzle Screw	
	90845	Oil Nozzle Nose Cone	
	90849	Oil Nozzle Body	
	90851	Oil Nozzle Oil Tip	
	08V	10029536	Volute to Inner Housing Mounting Rope Gasket (2.13 m)
		10056482	Pilot Nozzle
		10056500	Sparkrod
10056506		Pilot Assembly - NPT	
10056512		Pilot Assembly - BSP	
120051		Peepsight Assembly	
13067		Peepsight Gasket	
900270		Oil Nozzle Inlet Ring	
90040		Oil Lance or Rear Blanking Plate to Gas Lance Gasket	
90155		Oil Nozzle Body	
90166		Oil Nozzle Retaining Ring	
90174		Oil Nozzle Spacer Kit	
90205		Oil Nozzle Oil Tip	
90216		Oil Nozzle Base	
90227		Oil Nozzle Nose Cone	
90242		Pilot to Burner Housing Gasket	
90785		Oil Nozzle Screw	
10V		10029536	Volute to Inner Housing Mounting Rope Gasket (2.44 m)
		10056483	Pilot Nozzle
	10056501	Sparkrod	
	10056507	Pilot Assembly - NPT	
	10056513	Pilot Assembly - BSP	
	120051	Peepsight Assembly	
	13067	Peepsight Gasket	
	900271	Oil Nozzle Inlet Ring	
	90040	Oil Lance or Rear Blanking Plate to Gas Lance Gasket	
	90156	Oil Nozzle Body	
90167	Oil Nozzle Retaining Ring		

10V (Continued)		
	90175	Oil Nozzle Spacer Kit
	90206	Oil Nozzle Oil Tip
	90217	Oil Nozzle Base
	90228	Oil Nozzle Nose Cone
	90242	Pilot to Burner Housing Gasket
	90785	Oil Nozzle Screw
12V	10029536	Volute to Inner Housing Mounting Rope Gasket (2.74 m)
	10056484	Pilot Nozzle
	10056502	Sparkrod
	10056508	Pilot Assembly - NPT
	10056514	Pilot Assembly - BSP
	120051	Peepsight Assembly
	13067	Peepsight Gasket
	900272	Oil Nozzle Inlet Ring
	90041	Oil Lance or Rear Blanking Plate to Gas Lance Gasket
	90157	Oil Nozzle Body
	90167	Oil Nozzle Retaining Ring
	90176	Oil Nozzle Spacer Kit
	90207	Oil Nozzle Oil Tip
	90218	Oil Nozzle Base
	90229	Oil Nozzle Nose Cone
	90242	Pilot to Burner Housing Gasket
	90791	Oil Nozzle Screw
14V	10029536	Volute to Inner Housing Mounting Rope Gasket (3.05 m)
	10056485	Pilot Nozzle
	10056503	Sparkrod
	10056509	Pilot Assembly - NPT
	10056515	Pilot Assembly - BSP
	120051	Peepsight Assembly
	13067	Peepsight Gasket
	900273	Oil Nozzle Inlet Ring
	90042	Oil Lance or Rear Blanking Plate to Gas Lance Gasket
	90158	Oil Nozzle Body
	90169	Oil Nozzle Retaining Ring
	90177	Oil Nozzle Spacer Kit
	90208	Oil Nozzle Oil Tip
	90219	Oil Nozzle Base
	90230	Oil Nozzle Nose Cone
	90242	Pilot to Burner Housing Gasket
	90791	Oil Nozzle Screw
16V	10029536	Volute to Inner Housing Mounting Rope Gasket (3.35 m)
	10056486	Pilot Nozzle
	10056504	Sparkrod
	10056510	Pilot Assembly - NPT
	10056516	Pilot Assembly - BSP
	120051	Peepsight Assembly
	13067	Peepsight Gasket
	900274	Oil Nozzle Inlet Ring
	90042	Oil Lance or Rear Blanking Plate to Gas Lance Gasket
	90159	Oil Nozzle Body
	90169	Oil Nozzle Retaining Ring
	90177	Oil Nozzle Spacer Kit
	90209	Oil Nozzle Oil Tip
	90220	Oil Nozzle Base

16V (Continued)		
	90231	Oil Nozzle Nose Cone
	90242	Pilot to Burner Housing Gasket
	90792	Oil Nozzle Screw
18V	10029536	Volute to Inner Housing Mounting Rope Gasket (3.96 m)
	10056487	Pilot Nozzle
	10056505	Sparkrod
	10056511	Pilot Assembly - NPT
	10056517	Pilot Assembly - BSP
	120051	Peepsight Assembly
	13067	Peepsight Gasket
	900275	Oil Nozzle Inlet Ring
	90043	Oil Lance or Rear Blanking Plate to Gas Lance Gasket
	90159	Oil Nozzle Body
	90170	Oil Nozzle Retaining Ring
	90179	Oil Nozzle Spacer Kit
	90210	Oil Nozzle Oil Tip
	90221	Oil Nozzle Base
	90232	Oil Nozzle Nose Cone
	90242	Pilot to Burner Housing Gasket
	90792	Oil Nozzle Screw
22V	10029536	Volute to Inner Housing Mounting Rope Gasket (4.57 m)
	10054554	Pilot Nozzle
	10054580	Sparkrod
	10054682	Pilot Assembly - NPT
	10054708	Pilot Assembly - BSP
	120051	Peepsight Assembly
	13067	Peepsight Gasket
	900276	Oil Nozzle Inlet Ring
	90044	Oil Lance or Rear Blanking Plate to Gas Lance Gasket
	90161	Oil Nozzle Body
	90171	Oil Nozzle Retaining Ring
	90179	Oil Nozzle Spacer Kit
	90211	Oil Nozzle Oil Tip
	90222	Oil Nozzle Base
	90233	Oil Nozzle Nose Cone
	90243	Pilot to Burner Housing Gasket
	90770	Oil Nozzle Screw
24V	10029536	Volute to Inner Housing Mounting Rope Gasket (4.88 m)
	10054555	Pilot Nozzle
	10054581	Sparkrod
	10054683	Pilot Assembly - NPT
	10054709	Pilot Assembly - BSP
	120051	Peepsight Assembly
	13067	Peepsight Gasket
	900277	Oil Nozzle Inlet Ring
	90044	Oil Lance or Rear Blanking Plate to Gas Lance Gasket
	90162	Oil Nozzle Body
	90172	Oil Nozzle Retaining Ring
	90182	Oil Nozzle Spacer Kit
	90212	Oil Nozzle Oil Tip
	90223	Oil Nozzle Base
	90234	Oil Nozzle Nose Cone
	90243	Pilot to Burner Housing Gasket
	90770	Oil Nozzle Screw

28V	10029536	Volute to Inner Housing Mounting Rope Gasket (5.49 m)	
	10054556	Pilot Nozzle	
	10054582	Sparkrod	
	10054684	Pilot Assembly - NPT	
	10054710	Pilot Assembly - BSP	
	120051	Peepsight Assembly	
	13067	Peepsight Gasket	
	900177	Oil Nozzle Body	
	900278	Oil Nozzle Inlet Ring	
	90045	Oil Lance or Rear Blanking Plate to Gas Lance Gasket	
	90172	Oil Nozzle Retaining Ring	
	90182	Oil Nozzle Spacer Kit	
	90213	Oil Nozzle Oil Tip	
	90224	Oil Nozzle Base	
	90235	Oil Nozzle Nose Cone	
	90243	Pilot to Burner Housing Gasket	
	90793	Oil Nozzle Screw	
	32V	10027022	Oil Nozzle Oil Tip
		10027023	Oil Nozzle Nose Cone
		10027082	Oil Nozzle Inlet Ring
10029536		Volute to Inner Housing Mounting Rope Gasket (6.40 m)	
10054556		Pilot Nozzle	
10054583		Sparkrod	
10054685		Pilot Assembly - NPT	
10054711		Pilot Assembly - BSP	
120051		Peepsight Assembly	
13067		Peepsight Gasket	
900177		Oil Nozzle Body	
90045		Oil Lance or Rear Blanking Plate to Gas Lance Gasket	
90172		Oil Nozzle Retaining Ring	
90182		Oil Nozzle Spacer Kit	
90224		Oil Nozzle Base	
90243	Pilot to Burner Housing Gasket		
90793	Oil Nozzle Screw		
36V	10027082	Oil Nozzle Inlet Ring	
	10029536	Volute to Inner Housing Mounting Rope Gasket (7.01 m)	
	10042528	Oil Nozzle Oil Tip	
	10043820	Oil Nozzle Body	
	10043835	Oil Nozzle Nose Cone	
	10054556	Pilot Nozzle	
	10054584	Sparkrod	
	10054686	Pilot Assembly - NPT	
	10054712	Pilot Assembly - BSP	
	120051	Peepsight Assembly	
	13067	Peepsight Gasket	
	90046	Oil Lance or Rear Blanking Plate to Gas Lance Gasket	
	90173	Oil Nozzle Retaining Ring	
	90182	Oil Nozzle Spacer Kit	
	90226	Oil Nozzle Base	
90243	Pilot to Burner Housing Gasket		
90793	Oil Nozzle Screw		