

## Operating instructions

### Actuator IC 50



## Contents

<b>Actuator IC 50</b>	<b>1</b>
<b>Contents</b>	<b>1</b>
<b>Safety</b>	<b>1</b>
<b>Checking the usage</b>	<b>2</b>
Intended use	2
Part designations	2
<b>Installation</b>	<b>2</b>
<b>Wiring</b>	<b>3</b>
IC 50	4
IC 50..E	5
Input signal	5
<b>Commissioning</b>	<b>6</b>
IC 50..E, continuous control: adapting the input signal to the adjustment angle	6
<b>Changing the direction of rotation</b>	<b>7</b>
<b>Accessories</b>	<b>7</b>
Cable gland with pressure equalization element	7
Adapter set IC 50 for BVA/BVG	7
<b>Maintenance</b>	<b>7</b>
<b>Assistance in the event of malfunction</b>	<b>7</b>
<b>Technical data</b>	<b>8</b>
Ambient conditions	8
Mechanical data	8
Electrical data	8
<b>Logistics</b>	<b>9</b>
<b>Certification</b>	<b>9</b>
<b>Contact</b>	<b>10</b>

## Safety

### Please read and keep in a safe place



Please read through these instructions carefully before installing or operating. Following the installation, pass the instructions on to the operator. This unit must be installed and commissioned in accordance with the regulations and standards in force. These instructions can also be found at [www.docuthek.com](http://www.docuthek.com).

### Explanation of symbols

■, **1**, **2**, **3**... = Action

▷ = Instruction

### Liability

We will not be held liable for damage resulting from non-observance of the instructions and non-compliant use.

### Safety instructions

Information that is relevant for safety is indicated in the instructions as follows:

### **DANGER**

Indicates potentially fatal situations.

### **WARNING**

Indicates possible danger to life and limb.

### **! CAUTION**

Indicates possible material damage.

All interventions may only be carried out by qualified gas technicians. Electrical interventions may only be carried out by qualified electricians.

### Conversion, spare parts

All technical changes are prohibited. Only use OEM spare parts.

## Changes to edition 01.18

The following chapters have been changed:

- Checking the usage
- Installation
- Accessories
- Certification

## Checking the usage

### Intended use

#### Actuator IC 50

It is designed for all applications that require precise, controlled rotary movement between 0° and 90°. If the voltage is disconnected, the actuator stops at the current position.

The combination of actuator IC 50 and butterfly valve DKR or BVA/BVG is designed to adjust volumes of hot air and flue gas on various appliances and flue gas lines.


This function is only guaranteed when used within the specified limits – see page 8 (Technical data). Any other use is considered as non-compliant.

For information on butterfly valves DKR and BVA/BVG, see operating instructions → [www.docuthek.com](http://www.docuthek.com) → Kromschroder → Products → 03 Valves and butterfly valves → Butterfly valve DKR or → Butterfly valves BVG, BVA ...

#### Type code

Code	Description
<b>IC 50</b>	Actuator for butterfly valves
	Running time [s]/Adjustment angle [°]:
<b>-03</b>	3.7/90
<b>-07</b>	7.5/90
<b>-15</b>	15/90
<b>-30</b>	30/90
<b>-60</b>	60/90
	Mains voltage:
<b>W</b>	230 V AC, 50/60 Hz
<b>Q</b>	120 V AC, 50/60 Hz
<b>H</b>	24 V AC, 50/60 Hz
	Torque:
<b>3</b>	3 Nm
<b>7</b>	7 Nm
<b>15</b>	15 Nm
<b>20</b>	20 Nm
<b>30</b>	30 Nm
<b>E</b>	Continuous control
<b>T</b>	Three-point step control
<b>R10</b>	Feedback potentiometer

#### Part designations

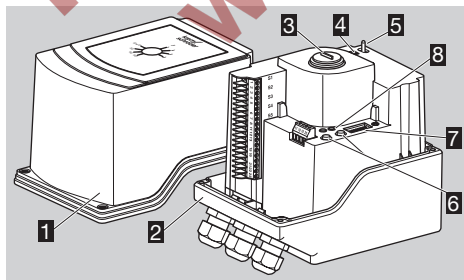


- 1** Housing cover
- 2** Cover
- 3** Angle-of-rotation indicator
- 4** Slide switch (S10/S12)
- 5** Toggle switch (S11)

IC 50..E:

- 6** min/max buttons
- 7** DIP switch
- 8** Red and blue LEDs

Mains voltage, electrical power rating, enclosure, ambient temperature, torque and installation position – see type label.

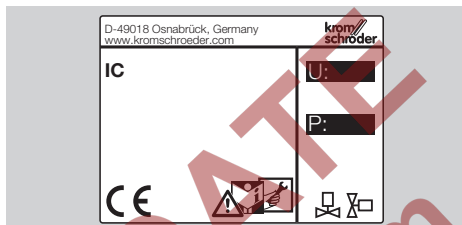

#### IC 50 on butterfly valve DKR

Pre-assembled combinations of actuator IC 50 and butterfly valve DKR are available as models IDR up to nominal size DN 300.

Type	IDR + attachment set
<b>IDR..GD</b>	IDR + attachment set with linkage (DKR..D)
<b>IDR..GDW</b>	IDR + attachment set with linkage and heat deflector (DKR..D)
<b>IDR..GA</b>	IDR + attachment set with linkage (DKR..A)
<b>IDR..GAW</b>	IDR + attachment set with linkage and heat deflector (DKR..A)
<b>IDR..AU</b>	IDR + attachment set for axial mounting (IC 50 above the pipe)
<b>IDR..AS</b>	IDR + attachment set for axial mounting (IC 50 to the side of the pipe)

#### IC 50 on butterfly valves BVA/BVG


For the assembly of BVA/BVG and IC 50, an adapter set can be supplied, see page 2 (Installation)

## Installation

### ! CAUTION

Please observe the following to ensure that the actuator is not damaged:

- Do not store or install the unit in the open air.
  - Dropping the device can cause permanent damage. In this event, replace the entire device and associated modules before use.
- ▷ Installation in the vertical or horizontal position, not upside down.

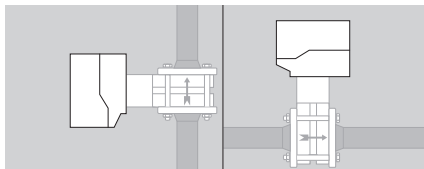

- ▷ Do not insulate the actuator with thermal insulation.


- ▷ Do not insulate the actuator with thermal insulation.

### Installing IC 50 onto butterfly valve DKR

- ▷ For the assembly of actuator with butterfly valve and attachment sets, and for installation in a pipe, see DKR operating instructions.


### Installing IC 50 onto butterfly valves BVA/BVG

An adapter set can be supplied for the assembly of BVA/BVG and IC 50.

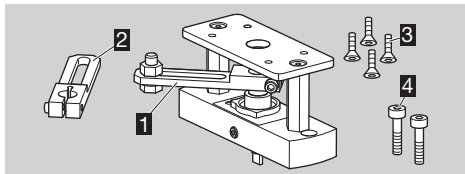

Order No.: 74926243.

- 1** Adapter set IC 50
  - 2** Top oblong-hole lever for actuator IC 50
  - 3** 4 x M5 countersunk screws
  - 4** 2 x M6 set screws
- ▷ The actuator can be turned through 180° to be installed on the adapter set.
  - ▷ Ensure that the connection cables are laid outside the levers' range of motion.

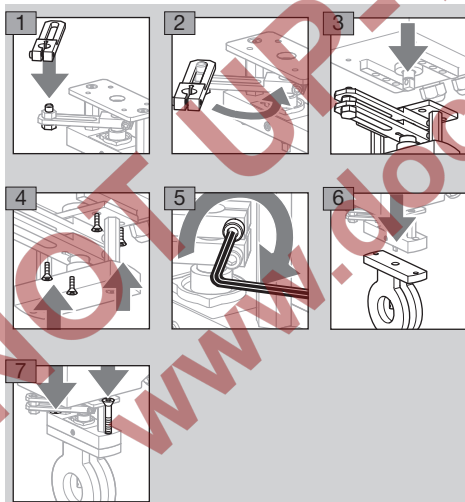

- ▷ For information on how to install the butterfly valve in the pipework, see the BVA/BVG operating instructions → [www.docuthek.com](http://www.docuthek.com).


## Wiring

### ⚠ WARNING


Electric shocks can be fatal!

- Before working on possible live components, ensure the unit is disconnected from the power supply.
- It must be possible to isolate the actuator from the power supply. Provide a double pole switch.
- ▷ Use temperature-resistant cables ( $\geq 90^\circ\text{C}$ ).
- ▷ Install supply and signal lines separately.
- ▷ Cables should be installed well away from high-voltage lines of other devices.
- ▷ Observe EMC Directive for installation of signal lines.
- ▷ Conductors which have not been connected (spare conductors) must be insulated at their ends.
- ▷ Use cables with wire end ferrules.
- ▷ Cable cross-section: max. 2.5 mm<sup>2</sup>.
- ▷ When operating two or more actuators in parallel, the three-point step controller (terminals 1 and 2) must be electrically isolated to avoid leakage currents. We recommend using relays.
- ▷ Interference suppression capacitors installed in the system must only be used in conjunction with a series resistor so as not to exceed the maximum current – see page 8 (Technical data).
- ▷ Running times are reduced by a factor of 0.83 at 60 Hz compared to 50 Hz.
- ▷ External devices can be activated or intermediate positions can be checked via three additional, floating, infinitely adjustable switches (cams S1, S2 and S5).
- ▷ The input signals for the actuator can be set via DIP switches. DIP switch positions that are not indicated can be freely selected, see connection diagram, page 5 (IC 50..E).

- 1** Disconnect the system from the electrical power supply.
  - 2** Shut off the gas supply.
- ▷ Before opening the unit, the fitter should ground himself.

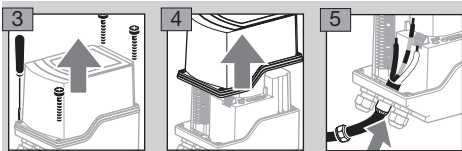

- 6** Wire as shown on the connection diagram, see IC 50, page 4 (Three-point step control), or IC 50..E, page 5 (Three-point step control), page 5 (Two-point step control), page 5 (Continuous control).

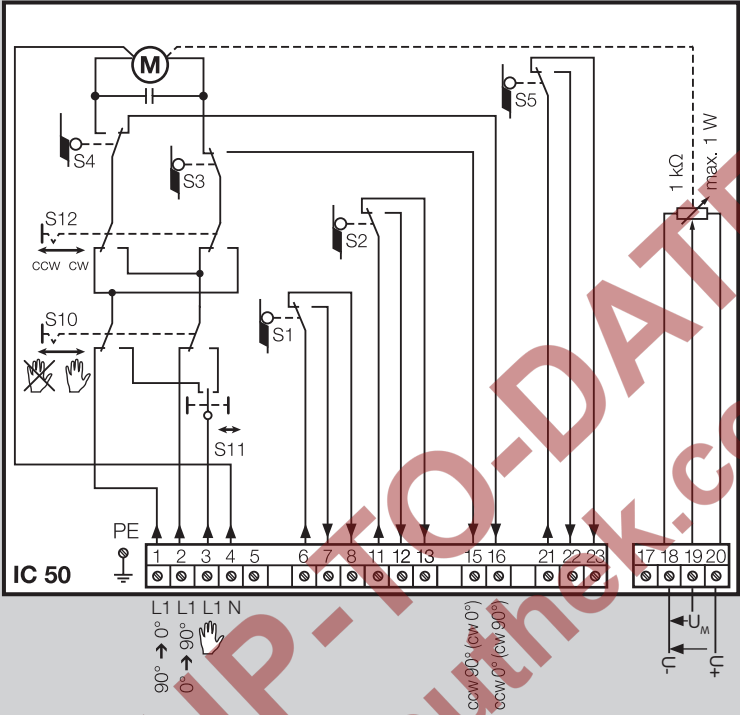


- 7 Set switch S10 to Automatic mode.
- ▷ Voltage is applied to terminals 3 and 4.



**Three-point step control**

- ▷ In the case of default setting "Closed":  
The butterfly valve opens when voltage is applied to terminal 2.  
The butterfly valve closes when voltage is applied to terminal 1.
- ▷ Terminals 6 to 13 must be operated with the same voltage potential.

**Feedback**

- ▷ A feedback potentiometer offers the option of monitoring the current position of the actuator.
- ▷ The potentiometer must be utilized as a voltage divider. The change in position of the potentiometer wiper (which corresponds to the actuator position) can be measured as a changing voltage between  $U$  and  $U_M$ .
- ▷ Other circuit layouts produce measurement results that are inaccurate and do not remain stable over a long period of time or are non-reproducible. They also reduce the service life of the feedback potentiometer.
- ▷ The available range depends on the adjustment of switching cams S3 and S4.

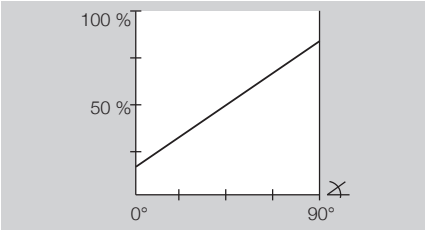

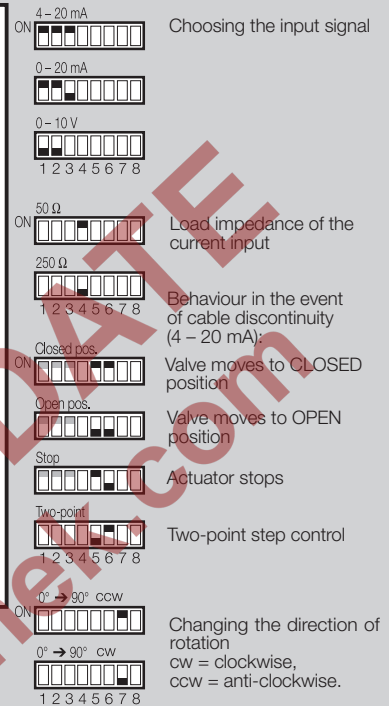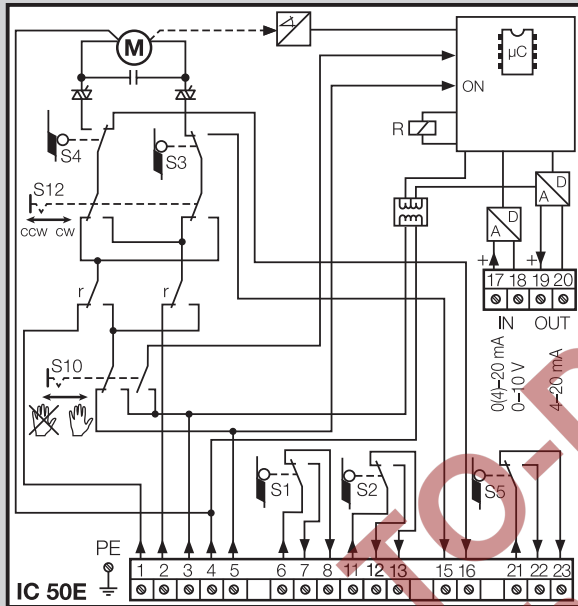

**7** Set switch S10 to Automatic mode.


- ▷ Voltage is applied to terminals 3 and 4.

**Three-point step control**

- ▷ No voltage at terminal 5: three-point step control.
- ▷ Voltage must be applied to terminals 3 and 4 continuously.
- ▷ The low-fire rate (CLOSED) and the high-fire rate (OPEN) are controlled via terminals 1 and 2.

**Two-point step control**

- 8** Connect bridge between terminals 1 and 3.

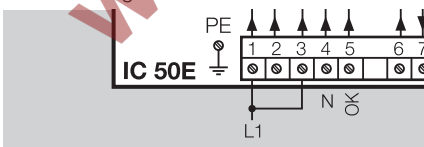

**9** Set the DIP switches to 2-point step control.

- ▷ When voltage is applied to terminal 5, the actuator opens. When no voltage is applied to terminal 5, the actuator closes.
- ▷ Terminals 17 and 18 for continuous control are not required in the case of 2-point control.

**Continuous control**

- ▷ Voltage at terminal 5: continuous control.
- ▷ The actuator reacts to the setpoint specification (0 (4) – 20 mA, 0 – 10 V) via terminals 17 and 18.
- ▷ The continuous signal corresponds to the adjustment angle to be approached (e.g. with a 0 to 20 mA signal, 10 mA correspond to a valve angle of 45°).

**Feedback**

- ▷ Terminals 19 and 20: the IC 50..E offers the option of monitoring the current position of the actuator via the continuous 4 – 20 mA output signal.

**Input signal**

- ▷ The positioning control hysteresis can be adjusted on a potentiometer to suppress fluctuations or interference in the input signal.
- ▷ The hysteresis can be increased accordingly by turning the potentiometer clockwise.



## Commissioning

- ▷ The maximum opening angle of the valve can be set using switching cam S3 and the minimum opening angle can be set using S4.
- ▷ Switching cams S1/S2/S5 can be optionally adjusted.


### WARNING

Risk of electric shock due to live components and cables.

### Manual mode facilitates setting

- ▷ The positions in the low-fire rate range can be precisely adjusted.

- 1 Set slide switch S10 to Manual mode. The blue LED lights up.

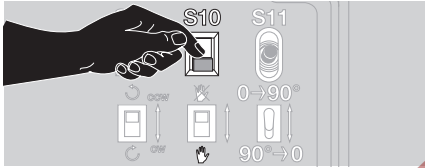

- 2 Voltage must be continuously applied to the actuator to allow the valve to open.

- 3 Press the toggle switch S11 upwards.



- ▷ The valve opens.

- 4 Press the toggle switch S11 downwards.

- ▷ The valve closes.

### CAUTION

Please observe the following to ensure that the actuator is not damaged:

- The function of switching cams S3/S4 changes if the direction of rotation ccw/cw (anti-clockwise/clockwise) is modified.

ccw (factory setting):

S3 = maximum angle, S4 = minimum angle.

cw:


S3 = minimum angle, S4 = maximum angle.

- ▷ The factory setting ccw is described here.

### Setting the maximum opening angle using switching cam S3 (ccw)

- ▷ Only adjust S3 between 40° and 90°.
- ▷ Feedback signal to terminal 15.
- ▷ S3 can only be accessed when the valve is in an open position.

- 1 Move the actuator to its maximum opening angle.

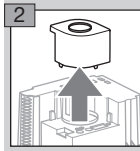

- 3 Adjust the trip point of cam S3 using a screwdriver.

- ▷ ccw:


Anti-clockwise = smaller opening angle.

Clockwise = greater opening angle.

cw:

Anti-clockwise = greater opening angle.

Clockwise = smaller opening angle.

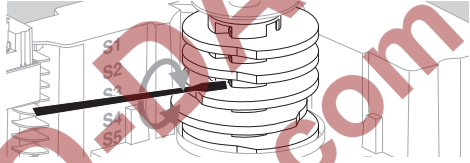

### CAUTION

Remove the screwdriver again before attempting to actuate the switching cams.

### Setting the minimum opening angle using switching cam S4 (ccw)

- ▷ Only adjust S4 between 0° and 30°.
- ▷ Feedback signal to terminal 16.

- 4 Move the actuator to its minimum opening angle.

- 5 Adjust the trip point of cam S4 using a screwdriver.

### Adjusting switching cams S1/S2/S5

- 6 Adjust the trip point of cams S1/S2/S5 using a screwdriver.

- ▷ The cams can be adjusted over the full angle of rotation (0 – 90°) of the actuator.


### IC 50..E, continuous control: adapting the input signal to the adjustment angle

- ▷ Maximum input signal  $\hat{=}$  maximum angle.
- ▷ Minimum input signal  $\hat{=}$  minimum angle.
- ▷ The IC 50..E is in Manual mode and the blue LED is lit.

### Automatic calibration

- ▷ The minimum and maximum opening angle corresponds to the setting of switching cams S3 and S4 in the case of automatic calibration.

- 1 Press the min and max buttons simultaneously (approx. 3 seconds) until the red (R) and blue (B) LEDs flash.

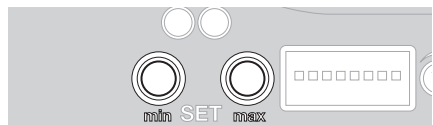

- ▷ Calibration is completed when the blue LED is lit continuously and the red LED goes out.

## Manual calibration

- ▷ The minimum and maximum opening angle can be anywhere within the range set using switching cams S3 and S4.
- 1** Move the valve to the required min. position by pressing toggle switch S11.
- 2** Press the min button (approx. 3 seconds) until the blue LED goes out briefly (approx. 0.5 seconds).
- 3** Move the valve to the required max. position by pressing toggle switch S11.
- 4** Press the max button (approx. 3 seconds) until the blue LED goes out briefly (approx. 0.5 seconds).


## Characteristic curve inversion

- ▷ The mA value for low fire has to be greater than the mA value for high fire.
- 1** Press the min or max button until the red LED lights up briefly (approx. 0.5 seconds) and hold it in for approx. 3 seconds more until the blue LED goes out briefly (approx. 0.5 seconds).

## Changing the direction of rotation

### IC 50


- ▷ The direction of rotation is defined using slide switch S12.

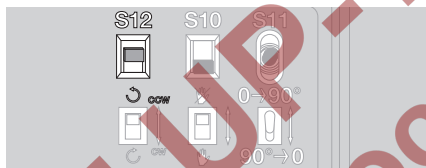

- ▷ cw (blue mark on the cover) = valve opens clockwise.
- ▷ ccw (white mark) = valve opens anti-clockwise.

### IC 50..E

- ▷ The direction of rotation is defined using DIP switch 7 and slide switch S12.

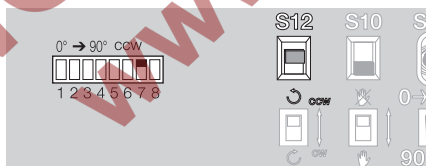

### IC 50, IC 50..E

- ▷ When changing the direction of rotation, these two switches must be set to the same position: cw (blue mark on the cover) and ccw (white mark).
- ▷ The function of switching cams S3/S4 changes if the direction of rotation (ccw/cw) is modified, see page 6 (Commissioning).

## Accessories


### Cable gland with pressure equalization element

- ▷ To avoid the formation of condensation, the cable gland with pressure equalization element can be used instead of the standard M20 cable gland. The diaphragm in the gland is designed to ventilate the device, without allowing water to enter.
- ▷ 1 x cable gland, Order No.: 74924686

### Wall mounting bracket

The wall mounting bracket is required if the actuator is to be attached to a wall.

Order No.: 74924791

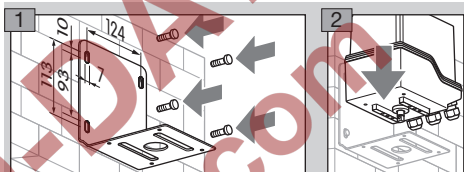


- ▷ Attachment sets for mounting to butterfly valve DKR, see Butterfly valve DKR operating instructions.

### Adapter set IC 50 for BVA/BVG

For the assembly of BVA/BVG and IC 50.

- ▷ Actuator IC 50 and the adapter set must be ordered separately and are supplied separately.

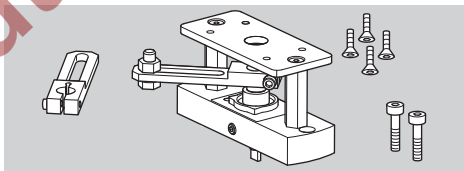

Order No.: 74926243

Assembly, see page 2 (Installation).

## Maintenance

Actuators IC 50 suffer little wear and require little servicing. We recommend a function check once a year.

## Assistance in the event of malfunction

### ⚠ WARNING

To avoid harm to persons and damage to the unit, please observe the following:

- Electric shocks can be fatal! Before working on possible live components, ensure the unit is disconnected from the power supply.
- Never remove the circuit board!
- Unauthorized repairs or incorrect electrical connections may cause the butterfly valve to open resulting in defects.



- ? **Fault**
- ! **Cause**
- **Remedy**

#### ? **The valve disc does not move.**

- ! The actuator is in Manual mode (IC 50..E: blue LED is lit).
- Set slide switch S10 to Automatic mode.
- ! No voltage at terminal 5.
- Check voltage at terminal 5.
- ! Motor coil or electronics defective as a result of excessive ambient temperature and/or excessive operating voltage.
- Check ambient temperature and/or operating voltage, see type label or page 8 (Technical data).
- ! Cam trip points maladjusted. S4 has been set to a wider angle than S3 (IC 50..E: red LED lights up, blue LED flashes 1x, if the unit has been automatically calibrated).
- Adjust the trip points, see page 6 (Commissioning). Then calibrate the IC 50..E.
- ! Electrical fault!
- Remember the minimum distance from ignition cables.

#### IC 50..E

- ! DIP switch position is incorrect.
- Set correct input signal using the DIP switches.
- ! The adjustment range has been set too small during manual calibration. The red LED flashes 3x.
- Increase adjustment range using min and max buttons, see page 6 (Commissioning).
- ! The input signal on the 4 – 20 mA setpoint input is < 3 mA. The red LED flashes 1x.
- Check input signal, remedy cable discontinuity.

#### ? **Valve disc moves constantly.**

- ! IC 50..E: current signal fluctuates. The red LED flashes 2x.
- Check control loop, if possible attenuate it.
- Increase the hysteresis using the potentiometer, see page 5 (Input signal).
- ! IC 50: 3-point step signal fluctuates.
- Check/Adjust the 3-point step controller.

#### ? **Is it not possible for the fault to be eliminated with the measures described above?**

- ! IC 50..E: internal error. The red LED lights up, the blue LED flashes 2x.
- Remove the unit and return it to the manufacturer for inspection.

## Technical data

### Ambient conditions

Icing, condensation and dew in and on the unit are not permitted.

Avoid direct sunlight or radiation from red-hot surfaces on the unit. Note the maximum medium and ambient temperatures!

Avoid corrosive influences, e.g. salty ambient air or SO<sub>2</sub>.

The unit may only be stored/installed in enclosed rooms/buildings.

The unit is suitable for a maximum installation height of 2000 m AMSL.

Ambient temperature:

-20 to +60°C.

Enclosure: IP 65.

Safety class: I.

This unit is not suitable for cleaning with a high-pressure cleaner and/or cleaning products.

### Mechanical data

Housing cover: PC + ABS.

Lower housing section: aluminium.

Medium temperature = ambient temperature.

### Electrical data

Mains voltage:

24 V AC, -15/+10%, 50/60 Hz,

120 V AC, -15/+10%, 50/60 Hz,

230 V AC, -15/+10%, 50/60 Hz.

Type	Running time [s/90°]		Torque [Nm] 50 Hz/60 Hz
	50 Hz	60 Hz	
IC 50-03	3.7	3.1	3
IC 50-07	7.5	6.25	7
IC 50-15	15	12.5	15
IC 50-30	30	25	20
IC 50-60	60	50	30

Screw terminals for cables up to 2.5 mm<sup>2</sup>.

Angle of rotation: 0 – 90°, adjustable.

Holding torque = torque.

Contact rating of the cam switches:

Voltage	Min. current (resistive load)	Max. current (resistive load)
24–230 V, 50/60 Hz	1 mA	2 A
24 V DC	1 mA	100 mA

Typical designed lifetime of the cam switches:

Switching current	Switching cycles	
	cos φ = 1	cos φ = 0.3
1 mA	1,000,000	–
22 mA <sup>1)</sup>	–	1,000,000
100 mA	1,000,000	–
2 A	100,000	–

<sup>1)</sup> Typical contactor application (230 V, 50/60 Hz, 22 mA, cos φ = 0.3)

Duty cycle: 100%.

Electrical connection:

Line entrance: 3 x M20 plastic cable glands.



Three-point step signal to terminals 1 and 2:  
minimum pulse duration: 100 ms,  
minimum pause between 2 pulses: 100 ms.

#### IC 50

Power consumption:

16 VA at 60 Hz, 13 VA at 50 Hz.

Resistance of the feedback potentiometer: 1 k $\Omega$ ,  
max. 1 W, max. wiper current: 0.1 A.

#### IC 50..E

Power consumption: terminals 1, 2 and 5: 16 VA  
at 60 Hz, 13 VA at 50 Hz,  
terminal 3: 19 VA at 60 Hz, 16 VA at 50 Hz,  
in total not exceeding: 19 VA at 60 Hz, 16 VA at  
50 Hz.

Feedback output: electrically isolated, max. 500  $\Omega$   
load impedance.

The output is always active when mains voltage is  
applied to terminal 3.

Input: electrically isolated,

4 (0) – 20 mA; load impedance switchable be-  
tween 50  $\Omega$  and 250  $\Omega$ ,

0 – 10 V: 100 k $\Omega$  input resistance.

### Logistics

#### Transport

Protect the unit from external forces (blows, shocks,  
vibration).

Transport temperature: -20 to +60°C.

Transport is subject to the ambient conditions de-  
scribed.

Report any transport damage on the unit or packag-  
ing without delay.

Check that the delivery is complete, see page 2  
(Part designations).

#### Storage

Storage temperature: -20 to +40°C.

Storage is subject to the ambient conditions de-  
scribed.

Storage time: 6 months in the original packaging  
before using for the first time. If stored for longer  
than this, the overall service life will be reduced by  
the corresponding amount of extra storage time.

#### Packaging

The packaging material is to be disposed of in ac-  
cordance with local regulations.

#### Disposal

Components are to be disposed of separately in  
accordance with local regulations.

### Certification

#### Declaration of conformity



We, the manufacturer, hereby declare that the prod-  
uct IC 50 complies with the essential requirements  
of the listed Directives and Standards.

Directives:

- 2014/35/EU
- 2014/30/EU

Standards:

- EN 60730:2011

The production is subject to the stated Quality  
Management System pursuant to DIN EN ISO 9001.  
Elster GmbH

Scan of the Declaration of conformity (D, GB) – see  
[www.docuthek.com](http://www.docuthek.com)

#### ANSI/CSA approved for 120 V AC



Canadian Standards Association –  
ANSI/UL 429 (7th Edition) and CSA C22.2 No. 139-13

#### Eurasian Customs Union



The product IC 50 meets the technical specifications  
of the Eurasian Customs Union.

NOT UP-TO-DATE  
www.docuthek.com

## Contact

If you have any technical questions, please contact your local branch office/agent. The addresses are available on the Internet or from Elster GmbH.

We reserve the right to make technical modifications in the interests of progress.

**Honeywell**

**krom/  
schroder**

Elster GmbH  
Strotheweg 1, D-49504 Lotte (Büren)

Tel. +49 541 1214-0

Fax +49 541 1214-370

hts.lotte@honeywell.com, www.kromschroeder.com